# **SOUND**STREAM

EN

# **AV Center**

# 2-DIN DVD Head Unit

2 DIN 10.6" Monitor Touch screen DVD/CD/MP3/MP4 USB/SD AM/FM Radio Support Apple CarPlay<sup>™</sup> Support Android Auto<sup>™</sup> Support Bluetooth





VRCPAA-106F

# Content

1. Appearance	3
2. Accessories and Installation	3
3. Wiring Connection	5
4. Front panel Description	7
5. Remote Control	8
6. Main Menu	9
7. Settings	9
8. Apple CarPlay & Android Auto	12
9. Radio	13
10. USB	14
11. Disc	15
12. BT Audio	.16
13. BT Phone	.17
14. Specification	-19
15. AV IN	.20
16. Camera	20
FCC Notes	21

#### Appearance

#### Main Menu



#### **Apple Carplay Menu**



#### Android Auto Menu



#### 2. Accessories & Installation

#### **Accessories & Installation**

Package contains the following accessories for installation and operation of the unit.

(1)	Mounting bracket	2	
(2)	Screw	8	ed en en en en en en en
(3)	Remote	1	
(4)	Trim Ring	1	
(5)	User Manual	1	
(6)	Warranty Card	1	
(7)	ISO Cable	2	
(8)	Harness cable	1	
(9)	USB cable	1	



- 1.Put the 2 brackets to the left and right side of the headunit.
- 2.Use screws to fix the brackets to the unit.
- 3.Install the body chassis into the dashboard via the 2 brackets.
- 4.Install the trim ring to the body chassis.
- 5.Install the faceplate.

**Note**: Please note this faceplate is not designed for detachable.

Disconnect / Connect the screen connector ONLY for installation in the vehicle.

#### Note:

1. Make sure the ignition is turned off, and disconnect the cable from the vehicle battery's negative (-) terminal.

You never want electricity running when you install this 2-DIN car receiver.

- 2. Before installation, disconnect the wire harness and the antenna.
- 3. Attach the brackets on the both sides of the car receiver with screws as shown as the installation drawing. Please buy from your dealer according to the drilling of holes size.

- 4. Consult with your nearest dealer if installation requires the drilling of holes or other modification of the vehicle.
- 5. Install the car receiver in the dashboard.
- 6. Connect the wire harness & antenna to the car receiver being carefully not to pinch any wires or cables.
- 7. Install the plastic outer trim ring onto the car receiver.
- 8. Reconnect the battery and run through all of the options on this car receiver to ensure that everything is working correctly.
- 9. Particulars will vary widely depending upon the kind of your car and the car you intend to install it in. Please choose the correct installation method according to the actual situation of your car. Always contact the car dealer or manufacturer if you have any questions.

# Faceplate Adjustable Position

#### 1.Vertical











#### 3. Swivel





**Un-Installation** 



- 1.Pull and release the panel lock system.
- 2.Pull out the faceplate.

**Note**: Please note this faceplate is not designed for detachable. Disconnect / Connect the screen connector ONLY for installation in the vehicle.

#### **Parking wire**

Note: The parking wire is connected with brake signal; for safety, the programs can be seen on the monitor after braking the car..

**Note**: To watch video the parking wire should be connected to brake signal.



Connecting the reversing line to taillight on the car



After connecting, when you start up the reverse gear, the unit will receive the picture from car rear view camera.

#### **Speaker Connection**

Connect the speakers according the following diagram, incorrect connections will damage the unit or your loudspeakers





Portion		Colour	Connection
	A3	Yellow	Battery B+
	A5	Orange	ILL B+
ISO A	A6	Blue	Antenna
	A7	Black	Ground
	A8	Red	ACC B+
	B2	Purple	Rear right speaker(+)
	B1	Purple / Black	Rear right speaker(-)
	B4	Grey	Front right speaker(+)
	B3	Grey / Black	Front right speaker(-)
150 b	B6	White	Front left speaker(+)
	B5	White / Black	Front left speaker(-)
	B8	Green	Rear left speaker(+)
	B7	Green / Black	Rear left speaker(-)
	C1	Blue / White	Amplifier control(B+)
	C3	Brown	Brake detect (Ground)
	C4	Pink	Back car control(Back camera B+)
8 Pin	C5	Pink / Black	Front camera(B+)
connector	C6	Black	Ground
	C7	Green	Steering Wheel 2
	C8	Grey	Steering Wheel 1

# 4. Front panel Description

#### **Front panel**



Press and hold to seek downward or upward.

[Disc/USB/SD Music] Press repeatedly to shift track previous or next for playback. Press and hold to active various fast rewind or fast forward speeds for playback. [Bluetooth Music] Press repeatedly to shift track previous or next for playback.

#### IR Sensor of Remote

IR remote control signal receiving window.

#### **Base:**



- Eject Button Press to eject the disc.
- AUX in jack Insert an extrenal device to this port in order to have sound output of that external device through the unit.
- Insert or eject the the disc.
- Micro SD slot Insert micro SD for playback.
- (5) Fast charging USB port Support fast charge USB port.
- (6) Reset button Press to default factory settings.
- USB port Connect USB for digital playback. Connect your iPhone for Apple CarPlay. Connect your Android Phone for Android Auto.

# **5.REMOTE CONTROL**



<b>1.</b> ധ/⊯	Press and hold to power it on or off. Short press this button mute the volume output when unit turn on. Long press is Power OFF function when unit turn on.
2.	[Bluetooth ]: Press it to make a call after inputted a phone number or answer an incoming call.
3.	[Bluetooth ]: Press it to reject a coming call or hangup while calling
<b>4.</b> CP/AA	Press it to switch to CarPlay or Android Auto mode; Head Unit will show string "invalid operation" when CP/AA is not pluged in Head Unit.
<b>5.</b> sxм	Press it to switch to SXM mode.
<b>6.</b> Radio	Press it to switch to RADIO mode.
<b>7.</b> DISC	Press it to switch to DVD mode.
<b>8.</b> bt	Press it to switch to Bluetooth mode.
<b>9.</b> USB	Press it to switch to USB mode.

	<b>10.</b> VOL+/-	Press it to increase or decrease the volume level.
^	11. /~/>/< >/<	It is UP /Down/Left/Right Arrow, use this button to select the menu item, the title track or to show next frame. [Radio] Press to seek upward/ downward.
	12. ENTER	Press it to confirm selection.
		[Radio] Press to select next/ previous preset radio station for broadcasting.
	13. ₩/₩	[DVD/USB/SD]: short press it to skip to the next track or previous functions. Long press to activate fast forward or fast review in a track. [Bluetooth Music]: short press it to skip to the next track or previous functions.
	<b>14.</b> EJECT	Press it to eject the disc.
2	15. ►II/■	[DVD/USB/SD]: short press it to switch play or pause.
9	<b>16.</b> EQ	Press it to Equalizer functions .
	<b>17.</b> 0-9 <b>*</b> #	[Radio ]: Select 1-6 desired preset station. [DVD/SUB/SD ]:Input 0-9 for selecting track number. [BT Phone ]:Input 0-9/*/# for
	<b>Note</b> :	<ul> <li>desired phone number.</li> <li>1. SXM just for include SiriusXM function models.</li> <li>2. * #</li></ul>

# 6.MAIN MENU

VRCPAA-106F is a 2-DIN car audio with following functions:

Apple CarPlay, Google Android Auto, Radio, Disc, Bluetooth, USB, SD. The Mode icon in gray means the corresponding function is not ready or proper device have not been connected. Touch the corresponding Mode icon to

enter playing mode.



#### Hidden soft button bar

A hidden pop up soft button bar is located at the bottom. Touch the icon  $\checkmark$  to shown the soft button bar. Touch the  $\checkmark$  to hidden.

$\checkmark$	Hidden the pop up soft button bar.
<b>^</b>	Pop up the soft button bar.
0	Setup, to enter the Settings Menu.
1	AUX IN, to enter the AUX and A/V IN interface Dimming, to change Daylight or
1	Night (If lighting detect is OFF in Display Setting)
*	Bluetooth pairing.
0	Front Camera, to enter the front camera.
łtł	EQ, to enter the Equalizer setting mode.
Q.	Turn off TFT display.
	TET enter black mode touch any

zone return to TFT on.

# 7.Settings

Touch the icon to enter the Setup menu. The Setup menu is included System Settings, Display Settings, Audio & EQ Settings, Disc & DVD Settings, Bluetooth Settings and Rear Camera Settings

A	Setting	* 00:01
Syste	em Settings	>
Disp	ay Settings	<b>&gt;</b>
Audi	o & EQ Settings	>
Disc	& DVD Settings	>
Blue	tooth Settings	>
Rear	Camera Setting	>

# **System Settings**

The System Settings allow the user to set up the Language, Date & Time, Key Beep, SWC, Factory Reset and About

Setting	.ııll 🖿 🔻 00:01
Language	>
Date & Time	>
Кеу Веер	ON
SWC	>
Factory Reset	>
About	>

#### Language

Ð	Setting	JIII 🔳 🕷 00:01
En	glish	
Es	pañol	
Fra	ançais	
De	utsch	
Po	rtuguês	

#### Date & Time:

To setting Time display format (12H or 24H), setting the date and time



#### **Beep Tone: On/Off** To set the touch button beep tune On or Off

# SWC:

To set the Steering Wheel Control



- Click Custom SWC to SWC study mode.
- Click SWC Default Switch to be "on" status.
  - Touch Save to confirm the setting Touch Reset to erase and reset the setting
- Short time press the key of the car radio SWC screen first and then long time press corresponding button of car steering wheel for learning and setting.
  - **Note**: Press the "Reset" before you start the setting.

#### **Factory Reset**

To reset the default factory setting.



#### About

To display the Unit Hardware and Firmware version.



#### **Display Settings:**

Below is the Display setting menu, user can select Lighting Detect, Daylight Dimming Level, Night Dimming Level, Illumination and Wallpaper.

Ð	Setting		.atl	₿ 🕸 00:02
Lightir	ng Detect		ON	
Daylig	ht Dimming Level	-	12	+
Night	Dimming Level	-	8	+
Illumir	nation			>
Wallpa	aper			>

Lighting Detect: On/Off Daylight Dimming Level: 8 – 15 Night Dimming Level: 0 – 8 **Illumination** 



Led Auto: On/Off .

Purple / Light Green

# Wallpaper

User can select the preset wallpaper or select the picture in USB driver as the wallpaper.



Touch the corresponding picture to select the prefer background.

Touch " + ", the head unit will search the USB photo file for wallpaper.

Select a picture and touch OK to add the wallpaper.

# Audio & EQ Settings:

Below shown is the Audio Setting Menu.

Octang	.ı ■ ≯ 00:0
nce/Fader	>
woofer Output	ON
woofer Filter	<b>—</b> 160Hz <b>+</b>
woofer Level	<b>-</b> 0 <b>+</b>
	>
D	OFF
	nce/Fader woofer Output woofer Filter woofer Level

#### **Balance/Fader:**

Touch the + or – of Balance/Fade to tune for the driver and passenger preference.

The value of Balance (Left 12 – Right 12) and Fade (Front 12 – Rear 12)

Touch Reset to set both Balance and Fade to zero.



Subwoofer Output : On/Off Subwoofer Filter : 50Hz/ 80Hz/ 120Hz/ 160Hz Subwoofer Level: -10 - +10

#### **10-Band Equalizer :**

10 band of EQ tuning, slide the EQ bar to tune each band frequency level according to user preference.

Touch Reset to set all Band to 0.



Or user can touch "<" or "> "at the bottom to select the following preset EQ: off/ Soft Rock/ Pop/ Electric/ Jazz/ EQ Custom.

# LOUD: On/Off

# Disc & DVD Settings :

Touch the Disc/DVD Settings from the menu to enter the Disc/DVD setting interface.

Ð	Setting	≉ 00:0
DVD	Menu Language	<ul> <li></li> </ul>
DVD /	Audio Language	>
DVD S	Subtitle Language	>

Touch to select the desired language.

# **Bluetooth Settings :**

Touch the Bluetooth Settings from the setting menu will be shown below.



#### Connection: On/Off (Select Bluetooth connection on or off) Pairing : (To start the pairing)



Device Name: shown the connected phone or device

Clear Records: (To clear the device list records)

# **Rear Camera Setting:**

Touch Rear View Camera in the Setting Menu to enter rear camera setting interface as follow:



#### **Rear Camera View:** Normal/Reverse **Parking Assist Guide:** On/Off **Parking Assist Guide Adjustment**

Touch ">"to enter Parking Assist Guide Adjustment interface to show the below screen:



Select the adjust position and Touch < / > / ∧ / ∨ to adjust. Touch OK to confirm. Touch Reset to resume the default Parking Assist Line.

# 8.1 Apple Carplay

Plug the iPhone (iPhone 5 or latter models, and IOS 7.1 or above) through the lightening cable to the USB port of the source unit. The iPhone will be shown the "CarPlay". The source unit will enter the CarPlay interface, the APP that support the CarPlay feature will be displayed on the source unit as shown below. Touch the corresponding

APP can operate, touch **O** button to go back the CarPlay interface.





#### Siri

In Apple Carplay mode, user can talk to SIRI to

control the Apple CarPlay functions. Press to start the SIRI function, or touch the button for 2 seconds or the HOME button of iPhone. Now you can talk to Siri for playing music, I am going....

Note: For SIRI function in the source unit, the Micriphone has to be connected.



icon to go back the main menu of source unit.

# **8.2 Android auto Operations**

Android Auto enables you to use functions of your Androd device convenient for driving. You can easily access route guidance, make calls, listen to music, etc. For details about Android Auto, visit https://www.android.com/auto or

https://support.google.com/androidauto.,

#### **Compatible Android devices**

You can use Android Auto with Android devices of Android version 5.0 or later.

**Note**: Android Auto may not be available on all devices and is not available in all countries or regions.

#### **Operations**:

1. Connect an Android device via USB terminal. To use the hands-free function, connect the Android device via Bluetooth. When an Android device compatible with Android Auto is connected to USB terminal, the device is connected iva Bluetooth automatically, and the Bluetooth smartphon currently conected is disconnected.

2. Unlock your Android device

3. To enter Android Auto mode, touch
Android Auto icon in the head unit screen.
You can perform the operations of the
Apps of the connected Android device.
4. In Android Auto model, touch "Home" to the head unit main menu.



# 9.Radio mode



#### **Radio mode**

Touch the Radio mode icon to enter Radio.



AM1 Touch AM can change between AM1=>AM2.

**PS** Touch for Prescan search, each scanned station will be play for 3 sec, touch again to stop.

- Touch to auto scan searching.
- **IT** Touch to enter EQ settings.
- Touch to switch LOCAL or DX.
- Touch to enter Radio settings.
- Short touch to Seek-, long touch for Tune-
- Short touch to Seek+, long touch for Tune+

Preset channel, Six preset buttons store and recall stations for each band. Touch and slide the preset channel can switch to next band FM1 / FM2 / FM3 or AM1 / AM2.

Slide the frequency to Seek +/- to next station

#### **Store a Station**

 Tune radio to desired station.
 Touch and hold the one of the preset station for more than 3 seconds, then the preset button will be highlighted on the screen, and the preset station will be stored.

# **Radio Setting**



**Radio Area:** select the region, American/ Europe/Eastern Europe/ Japan/Southeast Asia/Latin America/Asia / Australia.

**RDS**: Swithc ON or OFF.

- **TA**: Swithc ON or OFF.
- **AF**: Swithc ON or OFF.

**PTY**: Select PTY list.

Note: AF is only for Europe region.

# USB

Plug the USB, the USB icon will be colorful. Touch the USB icon to enter the USB playback mode. The source unit default the play the Audio in the USB device.





Press to go to the next folder.



Press to search Audio, Video or Picture files.



Press to go to the previous folder.



Short press to skip previous track, Long press to fast reverse.



Play or pause button.



Call

Short press to skip next track, Long press to fast forward. Press to select Repeat All > Repeat 1> Repeat folder> Repeat Off. Press to switch Random is On or Off.



Press to select Audio setting or set the prefer EQ of each band in custom mode.

# **File List browsing**

Support to play picture and video. If there is other multimedia files in the USB, touch to browse the folder and file list of the USB driver. Select the multimedia type

Touch		to browse the folder and file list
of the U	SB d	evice.

<b>A</b>	USB	1/20	≉ 00:02
$ \mathcal{D} $	Л	Track 01	
	月	Track 02	
	Л	Track 03	
<u>:</u>	D	Track 04	
5	Л	Track 05	
	Л	Track 06	
	Л	Track 07	



Select Picture files.

Select Movie or Video files.

Return to playing previous file.

#### **Picture Playback**



# 11.DISC



Touch to rotate the picture anticlockwise for 90 degree (for picture

Touch to rotate the picture clockwise C 90° for 90 degree (for picture playback)

Brightness	_	0	+
Contrast	-	0	+
Color	-	0	+

Touch to set the video Brightness, Contrast and Color (for video playback)

#### DISC **Inserting a Disc**

Insert a Disc to the slot of the head unit, pull the disc or press the Eject button to make the disc into the deck. Touch the Disc to perform Disc playing function.

# **Ejecting a Disc**

During disc playing or inside the deck, press the Eject button to stop playing the disc and eject the disc. After the disc is ejected and press the Eject button, the disc will go inside to the unit.



Note: The operation for buttons will be same as USB music playback.

# **DVD Playback**

The Video display can be watched only during the Car is Parked.

Parking wiring: High level (+12v or NC) is driving; low level (ground) is parking.



- Short press it to skip to the previous K track, long press it to fast reverse.
- Pause/Play button.
- Short press it to skip to the next track, long press it to fast forward.
- 8 Touch it to select subtitle language.
- Touch to this button and touch again on screen to pop-up the disc menu.
- P..> Touch it to show the tools bar.
- c 2/20 Touch it to select Chapter
- T 2/5 Touch it to select Title.
- Press it to select repeat All, Repeat One and Repeat Off
- •••• Touch it to select Sub-Title.
- Touch it to change the viewing angle.
- P.< Touch it to hide the tools bar.

# 12.Bluetooth Audio



#### **Direct search**

1. Touch the button "C 1/2" or "T3/3" to select a chapter or title directly using the on-screen display direct entry menu display. Enter the Direct Search menu,

2. Enter the chapter or Title Digital, touch  $\checkmark$  to confirm.

#### **Playing Multimedia Files in Disc**

Source unit is supporting the below disc types and Multimedia file format.

#### Note:

the operation for buttons will be same as USB playback.

#### **Bluetooth Music**

Touch the BT Music icon to enter Bluetooth Music playing mode. If the Bluetooth is connected, the music will be playing as following shown:



#### **Bluetooth Music Playback**





Press to go to the next folder.

Press to search Audio, Video or Picture files.



Press to go to the previous folder.



Short press to skip next track, Long press to fast forward.



Play or pause button.



کې all

+++

Short press to skip next track, Long press to fast forward. Press to select Repeat All > Repeat 1> Repeat folder>

Repeat Off. Press to switch Random is

>>dom or Off.

Press to select Audio setting or set the prefer EQ of each band in custom mode.

# **Bluetooth Connect**

If the Bluetooth is not connected, press Reconnect the paired phone or paring to pair the new device.



#### **Bluetooth Pairing**

Press Pairing the Pairing Mode screen will be shown as below:

BT Music	.ııll 🔲 🕸 00:06
Pairing Connect from Bluetooth devi	ce.
Cancel	

Turn On the Bluetooth of the Mobile phone/ Bluetooth device, you can see the VRCPAA-106F. Select the VRCPAA-106F for pairing and connection.

# **Bluetooth Phone**

Touch the Phone icon in main menu to go to Phone mode. After the mobile phone is connected with the source unit via Bluetooth (HFP), user can through the source unit to make a phone call. Please note it needs to connect the microphone for phone call.





- History, to show the call record, missed, received and dialed calls
   Contact, tap to show the phonebook connected phone.
- BT Setup, to set auto answer and microphone gain.
- Make a Call or Accept the Incoming Call.
  - Backspace, to clear the pervious dial digit.

# Make a Call

Touch the icon to enter below screen.
 Using the keypad, touch 0-9,\*,#, enter the phone number you wish to dial. If you input an incorrect number, touch the icon on the keypad to delete the incorrect number.
 Once the correct number appears on the screen, touch the icon. To go to dialing interface.

4. To end the call, touch the icon on the screen.



# **Receive an incoming call**

If the Phone is connected with the source unit via Bluetooth, when an incoming call, below screen will be shown:



# 13.Bluetooth Phone





Interchange between phone and source unit

**ON/OFF** the Microphone function

<u></u>

Display the Keypad.

# **Call History**

Touch the icon combined list.

to display the Call

A	Phone	VRCPAA-106F	<b>.</b> ∎ <b>*</b> 00:20
Keyboard	iPhone History		
E	C-	10000	
History	U <sup>+</sup>	10000	
	い	10000	
Contacts	じ	10000	
Setup	Ľ	10000	

Slide the bar at right side up and down to display a call logs up to 20 records.

# Contacts

Touch the icon to access the phone book of the connected mobile phone. To make a call from the phonebook, simply touch the contact name.

A	Phone VRCPAA-106F	.ıll 🔲 🕸 00:20
Keyboard	iPhone Contacts	
C	Ray	
History	Darcy Chu	
	Maxiery Chang	
Contacts	🚔 Andy Qiu	-0
Ó	🔒 Chang Chang	
Setup	1 Rex Liang	

# **BT Setup**



Auto Answer	On /OFF, incoming call
	auto answer.
MIC Gain,	Low / Middle / High

#### General

Power Supply	DC10~16Volts
Grounding System	Negative Ground
Current Drain	
Max Power Output	
RMS Power Output	
Speaker Impedance	
Frequency Response	
Operating Temperature	<b>-20~+60</b> ℃
Dimensions	255mm(W)x250mm(D)x175.1mm(H)

# **TFT Display**

TFT Screen size	10.6inch
Resolution	1024x600 pixels

#### **FM Radio**

Frequency Range (USA)	87.5~107.9MHz
Frequency Range (Europe)	87.5~108MHz
Usable Sensitivity (S/N=30dB)	≤15dB
S/N Ratio	≥55dB
Stereo Separation	≥30dB

#### AM

Frequency Range (USA)	530~1710KHz
Frequency Range (Europe)	522~1620KHz
Usable Sensitivity(S/N=20dB)	≤40dB
S/N Ratio	≥45dB

#### DVD/CD

S/N Ratio	≥60dB
Channel Separation	>50dB

# Line-Out/Subwoofer Output

Maximum Output Level (10K ohms load)	≥4Vrms
Subwoofer Time Align	0~18ms

# **AV IN**

The Audio/Video source with RCA cable can through the source unit to play the Audio/ Video. Plug the RCA to the corresponding A/Vsocket.

Touch the A to pop up the function bars

and touch **view** the playing Audio/Video.



The Audi and Video will via the RCA cable to the source unit.



If there is no Video signal the below screen will be shown:



# Camera

There is a RCA socket for the Front camera video signal to display on the Head unit. The Reverse wire in High level (+12V) is reverse; low level (ground or NC) is normal Touch the  $\checkmark$  to pop up the function bars

and touch sto view the playing Front camera.



# **Rear Camera Setting:**

Touch Rear View Camera in the Setting Menu to enter rear camera setting interface as follow:

Ð	Setting		∦ 00:03
Rear (	Camera View	Normal	
Parkin	g Assist Guide	OFF	
Parkin	g Assist Guide Adjust		>
	► Rear ( Parkin	Setting       Rear Camera View       Parking Assist Guide       Parking Assist Guide Adjust	Setting       Rear Camera View     Normal       Parking Assist Guide     OFF       Parking Assist Guide Adjust     Vertical

#### **Rear Camera View:** Normal/Reverse **Parking Assist Guide:** On/Off **Parking Assist Guide Adjustment**

Touch ">to enter Parking Assist Guide Adjustment interface to show the below screen:



Select the adjust position and Touch < / > / ^/ v to adjust. Touch Reset to resume the default Parking Assist Line

# **FCC** Notes

**WARNING!** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/ TV technician for help.