


98118

AMPLIFIER ACCESSORIES

JL AUDIO®

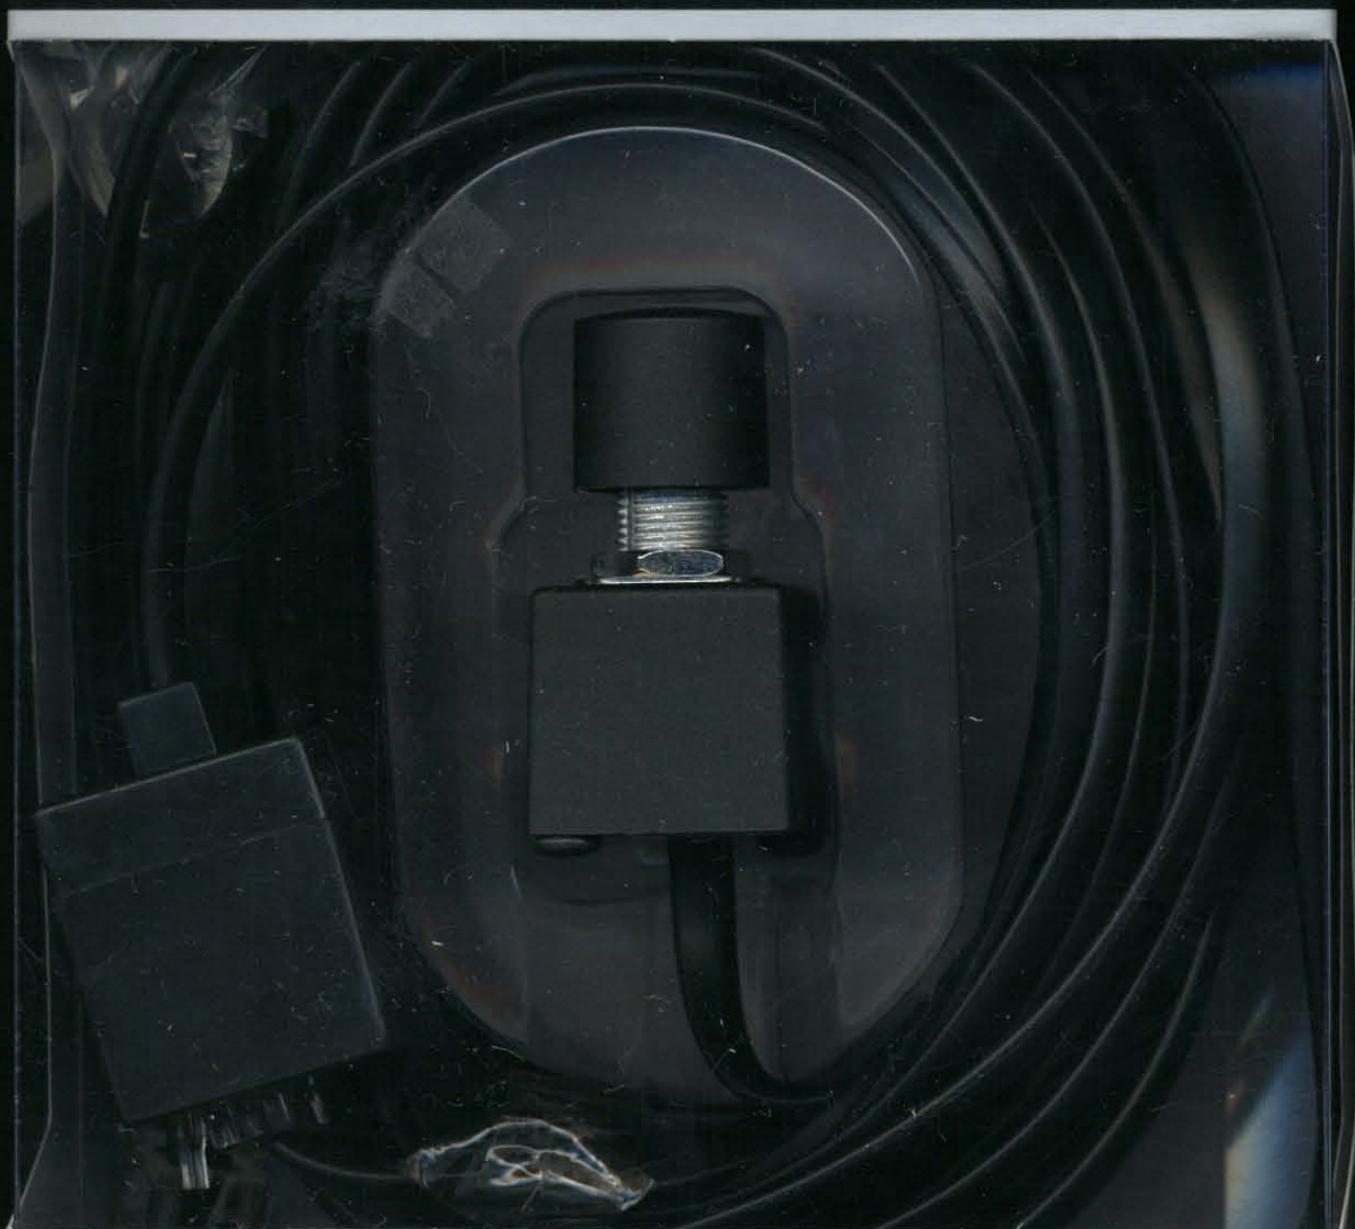

HD-RLC

REMOTE LEVEL CONTROL FOR JL AUDIO HD / MHD AMPLIFIER

AMPLIFIER ACCESSORIES

HD-RLC

REMOTE LEVEL CONTROL FOR JL AUDIO HD / MHD AMPLIFIER

This product will only work with HD and MHD Amplifiers.

Installation Procedure:

1. Find an appropriate location to mount the control assembly on the dash or console of the vehicle. You will need access to the rear of the mounting panel for installation. The area will require the following minimum and maximum dimensions:
Area Behind Panel: 1 1/8" square x 3/4" deep (28mm x 28mm x 19 mm)
Mounting Panel Thickness: 1/8 inch (3.2mm) maximum

2. Drill a 3/8" (9mm) hole in the center of the mounting area.
3. Remove the knob from the HD-RLC-1's shaft. Do NOT remove the nut and washer.
4. Insert the HD-RLC's shaft through the drilled hole from behind the panel and place the knob on the shaft from the front, pushing it as far as it will go.
5. If the knob does not fit flush to the panel, remove the HD-RLC and use one of the extra washers or nuts or both to space the assembly back from the panel until the knob is flush. Once the appropriate shaft-depth has been achieved, remove the knob.


6. Place the remaining nut and washer on the front of the shaft and tighten with a 12 mm deep-well socket or wrench. Take care not to over-tighten this nut, especially when attaching the HD-RLC to a plastic surface.

7. Place the knob on the shaft so that the pointer is at 7:00 with the control turned fully counter-clockwise.

8. Route the control cable to the amplifier and connect one end to the jack labeled "Remote Level Control". Connect the other end to the female jack on the HD-RLC controller.

9. Refer to the Amplifier Owner's Manual for an explanation of control operation.

Note: Should a replacement control cable be needed, you can use any standard telephone-to-wall-jack cable with six position terminations. The cable itself can be 2-conductor, 4-conductor or 6 conductor.

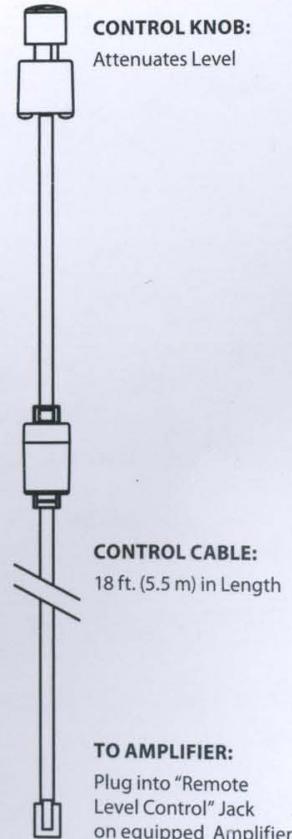

AMPLIFIER ACCESSORIES



Compatible with:
HD and MHD Series Amplifiers
(Not compatible with JL Audio Amplifiers
featuring "Remote Bass Port".)

The HD-RLC remotely attenuates the level of JL Audio
Amplifiers equipped with a "Remote Level Control"
connector. Can be used as a true subwoofer level
control or as a master volume control.

Low-Profile Design for ease in custom installation

HD-RLC

REMOTE LEVEL CONTROL FOR JL AUDIO HD / MHD AMPLIFIER

98118



© 2008 JL Audio, Inc.