

DMX1058XR DMX1038S DAX1050XR DAX800XR DAX8000S

MONITOR WITH RECEIVER

Startup Guide

MONITEUR AVEC RÉCEPTEUR

Guide de démarrage

MONITOR CON RECEPTOR

Guía de inicio

JVCKENWOOD Corporation

- The user manual for these products can be found on the following website.
<https://www.kenwood.com/cs/ce/im_edition/im409/>
- Le manuel d'utilisation de ces produits est disponible sur le site Web suivant.
<https://www.kenwood.com/cs/ce/im_edition/im409/>
- Encontrará el manual del usuario de estos productos en el siguiente sitio web.
<https://www.kenwood.com/cs/ce/im_edition/im409/>

Take the time to read through this instruction manual.

Familiarity with installation and operation procedures will help you obtain the best performance from your new receiver.

For your records

Record the serial number, found on the top of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your KENWOOD dealer for information or service on the product.

Model DMX1058XR / DMX1038S / DAX1050XR / DAX800XR / DAX8000S Serial number _____

US Residence Only

Register Online

Register your KENWOOD product at www.kenwood.com/usa/

Important Notice on Software

■ Software License on This Product

The software embedded in this product comprises a number of independent software components, each of which is copyrighted by JVCKENWOOD Corporation or by a third party. This product uses software components that are based on an End-User License Agreement (hereinafter called "EULA") stipulated by JVCKENWOOD Corporation and by third parties. The EULA dictates the availability of the source codes of free-software components as a prerequisite to distributing them in executable form under the terms of the GNU General Public License or the Lesser General Public License (hereinafter called "GPL/LGPL"). To get information about the software components that are subject to the terms of the GPL/LGPL, please visit the following Website:

Website URL <https://www2.jvckenwood.com/gpl/>
Queries concerning the contents of the source code or the like will not be accepted.

Please note that software components based on a EULA that is not subject to the terms of the GPL/LGPL or those that have been developed or created by JVCKENWOOD Corporation will be excluded from the scope of source code disclosure.

Because licenses to use software components distributed under the GPL/LGPL are offered to the customers for free of charge, no warranty is granted to the customers, whether explicitly or implicitly, to the extent of the applicable laws. Unless otherwise stipulated by the applicable laws or agreed upon in writing, the copyright holders or those who are entitled to modify and redistribute the software components are not held responsible for any and all damages resulting from their use or from inability to use them. For more information about the terms of use of the software components, required items of compliance and so on, please refer to the GPL/LGPL.

Customers wishing themselves to use a software component that is subject to the GPL/LGPL embedded in this product are encouraged to read the terms of the corresponding license before use. Because each individual license is prescribed by a third party other than JVCKENWOOD Corporation, the original (English) of the license is presented.

EULA

■ Software License Agreement

JVCKENWOOD Corporation (hereinafter called "Licensor") holds either the copyright to the embedded software or the right to sublicense it. This agreement establishes the conditions under which the customer uses this "Licensed Software." The customer shall agree to the terms of this license agreement before proceeding to use Licensed Software.

This agreement is deemed to have taken effect when the customer (hereinafter called "User") has used a product implementation of Licensed Software.

The Licensed Software may contain software Licensor has been licensed to use by third parties directly or indirectly. Some third parties may have terms of use prescribed for their customers, apart from this Software License Agreement. This agreement does not apply to such software. Be sure to consult "Important Notice on Software" as presented separately.

Article 1 (General)

Licensor grants to User a non-exclusive, non-assignable right of use Licensed Software within the country where the User purchases the Product (hereinafter the "Country") (except for the exception provided for in Paragraph 1, Article 3).

Article 2 (Right of Use)

1. The right of use granted under this agreement is the right to use Licensed Software in this product.
2. User may not duplicate, copy, modify, add to, translate or otherwise alter, or loan licensed Software and the associated literature in whole or in part.
3. Use of Licensed Software is limited to a private extent, and Licensed Software may not be distributed, licensed or sublicensed for any purposes whatsoever, including commercial use.
4. User shall use Licensed Software as per the instruction manual or instructions given in the help file and may not use or duplicate data in violations of the regulations of the Copyright Law or other governing laws by using Licensed Software in whole or in part.

Article 3 (Terms of License)

1. In assigning this product, User may not retain the original copy of the embedded Licensed Software (including associated literature, updates and upgrades) and any duplicates and associated literature with regard to the license to use Licensed Software. User may transfer Licensed Software only to the condition of binding the assignee to abide by the terms of this Software License Agreement.
2. User may not reverse-engineer, disassemble, decompile or otherwise analyze the source code of Licensed Software.

Article 4 (Rights to Licensed Software)

All rights to Licensed Software and the associated literature, including copyrights, shall reside with Licensor or

the original right holder who has granted the Right of Use and right to sublicense to Licensor (hereinafter referred to as "Original Right Holder"), and User does not have any rights other than Right of Use granted hereunder with regard to Licensed Software and the associated literature.

Article 5 (Exemption Granted to Licensor)

1. Licensor and Original Right Holder do not assume any responsibility for damages caused to User or third parties resulting from the exercise by User of the license granted hereunder, unless otherwise provided by any law to the contrary.
2. Licensor does not warrant Licensed Software to be merchantable, compatible and fit for specific purposes.

Article 6 (Responsibility for Third Parties)

If disputes over the infringement of third parties' intellectual property rights, such as copyrights and patent rights, arise out of the use of Licensed Software by User, User shall resolve these disputes at User's own expenses while keep Licensor and Original Right Holder harmless.

Article 7 (Secrecy Obligation)

User shall keep confidential Licensed Software provided hereunder, information contained in the associated literature or the like and those provisions of this agreement not yet in public knowledge and may not disclose or leak these to third parties without prior written consent from Licensor.

Article 8 (Cancellation of the Agreement)

Licensor reserves the right to cancel this agreement forthwith and claim compensation from User for the damages caused by such cancellation when User:

- (1) Breaches any of the provisions of this agreement, or
- (2) Has received a petition for seizure, provisional seizure, provisional disposition or any other kind of compulsory execution.

Article 9 (Destruction of Licensed Software)

If this agreement is terminated under the provision of the foregoing paragraph, User shall destroy Licensed Software, along with all associated literature and its duplicates, within two (2) weeks from the date of termination.

Article 10 (Copyright Protection)

1. Copyrights and all other intellectual property rights relating to Licensed Software shall reside with Licensor and Original Right Holder and in no circumstances with User.
2. User shall abide by the laws relating to copyrights and intellectual property rights in using Licensed Software.

Article 11 (Export Control)

1. Licensed Software and the associated literature or the like may not be exported to places outside the Country (including transmission outside the Country over the Internet or the like).
2. User agrees that Licensed Software is subject to export controls imposed by the Country and the United States of America.
3. User agrees to comply with all the international and domestic laws that apply to this software (U.S. Export Administration Regulations and regulations established by the U.S., the Country and their governmental agencies regarding usage by end users and export destinations).

Article 12 (Miscellaneous)

1. Even if this agreement is invalidated in part by law, all other provisions shall remain in effect.
2. Licensor and User shall consult each other in good faith to resolve any matters not provided for in this agreement or questions arising from the interpretation of this agreement.
3. Licensor and User agree that this agreement is governed by the law of Japan and that all disputes involving claims and obligations that may arise out of this agreement will be settled by arbitration at the Tokyo District Court as the court of first instance.

Before Use

IMPORTANT

Please read this manual carefully to ensure proper use before using this product. It is especially important that you read and observe WARNINGS and CAUTIONS in this manual. Please keep the manual in a safe and accessible place for future reference.

The structure of the manuals

The following manuals are available for this product.

Startup Guide (this manual)

Explains how to safely use this device as well as how to install and connect it to your vehicle.

Instruction Manual

Explains how to operate this device, troubleshoot suspected issues, and more.

The instruction manual is available in web format for viewing through your internet browser and in PDF format for viewing with a PDF viewer. It can be accessed via a smartphone, tablet, computer, and other digital devices on the following website. (Data transmission fees may apply)

https://www.kenwood.com/cs/ce/im_edition/im409/



Support for this unit

The most up-to-date information on this device is posted on the recent information forum and other forums on this website.

<https://www.kenwood.com/cs/ce/>



How to read this manual

- The screens and panels shown in this manual are examples used to provide a clear explanation of operations.

For this reason, they may be different from the actual screens or panels, or some display patterns may be different from the actual ones.

- Display language: English is used for the purpose of explanation. You can select a display language from the [SETUP] menu.
- []: Indicates the name of touch keys.



This symbol on the product means there are important operating and maintenance instructions in this manual. Be sure to carefully read instructions in this manual.

Precautions

⚠ WARNINGS

■ To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metallic tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.
- If you experience problems during installation, consult your KENWOOD dealer.

■ Precautions on using this unit

- When you purchase optional accessories, check with your KENWOOD dealer to make sure that they work with your model and in your area.
- You can select a language to display menus, audio file tags, etc. See Instruction Manual.
- The Radio Broadcast Data System feature won't work in areas where the service is not supported by any broadcasting station.

■ Protecting the monitor

- To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with a sharp tip.

■ Cleaning the unit

- If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe it with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.

NOTE

- Applying spray cleaner directly to the unit may damage its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase the screened print.

Caution for Smartphone Users

Simultaneously running multiple applications on your smartphone while screen sharing places heavy demand on the microprocessor of the phone, potentially affecting communication and performance.

For best results while pairing with your KENWOOD receiver, please be sure to close any unused applications.

Note for specifications**Wi-Fi section****Frequency Range**

: Dual Band (2.4GHz/5GHz)

Bluetooth section**Frequency**

: 2.402 – 2.480 GHz

General**Operating Voltage**

: 12 V DC car battery

Speaker Impedance

: 4 – 8 Ω

Remote control**DAX800XR/DAX8000S****⚠ WARNING**

- Do not ingest the battery, Chemical Burn Hazard

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



⚠ CAUTION

- Risk of fire or explosion if the battery is replaced by an incorrect type. Ensure to replace only with the same type.
- Risk of fire, explosion or the leakage of flammable liquid or gas if the battery is left in an extremely high temperature surrounding environment and/or subjected extremely low air pressure. The battery pack or batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Risk of fire, explosion or the leakage of flammable liquid or gas if the battery is disposed into fire or a hot oven, recharged, shorted, mechanically crushed or cut of the battery.
- If spilled fluid comes in contact with your eyes or on clothing, immediately rinse with water and consult a physician.

Changing the battery of the remote control unit

- Use a commercially available button battery (CR2025).
- Insert the battery with the + and – poles aligned properly.
 - If the effectiveness of the remote controller decreases, replace the battery.

Caution for button or coin batteries:

	This symbol on the product means there are important operating and maintenance instructions in this manual. Be sure to carefully read instructions in this manual.
	This symbol means that a button cell or coin battery is contained.

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: CR2025
- Nominal voltage: DC3V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 212°F (100°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

How to read this manual

The safety and correct use of this product are explained in this manual. Please read this manual carefully before using the product.

Cleaning the unit


If the far end of the unit is dirty, wipe it with a soft cloth. Do not use a brush or a cloth with a lot of lint. Do not use a cloth with a lot of lint. Do not use a cloth with a lot of lint.

Getting Started

Turning on the Unit

DMX1058XR/DMX1038S/DAX1050XR


- 1 Press the  HOME button.

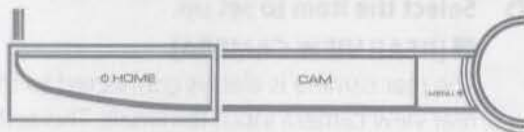

The unit is turned on.

DAX800XR/DAX8000S

- 1 Touch the screen.

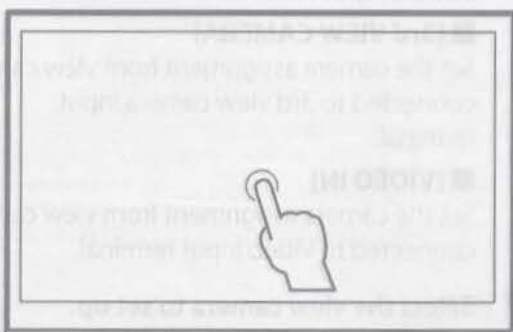


The unit is turned on.

Initial SETUP


Perform this setup when you use this unit first time.

- 1 Set each item as follows.

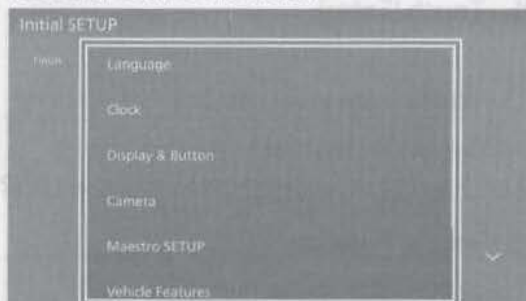

■ [Language]

Select the language used for the control screen and setting items. Default is "American English(en)".

- ① Touch [Language].
- ② Touch [Language Select].
- ③ Select the desired language.
- ④ Touch .


■ [Clock]

Sets the synchronization of the clock.

■ [Display & Button]


Set button illumination color, clock skin, and viewing angle.

If it is hard to see the image on the screen even, adjust the viewing angle.

- ① Touch [Display & Button].
- ② Set each item and touch .

■ [Camera]

Set the parameters for the camera.

- ① Touch [Camera].
- ② Set each item and touch .

■ [Maestro SETUP]

Access settings for the iDataLink Maestro (commercially available), including settings menus for advanced camera controls, vehicle diagnostics, OEM Settings menus, and more. (Requires installation of an iDataLink Maestro in a compatible vehicle).

■ [Vehicle Features]

This function requires a commercial adaptor. Consult your KENWOOD dealer for details.

■ [DEMO]

Set the demonstration mode. Default is "ON".

■ [System Configuration]

Configure the digital sound output settings. For details, see **System Configuration settings (P.7)**.


- 2 Touch [Finish].

NOTE

- When configuring the [Fiber Optic Output] and [Installation Orientation], the system will restart after the [Finish] button is pressed.


System Configuration settings

- 1 Touch [System Configuration] on the Initial SETUP screen.

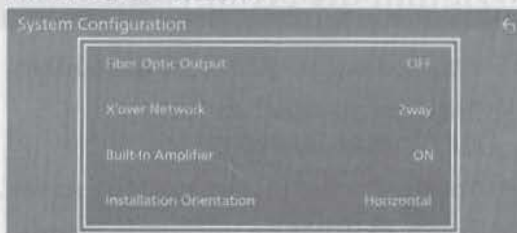

■ [Fiber Optic Output] (DMX1058XR/DAX1050XR/DAX800XR only)

Set the output sampling frequency when using optical digital sound output.

- ① Touch [Fiber Optic Output].
 - ② Select the output sampling frequency.
[OFF] (Default) / [48kHz] / [96kHz]
 - ③ Touch .
- Touch [Finish] and a message will appear.
Touch [Yes] to restart and apply the settings.

■ [X'over Network]

Set X'over Network to either 2-way or 3-way.

- ① Touch [X'over Network].
- ② Read the message and press [Next].
- ③ Select the crossover network mode.
[2way] (Default) / [3way]
- ④ Touch [Yes].

▲ CAUTION

Connecting 3-way speakers with the 2-way mode selected can break the speakers.

NOTE

- When installing a 3-way speaker, make sure to always first run Initialize and go through the user setup.
- X'Over Network settings are disabled when the [Fiber Optic Output] is set to 48 kHz or 96 kHz.


■ [Built-In Amplifier]

Select whether to use the built-in power amplifier. Turning off the built-in amplifier improves the quality of the sound from Preout.

[ON] (Default) / [OFF]

■ [Installation Orientation]

Set whether the main unit is oriented vertically or horizontally.


- ① Touch [Installation Orientation].
- ② Select the orientation.
[Horizontal] (Default) / [Vertical]
- ③ Touch .


Touch [Finish] and a message will appear.
Touch [Yes] to restart and apply the settings.

To set up the camera assignment settings

1 DMX1058XR/DMX1038S/DAX1050XR

Press the  HOME button.
DAX800XR/DAX8000S

Touch  at the top of the screen.

Touch  HOME on the popup menu.
HOME screen appears.

2 Touch .

- 3 Touch [SETUP].
SETUP Menu screen appears.

- 4 Touch [Camera].
Camera setting menu appears.

- 5 Touch [Camera Assignment Settings] in the Camera setting menu.

- 6 Select the item to set up.

■ [REAR VIEW CAMERA]

The rear camera is always connected to the rear view camera input terminals. This setting cannot be changed.

■ [FRONT VIEW CAMERA / DASH CAM]

Set the camera assignment from view camera connected to Front view camera/ Dashboard camera input terminal.


■ [3rd VIEW CAMERA]

Set the camera assignment from view camera connected to 3rd view camera input terminal.

■ [VIDEO IN]

Set the camera assignment from view camera connected to Video input terminal.

- 7 Select the view camera to set up.

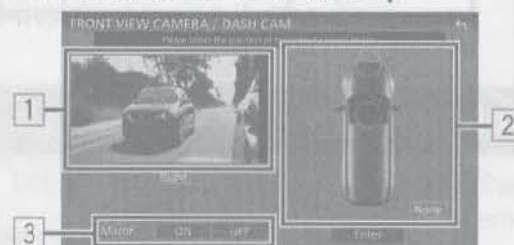

- 8 Touch [Enter].

1 Picture from view camera

Displays the picture from the view camera connected to the input terminal to be set. (P.21)

2 Camera Position

Assign each position to the view camera connected to the selected input terminal.
Front/Left/Right/Dashboard Camera/[None]

3 Mirroring setting *1

Switch the mirroring setting.
[ON]/[OFF] (Default)

*1 The [FRONT VIEW CAMERA / DASH CAM] and [3rd VIEW CAMERA] setting screens only.

Connection/Installation

Before Installation

Before installation of this unit, please note the following precautions.

⚠ WARNINGS

- If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.
- Do not cut out the fuse from the ignition wire (red) and the battery wire (yellow). The power supply must be connected to the wires via the fuse.


⚠ CAUTION

- Install this unit in the console of your vehicle.
- Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot.

NOTE

- Mounting and wiring this product requires skills and experience. For best safety, leave the mounting and wiring work to professionals.
- Do not install the unit if it becomes an obstacle to driver performance.
- Adjust the panel position not to become an obstacle to driver performance.
- Make sure to ground the unit to a negative 12V DC power supply.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit.
- If the power is not turned ON ("There is an error in the speaker wiring. Please check the connections." is displayed), the speaker wire may have a short-circuit or touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked.

- If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wire to a power source with a constant voltage supply, such as with battery wires, the battery may be drained.
- If the console has a lid, the lid will not be closed even when the unit is installed correctly.
- If the fuse blows, first make sure the wires are not touching to cause a short circuit, then replace the old fuse with one with the same rating.
- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the \ominus wires or ground them to any metal part in the car.
- When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not mix front and rear). For example, if you connect the \oplus connector of the left speaker to a front output terminal, do not connect the \ominus connector to a rear output terminal.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- This unit has the cooling fan to decrease the internal temperature. Do not mount the unit in a place where the cooling fan of the unit is blocked. Blocking these openings will inhibit the cooling of the internal temperature and result in malfunction.

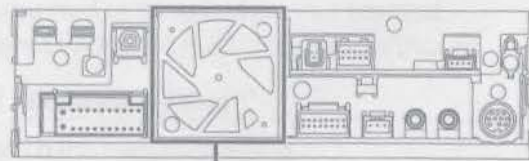


Cooling fan

- Do not press hard on the panel surface when installing the unit to the vehicle. Otherwise scars, damage, or failure may result.


- Reception may drop if there are metal objects near the Bluetooth/Wi-Fi antenna.

DMX1058XR/DMX1038S

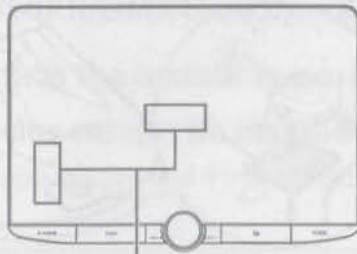

Bluetooth/Wi-Fi antenna unit


DAX1050XR/DAX800XR/DAX8000S

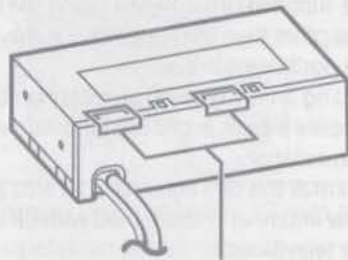

Bluetooth/Wi-Fi antenna unit

● **Forward and Lateral Fields of Vision**

- To determine driver's forward and lateral fields of vision under normal conditions, place a pole (directly visible from the front or visible through the car rear-view mirror) as shown.

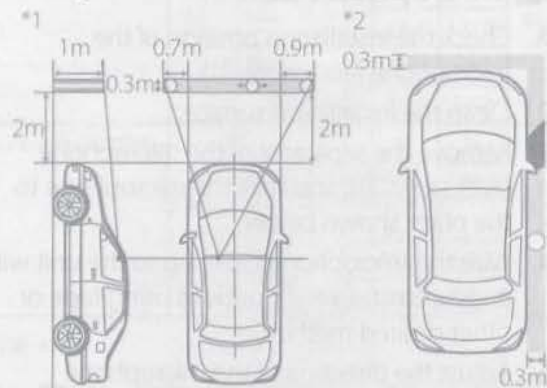


- : Pole (height: 1m, diameter: 0.3m)
- : Field of vision from steering position
- : Exempted area (pole size is subject to regulation)



- For right hand drive vehicles, standards are reversed.

- *1 The pole must be visible from the driver's position as direct forward field of vision.
- *2 The pole must be directly visible or indirectly visible through the mirror, etc. from the driver's position.

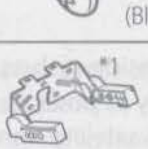■ **Supplied accessories for installation**

①	 *1	x1
②	 (1 m)	x1
③	 (3 m)	x1
④	 (M5 x 8 mm) *1	x4
⑤	 (M5 x 8 mm) *1	x4
⑥	 (3.5 m)	x1
⑦		x1
⑧	 *1*2  *3	x1
⑨	 (M4 x 12 mm) *1*2	x4
⑩	 (Ø3 x 6 mm) (Black)	x3 *1*2 x1 *3
⑪	 (M4 x 8 mm) (Black) *1	x5
⑫	 *1  *2	x1
⑬		x1
⑭		x1

Connection/Installation

⑮		x1
⑯	 (1.5 m) *3	x1

*1 DMX1058XR/DMX1038S only

*2 DAX1050XR only

*3 DAX800XR/DAX8000S only

■ Installation procedure

1. To prevent a short circuit, remove the key from the ignition and disconnect the ⊖ terminal of the battery.
2. Remove the vehicle parts for installing the unit and connecting wires to terminal.
3. Make the proper input and output wire connections for each unit.
4. Connect the speaker wires of the wiring harness.
5. Connect the wiring harness wires in the following order; ground, battery, ignition.
6. Determine the height of the display unit and position of the slider. See **Distance between the display unit and the main unit (P.13)**.
7. Connect the wiring harness connector to the unit.
8. Install the main unit to the vehicle.
9. Reinstall the vehicle parts.
10. Install the display unit.
11. Reconnect the ⊖ terminal of the battery.
12. Perform the Initial Setup.
See **Initial SETUP (P.7)**.

Installing the accessories


■ GPS antenna

GPS antenna is installed inside of the car. It should be installed as horizontally as possible to allow easy reception of the GPS satellite signals.

To mount the GPS antenna inside your vehicle:

1. Clean your dashboard or other surface.
2. Remove the separator of the metal plate (accessory ⑦).
3. Press the metal plate (accessory ⑦) down firmly on your dashboard or other mounting surface. You can bend the metal plate (accessory ⑦) to conform to a curved surface, if necessary.

4. Remove the separator of the GPS antenna (accessory ⑥), and stick the antenna to the metal plate (accessory ⑦).

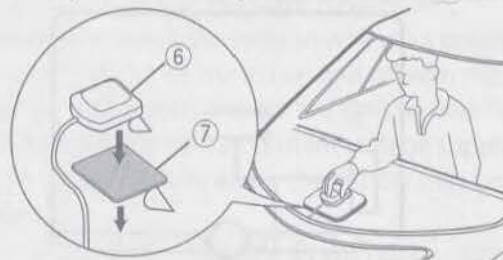


NOTE

- Use the supplied GPS antenna. Using the GPS antenna other than the supplied one may cause a drop in positioning accuracy.
- Depending on the type of car, reception of the GPS satellite signals might not be possible with an inside installation.
- Please install this GPS antenna in an area away from any antennas that are used with CB radios or satellite televisions.
- The GPS antenna should be installed at a position that is spaced at least 12 inch (30 cm) from smartphone/cell-phone or other transmitting antennas. Signals from the GPS satellite may be interfered with by these types of communication.
- Painting the GPS antenna with (metallic) paint may cause a drop in performance.

■ Microphone unit

1. Check the installation position of the microphone (accessory ③).
2. Clean the installation surface.
3. Remove the separator of the microphone (accessory ③), and stick the microphone to the place shown below.
4. Wire the microphone cable up to the unit with it secured at several positions using tape or other desired method.
5. Adjust the direction of the microphone (accessory ③) to the driver.

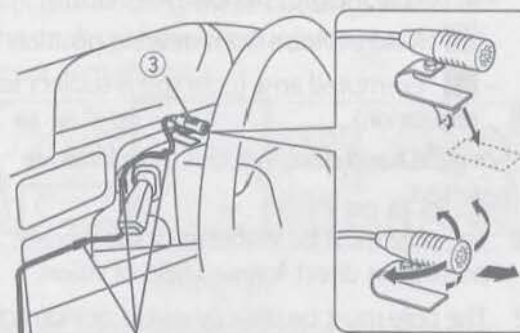

Fix a cable with a commercial item of tape.




Installing the Big Screen model

DMX1058XR/DMX1038S/DAX1050XR

■ Confirm the installing position of the display unit

● Vehicles cannot be installed


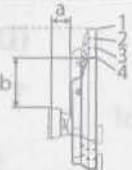
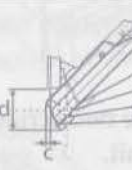
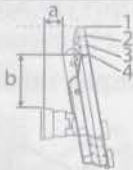
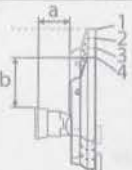
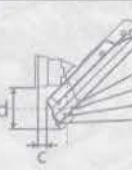
It may be possible to install if it can avoid the following by adjustment for slider position and display height.

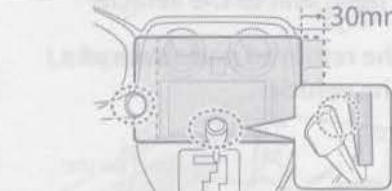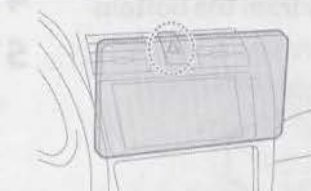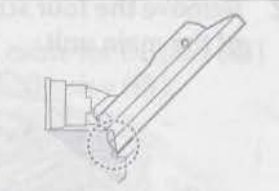Lever operations are interfered such as shift lever, wiper lever, winker lever when install the unit.	A hazard switch is hidden from a driver seat.	The display unit hits a panel on the vehicle.
		

*1 The Display unit can move 30 mm to the left or right. It can be installed if it doesn't interfere with lever operation when moving.

● Distance between the display unit and the main unit


Adjust slider position and display height so that it does not interfere with display movement.

Slider position	Display angle											
	-10°			0°			45°					
Back position			a	b			a	b			c	d
		1	10.8	126.5		1	30.0	123.6		1	25.6	30.5
		2	13.4	111.8		2		108.6		2	15.0	41.1
		3	16.0	97.2		3		93.6		3	4.4	51.7
Forward position		4	18.6	82.4		4		78.6		4	-6.2	62.3
			a	b			a	b			c	d
		1	29.8	126.5		1	49.0	123.6		1	44.6	30.5
		2	32.4	111.8		2		108.6		2	34.0	41.1
		3	35.0	97.2		3		93.6		3	23.4	51.7
		4	37.6	82.4		4		78.6		4	12.8	62.3

Unit: mm


● Main unit allowable installation angles

Installed horizontally

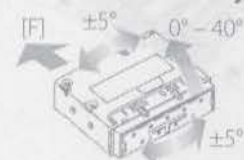

- [F]: Front side of the vehicle
- Pitch: 0° - 40° (horizontally), ±20° (vertically)
- Roll/Yaw: ±5°

Installed vertically

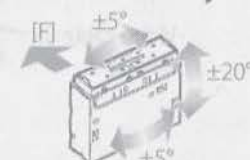


To install with the main unit separated from the display unit

- Depending on how the main unit is oriented, [Installation Orientation] may require configuring. (P.7)
- The KCA-A150EX extension cable (150 cm / 4.9 ft, sold separately) is required to connect the display unit (accessory ⑧).


■ Positioning the slider in forward

(DMX1058XR/DMX1038S only)


- 1 Remove the two screws from the top of the main unit.

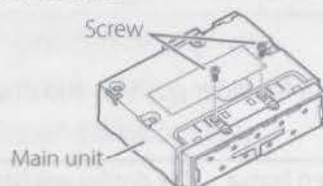


- 2 Remove the four screws from the bottom of the main unit.

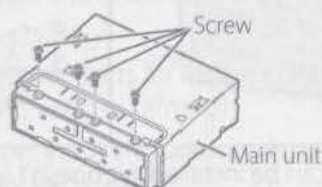

- 3 Pull the slider block forward and reinstall the four screws to the bottom of the main unit.

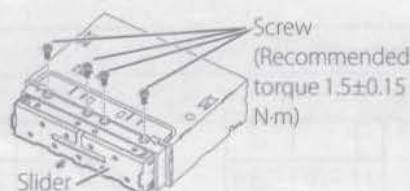

- 4 Reinstall the two screws from the top of the main unit.

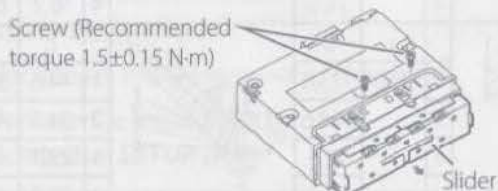

■ Installing the main unit


(DMX1058XR/DMX1038S only)

NOTE

- Determine the slider position before installing the main unit. (P.14) The slider position cannot be changed after installing to the vehicle.
- Make sure that the unit is installed securely in place, if the unit is unstable, it may malfunction.

- 1 Remove parts that interfere with installing such as a panel on the vehicle.


- 2 Install the car bracket to the main unit.

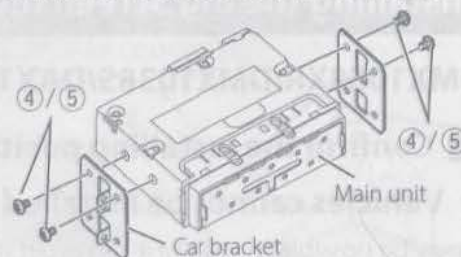

- 3 Connect the wiring harness wires and peripheral equipment.

- 4 Install the main unit to the vehicle.

- 5 Reinstall the removed parts such as a panel on the vehicle.

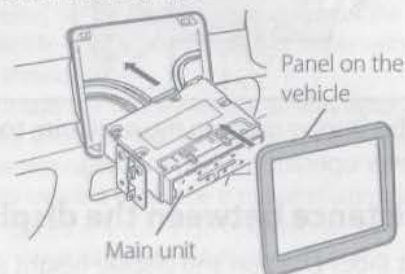


■ Installing the arm bracket for the display unit

(DMX1058XR/DMX1038S only)

- 1 Match the arm bracket (accessory ⑫) installation position to align with the length of the display cable.

Power cable for Display : about 170 mm (6-11/16")


Video cable for Display : about 160 mm (6-5/16")

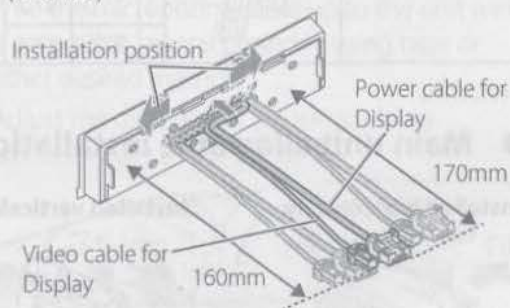


2 Positioning the arm bracket (accessory ⑫).

When installing the arm bracket in the left or right position, move the display cable so that it aligns with the groove in the arm bracket.


Center position

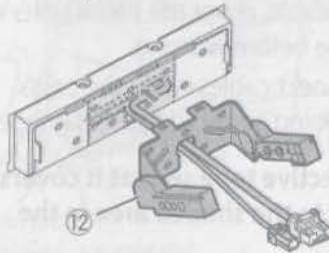


Left position

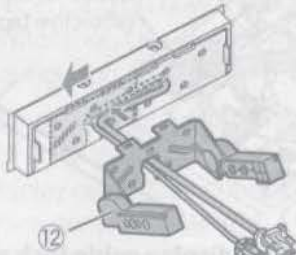

Right position

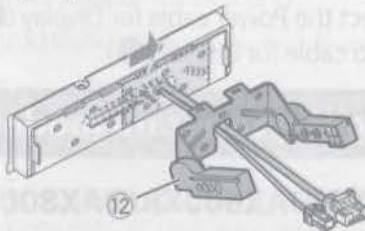

3 Fix the arm bracket (accessory ⑫) to the main unit with the five binding head screws (accessory ⑪).

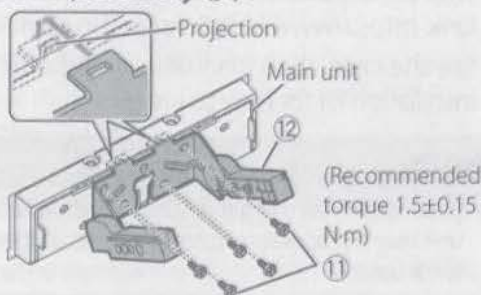


■ Installing the display unit and adjusting the height

1 Remove the rear cover from the display unit (accessory ⑧).

Slide the rear cover on the display unit (accessory ⑧) over and lift it up.




2 Connect the Video cable for Display (①) and Power cable for Display (②).

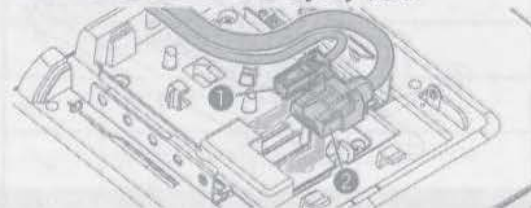

3 Run the display cables.


Use the guides to secure the Video cable for Display (①) in place.

Run the display cables along the interior guide path (between the posts). Install it so that the display unit has room to move. Tuck the remaining display cables inside the main unit.

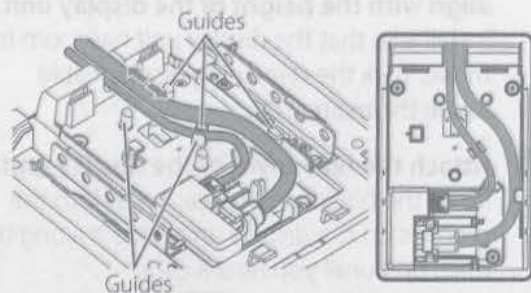


4 Install the display unit (accessory ⑧) to the main unit.


Install the unit so that the hooks on the display unit (accessory ⑧) are inserted into the groove on the arm bracket.

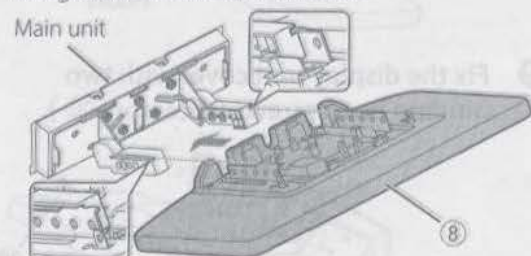

- 5** Adjust the display height according to the screw hole position.

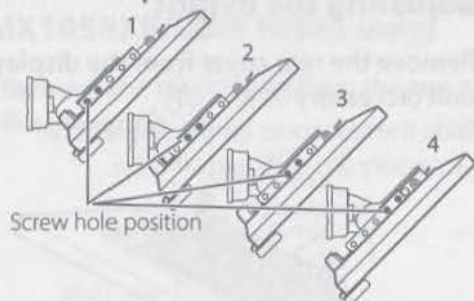

- 6** Fix the display unit with four hexagon head screws (accessory ⑨).

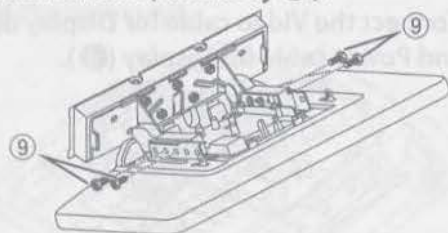


NOTE


- Fix with hexagon head screws correctly. After installing the display unit (accessory ⑧) to the main unit, tilt the display forward until it stops and confirm that the display unit (accessory ⑧) does not hit vehicle parts. If the display unit hits vehicle parts, adjust the display height again.

- 7** Adjust the length of the display cable to align with the height of the display unit. Install it so that the display unit has room to move. Tuck the remaining display cable inside the main unit.

- 8** Attach the rear cover of the display unit. Insert the hooks on the rear cover into the grooves on the display unit. Slide it along the main unit until you hear a click.

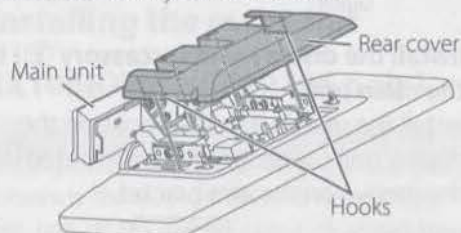

- 9** Fix the display unit cover with two binding head screws (accessory ⑩).

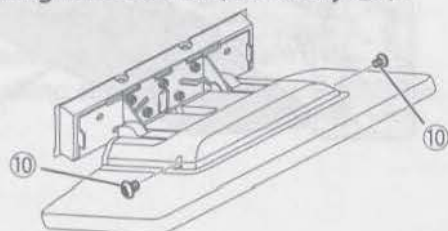


- 10** Raise the display manually.

Removing the display cable

CAUTION

- To prevent injuries to your hands and damage to the display cable, cover the metal parts with protective tape before working.
- Do not disconnect cables while the unit's power is on. Doing so could cause damage.

- 1** Apply protective tape so that it covers the metal parts in the shaded area in the image.

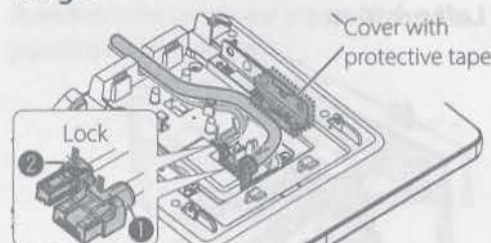

- 2** Press and hold the display cable lock and then remove the cable.

Disconnect the Power cable for Display (①) and Video cable for Display (②).

Installing the Separate model

DAX1050XR/DAX800XR/DAX8000S


Preparation

- You may need the ADS installation kit to align with the installation vehicle.
Link: <https://www.idatalinkmaestro.com>
- See the instruction manual included with the installation kit for how to install.

NOTE

- Be sure to install using the ADS installation kit. The unit may not operate properly if the installation kit is not used.

Installation overview

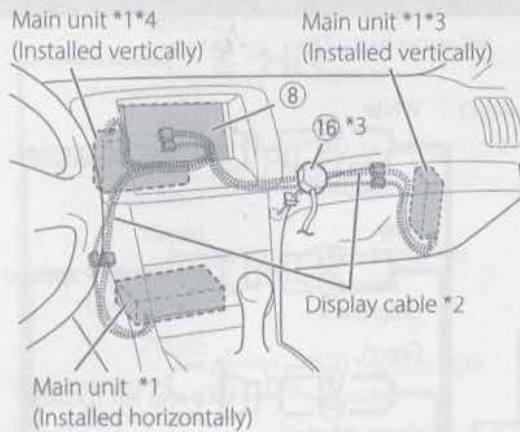

- *1 Depending on how the main unit is oriented, [Installation Orientation] may require configuring. (P.7)
- *2 Connect the main unit display cable (65 cm / 2.1 ft.) to the display unit (accessory 8). If the display cable does not reach, you will need the extension cable KCA-A150EX (150 cm / 4.9 ft, sold separately).
- *3 DAX800XR/DAX8000S only.
- *4 DAX1050XR only.

Installing the remote control sensor (DAX800XR/DAX8000S only)


1. Confirm the installation location for the remote control sensor (accessory 16).
2. Clean the surface of the installation location.
3. Remove the separator on the remote control sensor (accessory 16) and attach the light receptor.
4. Use tape to secure the remote control sensor cable at several locations and run it to the display unit (accessory 8).

NOTE

- Take note of the following precautions when installing the remote control sensor (accessory 16).
 - Install in a location that can easily receive the infrared signals from the remote control.
 - Select a location where double-sided tape can be used to secure the sensor.

Main unit allowable installation angles



• Installed horizontally

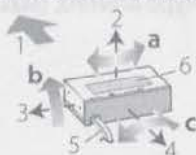

• Installed vertically

DAX1050XR

DAX800XR/DAX8000S

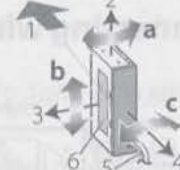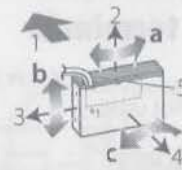


		Installed horizontally	Installed vertically
a	Yaw	$\pm 5^\circ$	$\pm 5^\circ$
b	Pitch	$0^\circ - 40^\circ$	$\pm 20^\circ$
c	Roll	$\pm 5^\circ$	$\pm 5^\circ$
1		Front side of the vehicle	
2		Top side	
3		Left side	
4		Cluster panel side (inside the vehicle interior)	
5		Display cable	
6		Model name plate	


- *1 When installing the DAX1050XR, orient the face with the model number towards the front of the vehicle.

Connecting the unit

Connecting wires to terminals

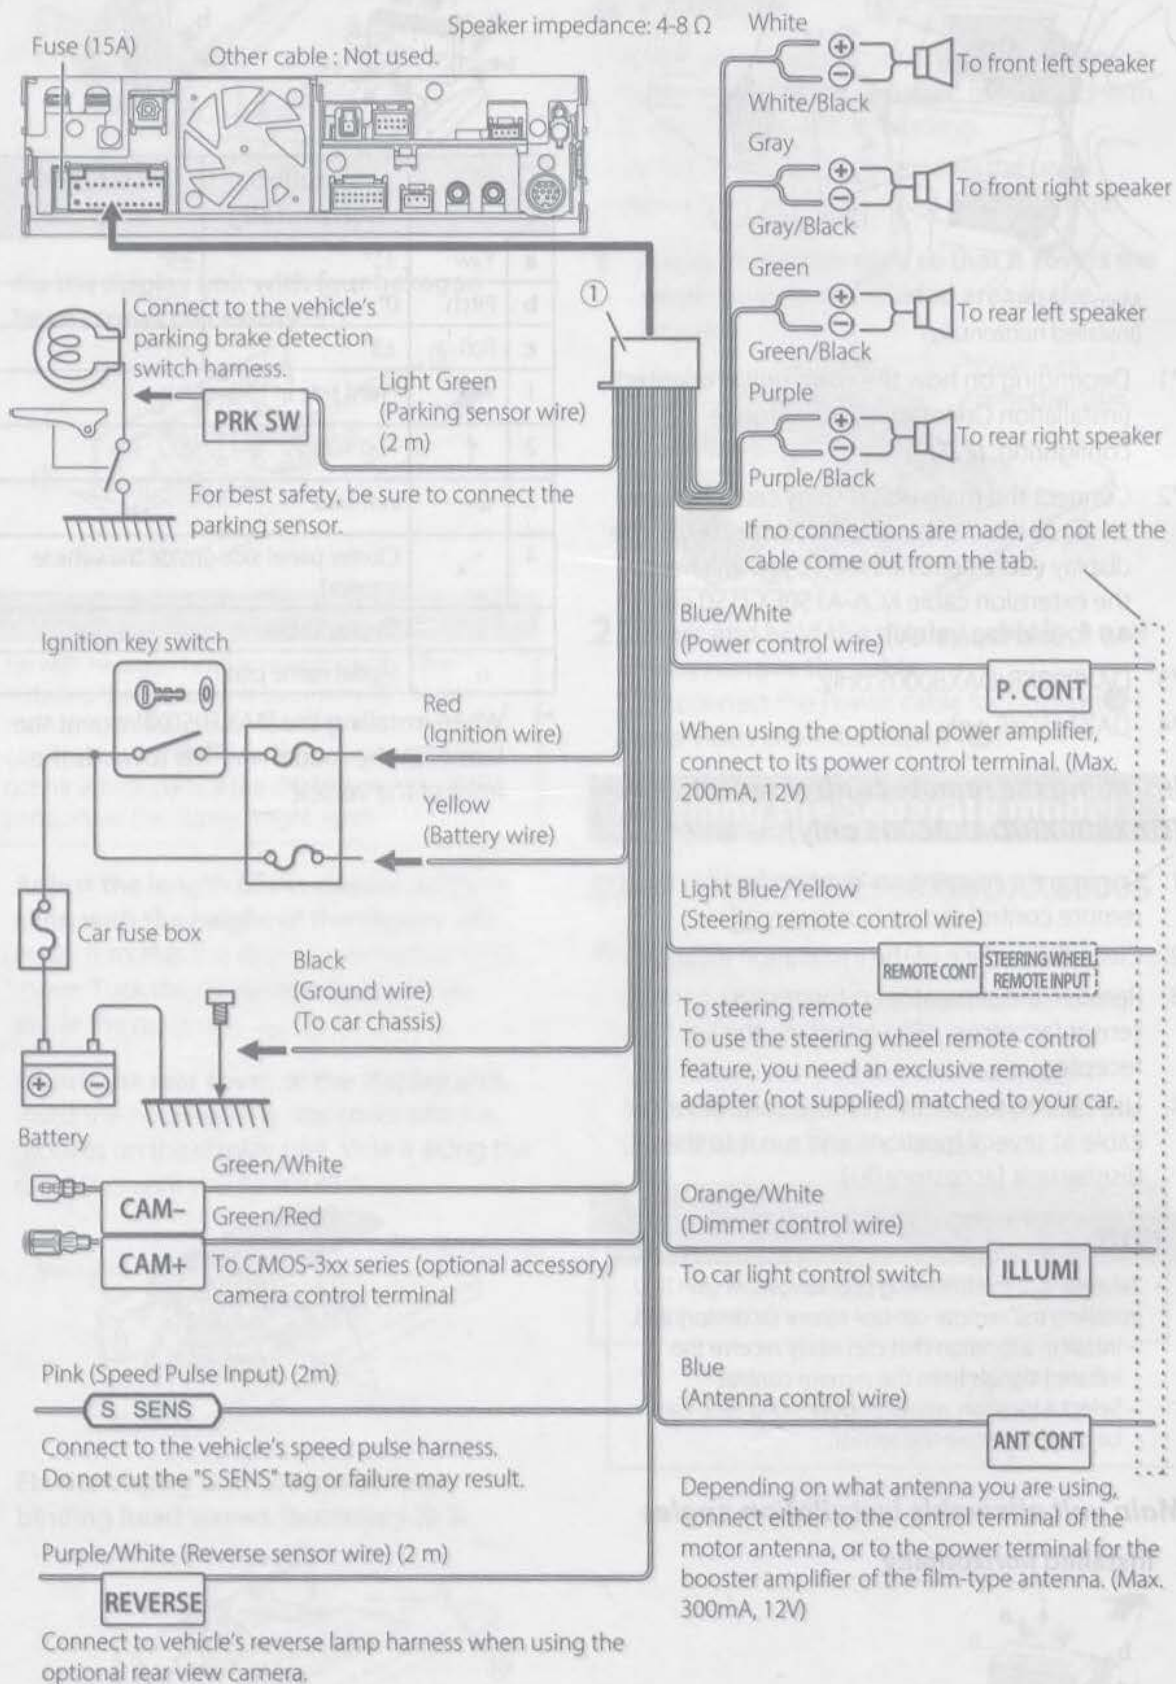


3-way speaker system setup

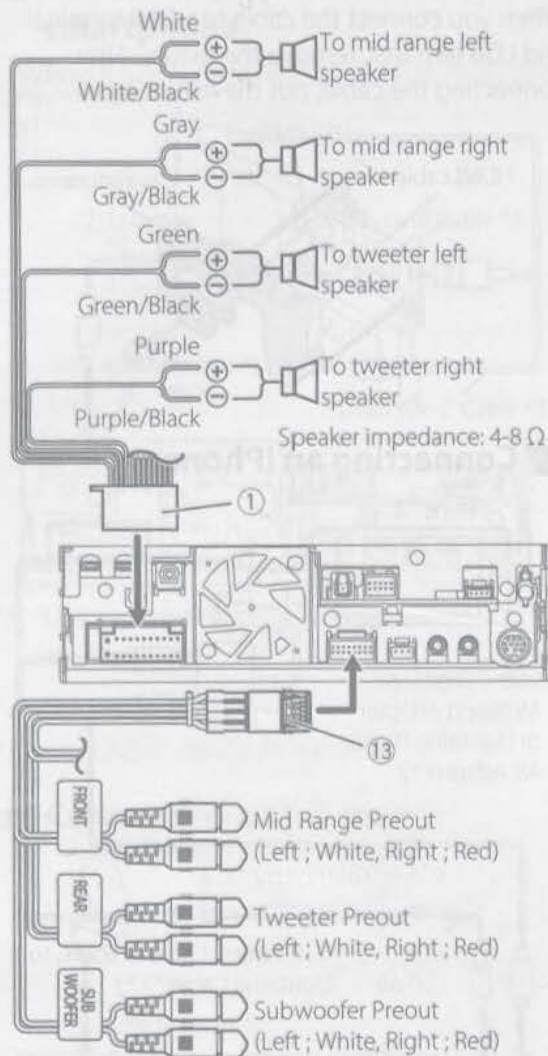

NOTE

- When connecting to an external amplifier, connect its ground wire to the car's chassis to avoid damaging the unit.
- For how to switch to the 3-way speaker system, see [X'over Network] in the System Configuration settings. (P.7)
- For speaker setup and crossover setup. See Instruction Manual.
- For how to connect speaker wires to terminals other than speaker terminals and Preout terminals, see **Connecting the external amplifiers and external AV device (P.19)** and **Connecting wires to terminals (P.18)**.
- When not using the Preout (RCA terminals), keep the terminal caps on.

Connecting the external amplifiers and external AV device

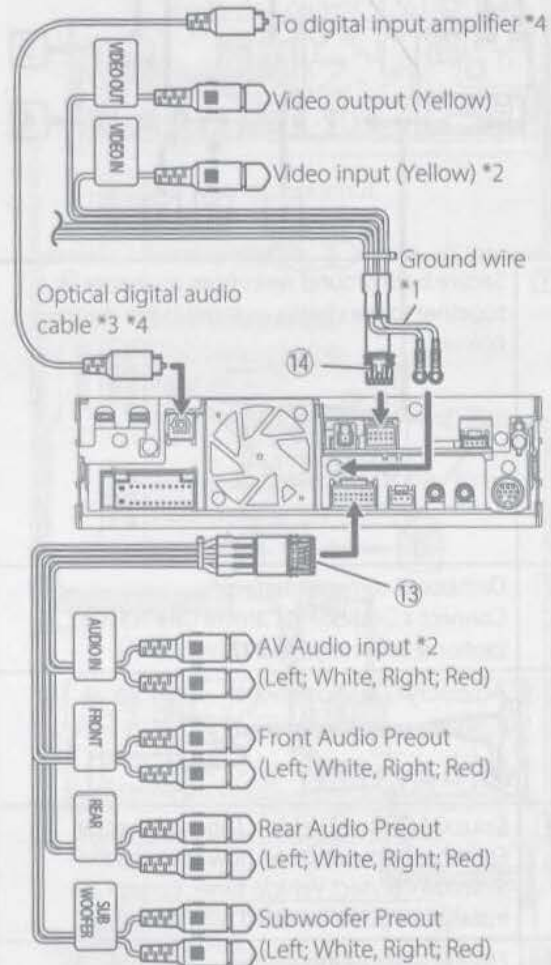


- *1 Secure the two ground wires together to the chassis of the main unit.
- *2 Set "VIDEO IN" to "None" in Camera Assignment Settings. (P.8)
- *3 Sold separately. Check the specifications for the optical digital audio cable and follow the minimum bending radius when running the wires.
- *4 DMX1058XR/DAX1050XR/DAX800XR only

NOTE

- When connecting to an external amplifier, connect its ground wire to the car's chassis to avoid damaging the unit.
- When not using the Preout (RCA terminals), keep the terminal caps on.


Connecting the system and external components

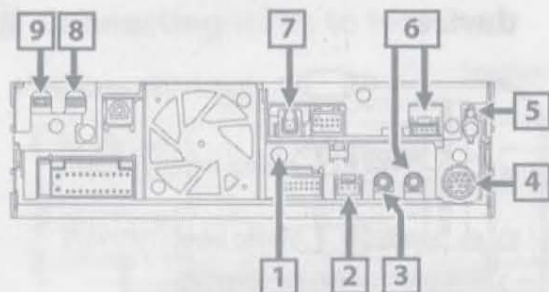


1	Secure both ground wires from accessory (14) together to the chassis as show in the diagram below.
2	Dashboard camera interface Connect a Dashboard Camera DRV-N520 (optional accessory). (P.21)
3	Accessory (3) : Microphone
4	SiriusXM Connect Vehicle Tuner connector For more information on how to install the SiriusXM Connect Vehicle tuner, consult the installation guide included with the tuner.
5	FM/AM antenna input
6	iDatalink Maestro connector
7	Accessory (6) : GPS Antenna Use the supplied GPS antenna. Using the GPS antenna other than the supplied one may cause a drop in positioning accuracy.
8	USB terminal (USB Type-C*)
9	HDMI input (Type-D) Connect a KCA-HD200 (optional accessory) to HDMI input terminal. W: 11.1 mm or less H: 7.7 mm or less D: 21.5 mm or less

Installation/removal of fixing bracket

When you connect the cable to HDMI terminal and USB terminal, remove the fixture. After connecting the cable, put the fixture again.

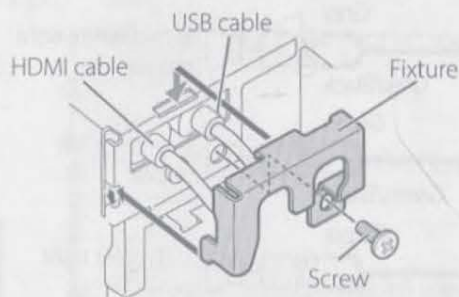

Connecting an iPhone

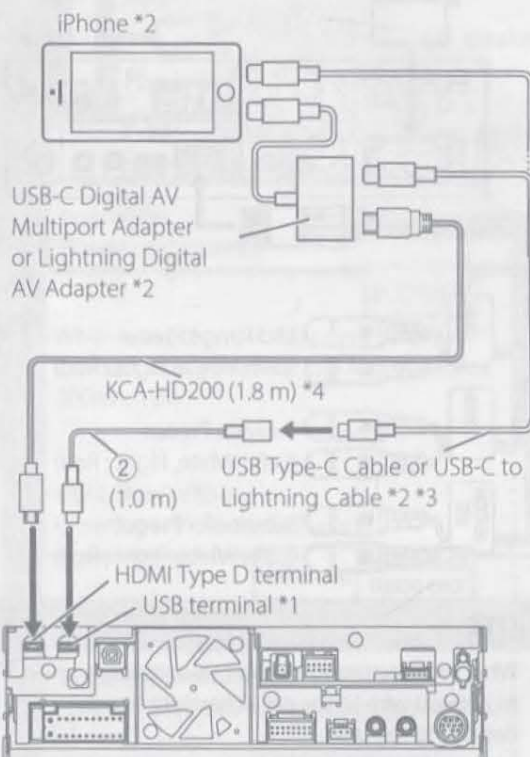


*1 USB maximum power supply current : DC 5 V
= 3.0 A

*2 Sold separately.

3 Depending on the iPhone connector, use a genuine Apple Lightning-USB cable or a USB-IF certified USB-C cable.
If you use non-certified cable, it may not work properly.

*4 Optional accessory

Connecting an Android™ smartphone

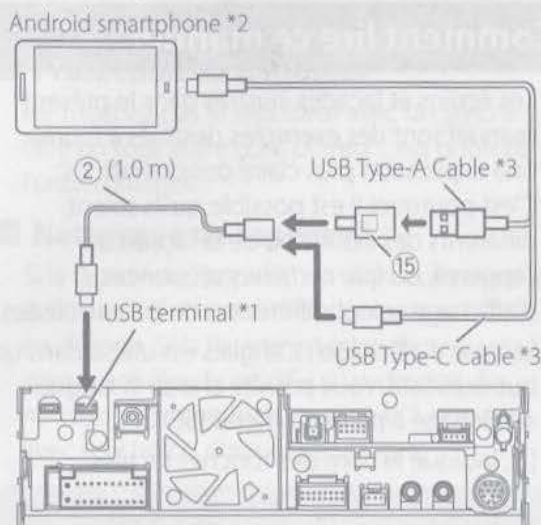


*1 USB maximum power supply current : DC 5 V
= 3.0 A

*2 Sold separately.

*3 Use USB-IF certified USB cable.


Connecting a USB device

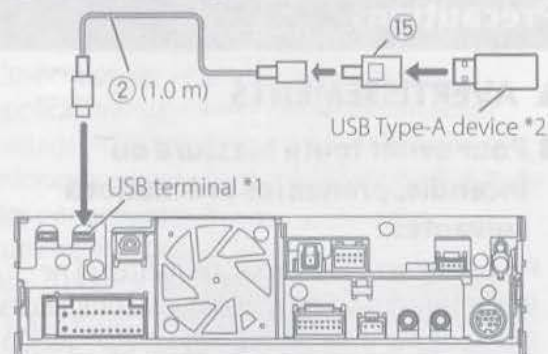

*1 USB maximum power supply current : DC 5 V
= 3.0 A

*2 Sold separately.

Connecting the camera

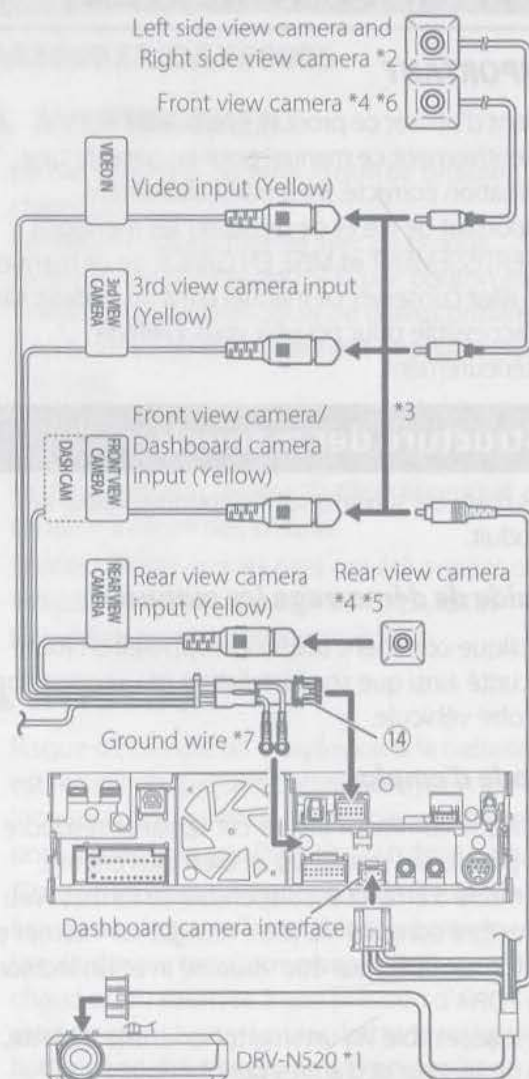

*1 Optional accessory

*2 Sold separately.

 
*3 Up to 3 cameras of Dashboard camera, Front view camera, Left side view camera and Right side view camera can be connected. For more information, see **To set up the camera assignment settings (P.8)**.

*4 CMOS-3xx series (optional accessory) or commercially available camera.

*5 For HD video, connect an HD camera to Rear view camera input terminal.

*6 For HD video, connect an HD camera to Front view camera/Dashboard camera input terminal.

*7 Secure both ground wires to the same terminal.



Hi-Res Audio logo and Hi-Res Audio Wireless logo are used under license from Japan Audio Society.



- HD2/HD3
- Bookmark
- Digital Sound
- Program Info
- Artist Experience
- Emergency Alerts

KENWOOD

MILITARY

Units purchased through the U.S.A. military exchange service overseas may be serviced under warranty in the continental U.S.A., subject to the following conditions.

- 1) The original warranty is in effect.
- 2) Proof of purchase is provided to the servicer.

WARRANTY FOR MILITARY MARKET

JVC KENWOOD corporation is proud of the quality and workmanship of its audio equipment. This unit has been properly designed, tested and inspected before it was shipped to you. If properly installed and operated in accordance with instructions furnished, it should give you an optimum reliable performance.

WARRANTY PERIOD

This product is warranted for a period of (1) year from the date of the original purchase.

SCOPE OF WARRANTY

Except as specified below, this warranty covers all defects in materials and workmanship of the Kenwood brand products.

During the warranty period, any authorized Kenwood Service Center in the military market listed in the back of this warranty card will provide you free-of-charge both parts and labor required to correct any defect in materials or workmanship.

The following are not covered by this warranty.

1. Voltage conversions.
2. Periodic check-ups which do not disclose any defect covered by the warranty.
3. Cabinets, grilles, other exterior finishes, belts, tape heads, and other non-durable parts and accessories.
4. Units on which the serial number has been effaced, modified or removed.
5. Installation and/or removal charges.
6. Damaged magnetic tapes.
7. House call charges for any repairs.
8. Shipping or delivery charges to or from an authorized Kenwood Service Center.
9. This warranty will not cover any failure that is due to any of the following conditions in accordance with the visual inspection of the authorized Kenwood Service Center:
 - * Improper maintenance or repair, including the installation of parts or accessories that do not conform to the quality and specifications of the original parts.
 - * Misuse, abuse, neglect, unauthorized product modification or failure to follow instructions contained in the Owner's Manual.
 - * Accidental or intentional damages.
 - * Repairs or attempted repairs by an unauthorized agency. (All repairs must be performed at an authorized Kenwood Service Center.)
 - * Damages or deteriorations caused during shipment (Claims must be presented to the carrier).
 - * Damages or deteriorations resulting from removal and/or replacement.

PURCHASER'S RESPONSIBILITIES

As the purchaser of a new Kenwood brand product, you are requested to do the following in order to obtain Kenwood warranty service.

1. Retain your sales slip or other evidence of purchase for proving your eligibility for requesting Kenwood warranty service.
2. Make your unit available to an authorized Kenwood Service Center in the military market for inspection and approved warranty service, or ship your unit in its original carton box or equivalent, fully insured and shipping charges prepaid, to the authorized Kenwood Service Center.

LIMITATION OF IMPLIED WARRANTIES

Any and all implied warranties, including warranties of merchantability and fitness for a particular purpose, shall be limited in duration to the length of this warranty.

EXCLUSION OF CERTAIN DAMAGES

KENWOOD's liability for any defective product is limited to the repair or replacement of said product, at our option, and shall not include damages of any kind, whether incidental, consequential or otherwise, except to the extent prohibited by applicable law.

KENWOOD AUTHORIZED SERVICE CENTERS IN MILITARY MARKET

JAPAN:

Yokota
Kenwood Rep.; c/o
Yokota BX, JAAX AAFES-PAC,
APO San Francisco 96328

Zama

Kenwood Rep.; c/o
Zama PX, JAAX AAFES-PAC,
APO San Francisco 96343

Misawa

Kenwood Rep.; c/o
Misawa BX, JAAX AAFES-PAC,
APO San Francisco 96519

Yokosuka

Kenwood Rep.; c/o
A-33, Yokosuka NEX No. 260-010
FPO Seattle 98760

Atsugi

Kenwood Rep.; c/o
Atsugi NEX No. 260-020 FPO Seattle
98767

Iwakuni

Kenwood Rep.; c/o
Marine Corps Exchange, Marine Corps
Air Station,
FPO Seattle 98764

Sasebo

Sasebo NEX;
Navy Exchange 260-040
F.A. Box 115 FPO Seattle 98766

Okinawa

Kenwood Rep.; c/o
OWAX, AAFES-PAC, APO San Francisco
96230

KOREA:

Kenwood Rep.; c/o
KOAX Repair Shop, AAFES-PAC
DD-Camp Market, APO San Francisco
96488

GUAM:

Kenwood Rep.; c/o
Guam NEX No. 230-010,
FPO San Francisco 96630
Kenwood Rep.; c/o
GUAX, AAFES-PAC, APO San Francisco
96334

U.S.A.:

In The Continental U.S.A.
For Nearest Authorized Service Center;
Tel: 1-800-536-9663
www.us.jvckenwood.com

EUROPE:

Please inquire at the military resale outlets where you bought your Kenwood products, or
JVCKENWOOD DEUTSCHLAND GMBH:
Konrad-Adenauer Allee 1-11, 61118 Bad
Vilbel, Germany

Warranty Card

Identification du produit
Modelo do aparelho e numero de série
Model number & serial number

Revendeur & cachet
Nome da loja e carimbo
Dealer & stamp

Date d'achat
Data da compra
Purchase date

Nom & adresse du client
Nome e endereço do cliente
Name & address of customer

Attention:

This card and receipt (or invoice) are necessary to purchase a new panel in case of theft or damage.

Attention:

Vous aurez besoin de cette carte et du reçu (ou de la facture) pour acheter un nouveau panneau en cas de vol ou d'endommagement.

Atenção:

Em caso de dano ou perda do painel frontal, este Certificado de Garantia e a Nota Fiscal de compra serão requisitados para a aquisição de um novo painel.

© B46-0824-00/04 (K) (15/11)

KENWOOD

Dear Customer,

Thank you for purchasing this kenwood product. As mentioned in the pages of this booklet, our warranty is only valid in the countries listed. If your country is not listed please contact your retailer for information on warranty procedure, or write to:

JVC KENWOOD Customer Information Center

3-12, Moriyacho, Kanagawa-ku, Yokohama-shi, Kanagawa 221-0022, Japan

U.S.A.

This warranty will be honored only in the U.S.A.

KENWOOD LIMITED WARRANTY FOR CAR STEREO COMPONENTS

HOW LONG IS THE WARRANTY

JVCKENWOOD USA Corporation ("Kenwood") warrants this product for a period of one (1) year from the date of original purchase.

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as specified below, this warranty covers all defects in material and workmanship in Kenwood car stereo components. The following are not covered by the warranty:

- Any product which is not distributed in the U.S.A. by Kenwood or which is not purchased in the U.S.A. from an authorized Kenwood car stereo dealer or an automobile dealer, unless the product is purchased through the U.S.A Military Exchange Service.
- Any product on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:
 - Any shipment of the product (claims must be presented to the carrier).
 - Installation or removal of the product.
 - Accident, acts of nature, misuse, abuse, neglect, unauthorized product modification or failure to follow instructions supplied with the product.
 - Repair or attempted repair by anyone not authorized by Kenwood.
 - Any other cause which does not relate to a product defect.

WHO IS PROTECTED

This warranty is enforceable only by the original purchaser.

WHAT WE WILL PAY FOR

We will pay for all labor and material expenses for covered items. Payment of shipping charges is discussed in the next section of this warranty.

HOW TO OBTAIN WARRANTY SERVICE

If your KENWOOD product ever needs service:

- Take or ship it to any KENWOOD Authorized Service Center in the U.S.A. along with a complete description of the problem. (If you are uncertain as to whether a Service Center is authorized, please call 1-800-KENWOOD for the nearest Service Center. 1-800-536-9663).
- Although you must pay any shipping charges if it is necessary to ship the product for warranty service, we will pay the return shipping charges if the repairs are covered by the warranty within the United States.
- Whenever your units are taken or sent for warranty service, you must include a copy of the original dated sales receipt as proof of warranty coverage.

LIMITATION OF IMPLIED WARRANTIES

ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY.

JVCKENWOOD USA Corporation

EXCLUSION OF DAMAGES

KENWOOD'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE PRODUCT AT OUR OPTION. KENWOOD SHALL NOT BE LIABLE FOR:

- INSTALLATION OR REMOVAL CHARGES, DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN KENWOOD CAR STEREO COMPONENTS, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, OR
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If a problem develops during or after the Limited Warranty Period, or if you have any questions regarding the operation of the product, you should contact your KENWOOD Authorized Dealer or Authorized Service Center. If the problem or your question is not handled to your satisfaction, please contact our Customer Relations Department at the address listed below:

JVCKENWOOD USA Corporation
PO Box 22745, 2201 E. Dominguez St.
Long Beach, CA 90810-5745
Tel: (800) 536-9663
www.us.jvckenwood.com

BRASIL

O fabricante garante o produto identificado na Nota Fiscal de venda ao consumidor contra qualquer defeito de fabricação ou de matéria-prima durante o período de garantia. Esta garantia é válida no território brasileiro desde que o produto tenha sido adquirido no Brasil e distribuído pela JVC KENWOOD do Brasil Comércio de Eletrônicos Ltda.

PERÍODO DE GARANTIA

Este produto é garantido pelo prazo de 01 (um) ano, incluindo o período estabelecido por lei, a partir da data de aquisição, comprovada mediante a apresentação da respectiva Nota Fiscal de venda ao consumidor final.

Eventuais reparos realizados no produto durante o período de garantia não implicam na dilatação do seu prazo.

EXCLUSÃO DA GARANTIA

(a) Produtos com o número de série ou certificado de garantia rasurados, adulterados ou ilegíveis;

(b) Defeitos resultantes de acidentes (quedas, batidas e etc), uso em desacordo com o manual de instruções, má utilização, ligação à fonte de tensão diferente da especificada no Manual de Instruções, modificações não autorizadas;

(c) Danos causados por agentes da natureza (Ex: chuvas, raios, maresia, enchentes e etc);

(d) Defeitos ou danos em decorrência de consertos realizados por pessoas não autorizadas;

(e) Defeitos ou danos resultantes do uso de peças ou dispositivos não conformes às especificações da JVC KENWOOD;

(f) Danos ou deteriorações aos acabamentos externos, partes cosméticas, cabos, chicotes, parafusos de fixação, luvas, alças, bolsas, estojos, adaptadores, antenas, fitas, cabeças gravadoras, CDs ou danos causados por pilhas defeituosas ou com vazamento;

(g) Defeitos ou danos devido ao transporte (reclamações devem ser feitas junto à empresa transportadora);

(h) Qualquer outra causa que não esteja relacionada a defeitos de matéria-prima e de fabricação;

(i) Danos causados por tentativa de roubo ou furto;

(j) Danos causados por uso de CDs de má qualidade;

(k) Danos decorrentes do desgaste natural do produto;

(l) Danos causados por mau uso, (derramamento de líquidos e/ou alimentos, corrosão, oxidação, exposição à umidade ou situações climáticas extremas, riscos ou quedas).

JVC KENWOOD DO BRASIL COMÉRCIO DE ELETRÔNICOS LTDA

CONCERTO EM GARANTIA

É indispensável a apresentação deste Certificado de Garantia devidamente preenchido, acompanhado da respectiva Nota Fiscal de compra do produto, desde que não apresente rasuras ou modificações.

O consumidor somente terá direito a estes benefícios, quando o produto for entregue diretamente no balcão de um Serviço Autorizado da JVC KENWOOD.

O QUE NÃO É COBERTO PELA GARANTIA

Instalação e remoção do produto, despesas de frete, seguro e embalagem são de responsabilidade do proprietário.

Este produto é destinado exclusivamente ao uso doméstico.

IMPORTANTE:

Para qualquer informação sobre seu equipamento JVC KENWOOD, ou para obter o endereço do Serviço Autorizado mais próximo, acesse o site www.kenwood.com.br, ou ligue para a Central de Atendimento JVC KENWOOD – Tel.: +55 (11) 3777-6771 com os dados abaixo preenchidos.

JVC KENWOOD DO BRASIL COMÉRCIO DE ELETRÔNICOS LTDA
Tel: (11) 3777-6771
www.kenwood.com.br

Nome do consumidor: _____

Endereço: _____ CEP: _____

Cidade: _____ Estado: _____

Telefone: _____

Data da compra: ____ / ____ / ____ Nota Fiscal: _____

CANADA

JVCKENWOOD Canada Inc.

KENWOOD WARRANTY

JVCKENWOOD Canada Inc. (hereinafter called "KENWOOD"), gives the following written warranty to the original customer of each new Kenwood product distributed in Canada by KENWOOD and purchased from a dealer authorized by KENWOOD.

KENWOOD warrants that each new Kenwood product, under normal use, is free from any defects, subject to the terms and conditions set forth below. If a defect should occur within the warranty period, repairs will be made free of charge for parts and labour when such defects are determined by KENWOOD or its' authorized service centres to be attributable to faulty materials or workmanship at time of manufacture. Please contact KENWOOD to confirm if a dealer or service centre is authorized by KENWOOD.

WARRANTY PERIOD

This Kenwood product is warranted for parts and labour for a period of one (1) year from the date of original purchase, lease or rental, except for products which are used in a professional or commercial application, which are warranted for a period of ninety (90) days for parts and labour and are subject to the terms and conditions of the warranty.

WARRANTY EXCLUSIONS

This warranty excludes:

- Products purchased in a foreign country or purchased in Canada and taken to a foreign country.
- Products purchased from a dealer not authorized by KENWOOD.
- Products with the serial number defaced, altered or missing.
- Periodic check-ups which do not disclose any defects covered by this warranty.

ENTIRE WARRANTY

This warranty constitutes the entire written warranty given by KENWOOD. No person, party, dealer or service centre or their agents or employees are authorized to extend or enlarge this warranty on behalf of KENWOOD by any written or verbal statement or advertisement or promotion, including any extended warranty program or plan that may be offered by the dealer or service centre, unless approved in writing by KENWOOD.

DISCLAIMER

KENWOOD disclaims any responsibility for loss of time or use of the product or any other indirect, incidental or consequential damage to other products or goods, inconvenience or commercial loss.

NOTICE TO CONSUMER

The provisions contained in this written warranty are not intended to limit, modify, take away, disclaim or exclude any warranties or rights you may have which are set forth in any applicable provincial or federal laws or legislation.

IMPORTANT

This warranty card by itself is not considered by KENWOOD as a valid proof of purchase. When applying for warranty repairs, you must present the original copy of your bill of sale and this warranty card as proof of warranty, so we recommend that they be kept in a safe place, should they be required in the future.

JVCKENWOOD Canada Inc.
6070 Kestrel Road, Mississauga,
Ontario, Canada L5T 1S8
Tel.: (905) 670-7211
Fax: (905) 670-7248

GARANTIE KENWOOD

JVCKENWOOD Canada Inc. (ci-après appelée "KENWOOD"), donne par écrit la garantie suivante à l'acheteur original de chaque nouveau produit Kenwood distribué au Canada par KENWOOD et acheté à un concessionnaire autorisé par KENWOOD.

KENWOOD garantit, sous réserve des termes et des conditions énoncés ci-dessous, que chaque nouveau produit Kenwood, dans des conditions d'emploi normales, est exempt de tous défauts. Si l'un défaut se produit pendant la période de garantie, KENWOOD s'engage à assumer le coût des pièces défectueuses et de la main-d'œuvre nécessaires pour effectuer les réparations pourvu que de tels défauts sont attribuables à des pièces défectueuses employées lors de la fabrication du produit Kenwood ou à la main-d'œuvre tel qu'établi par KENWOOD ou par l'un des centres de service autorisés. Appelez KENWOOD pour vérifier si un concessionnaire ou un centre de service est autorisé par KENWOOD.

PÉRIODE DE GARANTIE

Les pièces et la main-d'œuvre nécessaires pour la réparation des produits Kenwood sont garanties pendant la période d'un (1) an à compter de la date d'achat, de bail ou de location originale, sauf dans les cas où les produits Kenwood sont employés dans un but professionnel ou commercial, où la garantie des pièces et de la main-d'œuvre demeure en vigueur pendant une période de quatre-vingt-dix (90) jours sous réserve des termes et des conditions de la garantie.

EXCLUSIONS DE GARANTIE

Cette garantie ne couvre pas:

- les produits achetés à l'étranger ou achetés au Canada et transportés à l'étranger;
- les produits achetés à un concessionnaire non autorisé par KENWOOD;
- les produits dont le numéro de série manque, a été effacé ou modifié;
- les services d'entretien périodiques qui n'indiquent aucun défaut couvert par cette garantie;

(e) Defects resulting from disaster, accident, abuse, misuse, lightning, power surges, neglect or lack of periodic maintenance, unauthorized modification or failure to follow instructions in the owner's manual.

(f) Defects or damage as a result of repairs performed by a person or party not authorized by KENWOOD.

(g) Defects resulting from the use of parts or devices that do not conform to KENWOOD specifications.

(h) Damage or deterioration occurring to any exterior finishes, cosmetic parts, tape heads, adaptors, antennas, cables, tapes, discs or faults or damage caused by defective or leaking batteries.

(i) Defects or damage occurring during shipping (claims should be presented to the shipping company).

(j) Product voltage and/or line frequency conversions.

(k) Product installation or removal charges.

TO OBTAIN WARRANTY SERVICE

Should your Kenwood product require warranty service, deliver it to any authorized KENWOOD service centre and present the original copy of your bill of sale and this warranty card as proof of warranty, or send your product fully insured and freight prepaid to the nearest authorized KENWOOD service centre. To avoid possible shipping damage, make sure the product is properly packed. Include a copy of your original bill of sale and this warranty card as proof of warranty along with your name, home and/or work telephone number(s), a complete return address and a detailed description of the fault(s). Products repaired within warranty will be returned freight prepaid to destinations within Canada. The customer is responsible for all freight and related costs for the return of product(s) to destinations outside Canada.

(e) les défauts causés par les désastres, les accidents, les abus, les emplois incorrects, les éclairs, les surtensions de courant, les manques de soins ou d'entretiens périodiques, les modifications non autorisées ou les manques de respect du mode d'emploi;

(f) les défauts ou les dommages causés lors de réparations effectuées par une personne ou par une partie non autorisée par KENWOOD;

(g) les défauts causés par l'emploi de pièces ou de dispositifs qui ne se conforment pas aux exigences de KENWOOD;

(h) les finitions extérieures, les pièces cosmétiques, les têtes de bandes, les adaptateurs, les antennes, les câbles, les bandes, les disques endommagés ou déformés, ni les défauts ou dommages causés par des piles défectueuses ou qui fuient;

(i) les défauts ou dommages qui se produisent pendant l'expédition des produits Kenwood (On devrait déposer de telles réclamations auprès des compagnies de transport);

(j) les conversions de tension et/ou de fréquence du produit;

(k) les frais d'installation ou d'enlèvement du produit.

COMMENT OBTENIR DU SERVICE SOUS GARANTIE

Au cas où un service sous garantie de votre produit Kenwood s'avère nécessaire, veuillez livrer le produit à n'importe quel centre de service KENWOOD et présenter la copie originale du contrat de vente et cette carte de garantie en tant que preuve de garantie ou veuillez faire parvenir votre produit assuré et port payé au centre de service KENWOOD autorisé le plus proche. Pour éviter toutes possibilités de dommages pendant le transport, veuillez bien emballer le produit. Veuillez inclure une copie du contrat de vente original et cette carte de garantie en tant que preuve de garantie aussi bien que votre nom, numéros de téléphone au poste de travail et/ou au domicile, votre adresse et une description détaillée des défauts. Les produits sous garantie réparés seront retournés port payé aux destinations à l'intérieur du Canada. Le consommateur sera responsable de tous frais de transport et d'autres frais qui s'y rapportent pour faire expédier les produits à destinations à l'extérieur du Canada.

L'ENTIERE GARANTIE

Cette garantie représente l'entière garantie donnée par écrit par KENWOOD. KENWOOD ne se tient aucunement responsable de toutes extensions ni de toutes augmentations de cette garantie faites ou entreprises par toutes personnes, parties, concessionnaires ou centres de service ou par leurs agents ou employés au nom de KENWOOD au moyen d'affirmations verbales ou écrites, d'annonces ou de promotions, y compris tous programmes ou plans de garantie étendue que puissent offrir les concessionnaires ou les centres de service, à moins que KENWOOD n'y ait consenti par écrit d'avance.

RENONCIATION

KENWOOD renonce à toutes responsabilités de perte de temps, d'emploi du produit, de tous dommages indirects ou accessoires causés à d'autres produits ou biens, de tous inconvénients ou de toutes pertes commerciales.

AVIS AUX CONSOMMATEURS

Les stipulations contenues dans la présente garantie écrite n'ont pas pour but de limiter, de modifier, de diminuer, de rejeter ni d'exclure d'autres garanties ni droits énoncés dans n'importe quelles lois ou législations provinciales ou fédérales.

IMPORTANT

KENWOOD ne considère pas cette garantie toute seule comme étant une preuve d'achat valide. Lorsqu'on demande du service sous garantie, il faudra présenter la copie originale du contrat de vente aussi bien que cette carte de garantie en tant que preuve de garantie. On recommande de les conserver dans un lieu sûr au cas où elles s'avèreraient nécessaires à l'avenir.

JVCKENWOOD Canada Inc.
6070 Kestrel Road, Mississauga,
Ontario, Canada L5T 1S8
Téléphone: (905) 670-7211
Télécopieur: (905) 670-7248