

Pioneer

DMH-342EX

DMH-341EX

DMH-340EX

DMH-241EX

DMH-240EX

DMH-130BT

RDS AV RECEIVER

RÉCEPTEUR AV AVEC RDS

RECEPTOR AV RDS

AVH-241EX

AVH-240EX

DVD RDS AV RECEIVER

RÉCEPTEUR AV RDS AVEC DVD

RECEPTOR AV RDS CON DVD

Installation Manual
Manuel d'installation
Manual de instalación

English

Français

Español

Important safety information

⚠ WARNING

Rear visibility systems (backup cameras) are required in certain new vehicles sold in the U.S. and Canada. U.S. regulations began according to a two year phase-in on May 1, 2016, and both the U.S. and Canada require that all such vehicles manufactured on or after May 1, 2018 have rear visibility systems. **Owners of vehicles equipped with compliant rear visibility systems should not install or use this product in a way that alters or disables that system's compliance with applicable regulations.** If you are unsure whether your vehicle has a rear visibility system

subject to the U.S. or Canadian regulations, please contact the vehicle manufacturer or dealer.

If your vehicle has a compliant backup camera that displays the backup view through the factory receiver, do not use the Pioneer receiver unless it is connected to and displays the same view as the factory backup camera. Connection to the factory backup camera will require an adaptor, sold separately. Not all vehicles may be able to connect. Please check with a qualified professional installer for installation options specific to your vehicle.

product, pull over, park your vehicle in a safe location and apply the parking brake before making the necessary adjustments.

- Do not install this product where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems of safety features, including airbags, hazard lamp buttons, or (iii) impair the driver's ability to safely operate the vehicle. In some cases, it may not be possible to install this product because of the vehicle type or the shape of the vehicle interior.

Important safeguards

⚠ WARNING

Pioneer does not recommend that you install this product yourself. This product is designed for professional installation only. We recommend that only authorized Pioneer service personnel, who have special training and experience in mobile electronics, set up and install this product. **NEVER SERVICE THIS PRODUCT YOURSELF.** Installing or servicing this product and its connecting cables may expose you to the risk of electric shock or other hazards, and can cause damage to this product that is not covered by warranty.

Precautions before connecting the system

⚠ WARNING

Do not take any steps to tamper with or disable the parking brake interlock system which is in place for your protection. Tampering with or disabling the parking brake interlock system could result in serious injury or death.

⚠ CAUTION

- Secure all wiring with cable clamps or electrical tape. Do not allow any bare wiring to remain exposed.
- Do not directly connect the yellow lead of this product to the vehicle battery. If the lead is directly connected to the battery, engine vibration may eventually cause the insulation to fail at the point where the wire passes from the passenger compartment into the engine compartment. If the yellow lead's insulation tears as a result of contact with metal parts, short-circuiting can occur, resulting in considerable danger.

- It is extremely dangerous to allow cables to become wound around the steering column or shift lever. Be sure to install this product, its cables, and wiring away in such so that they will not obstruct or hinder driving.
- Make sure that the cables and wires will not interfere with or become caught in any of the vehicle's moving parts, especially the steering wheel, shift lever, parking brake, sliding seat tracks, doors, or any of the vehicle's controls.
- Do not route wires where they will be exposed to high temperatures. If the insulation heats up, wires may become damaged, resulting in a short circuit or malfunction and permanent damage to the product.
- Do not shorten any leads. If you do, the protection circuit (fuse holder, fuse resistor or filter, etc.) may fail to work properly.
- Never feed power to other electronic products by cutting the insulation of the power supply lead of this product and tapping into the lead. The current capacity of the lead will be exceeded, causing overheating.

Before installing this product

- Use this unit with a 12-volt battery and negative grounding only. Failure to do so may result in a fire or malfunction.
- To avoid shorts in the electrical system, be sure to disconnect the (-) battery cable before installation.

To prevent damage

⚠ WARNING

- When speaker output is used by 4 channels, use speakers over 50 W

Connection


Precautions

Your new product and this manual

- Do not operate this product, any applications, or the rear view camera option (if purchased) if doing so will divert your attention in any way from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating this

(Maximum input power) and between 4 Ω to 8 Ω (impedance value). Do not use 1 Ω to 3 Ω speakers for this unit.


- The black cable is ground. When installing this unit or power amp (sold separately), make sure to connect the ground wire first. Ensure that the ground wire is properly connected to metal parts of the car's body. The ground wire of the power amp and the one of this unit or any other device must be connected to the car separately with different screws. If the screw for the ground wire loosens or falls out, it could result in fire generation of smoke or malfunction.

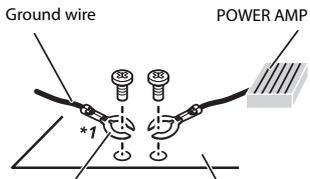

Ground wire POWER AMP
Other devices (Another electronic device in the car) Metal parts of car's body

*1 Non supplied for this unit

- When replacing the fuse, be sure to only use a fuse of the rating prescribed on this product.
- This product cannot be installed in a vehicle without ACC (accessory) position on the ignition switch.

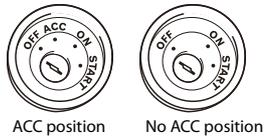

- To avoid short-circuiting, cover the disconnected lead with insulating tape. It is especially important to insulate all


unused speaker leads, which if left uncovered may cause a short circuit.

- For connecting a power amp or other devices to this product, refer to the manual for the product to be connected.
- The graphical symbol  placed on the product means direct current.

Notice for the blue/white lead

- When the ignition switch is turned on (ACC ON), a control signal is output through the blue/white lead. Connect to an external power amp's system remote control terminal, the auto-antenna relay control terminal, or the antenna booster power control terminal (max. 300 mA 12 V DC). The control signal is output through the blue/white lead, even if the audio source is switched off.


This product

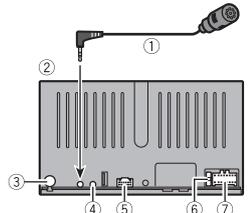

- Microphone 3 m (9 ft. 10-1/8 in.)
- This product
- Antenna jack
- Wired remote input (SWC)
Hard-wired remote control adapter can be connected (sold separately).
- Pre out supply (REAR VIEW CAMERA IN)

- Fuse (10 A)
- Power supply

Power cord

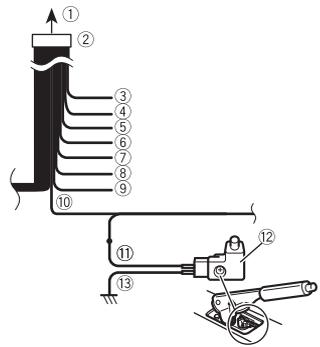


- To power supply
- Power cord
- Yellow
To terminal supplied with power regardless of ignition switch position.
- Red
To electric terminal controlled by ignition switch (12 V DC) ON/OFF
- Orange/white
To lighting switch terminal.
- Black (ground)
To vehicle (metal) body.
- Violet/white
Of the two lead wires connected to the back lamp, connect the one in which the voltage changes when the gear shift is in the REVERSE (R) position. This connection enables the unit to sense whether the car is moving forward or backward.

- Yellow/black
- If you use an equipment with Mute function, wire this lead to the Audio

Mute lead on that equipment. If not, keep the Audio Mute lead free of any connections.

- Blue/white
Connect to system control terminal of the power amp (max. 300 mA 12 V DC).
- Light green
Used to detect the ON/OFF status of the parking brake. This lead must be connected to the power supply side of the parking brake switch.
If this connection is made incorrectly or omitted, certain functions of this product will be unusable.
- Power supply side
- Parking brake switch
- Ground side

Speaker leads

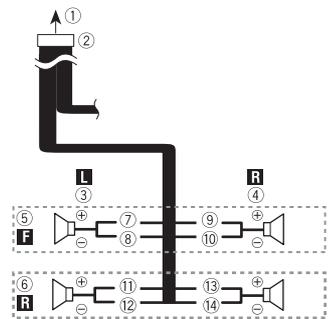

- To power supply
- Power cord
- Left
- Right
- Front speaker
- Rear speaker
- White
- White/black
- Gray
- Gray/black

- ① Green
- ② Green/black
- ③ Violet
- ④ Violet/black


NOTE

With a two-speaker system, do not connect anything to the speaker leads that are not connected to speakers.

Power amp (sold separately)

Important

The speaker leads are not used when this connection is in use.

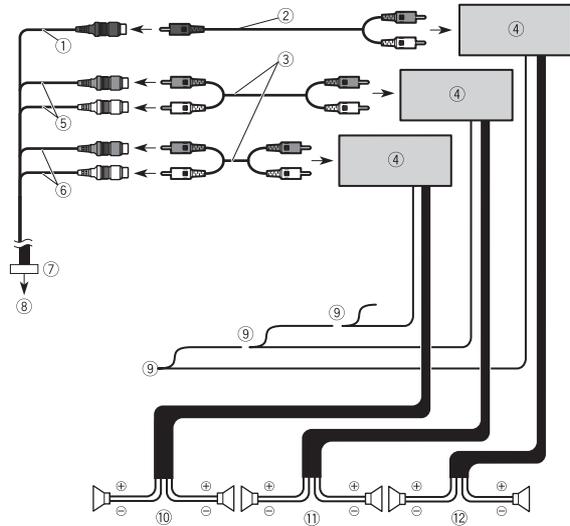

- ① Subwoofer output (**SUBWOOFER OUT**)
- ② RCA conversion cable (sold separately)
- ③ RCA cable (sold separately)
- ④ Power amp
- ⑤ Front output (**FRONT OUT**)
- ⑥ Rear output (**REAR OUT**)
- ⑦ Pre out cord
- ⑧ To pre out supply
- ⑨ System remote control
Connect to Blue/white cable (max. 300 mA 12 V DC).
- ⑩ Rear speaker
- ⑪ Front speaker
- ⑫ Subwoofer

iPhone and smartphone


NOTES

- For details on how to connect an external device using a separately sold cable, refer to the manual for the cable.
- For details concerning the connection and operations of iPhone or smartphone, refer to the Operation Manual or the Owner's Manual.


iPhone with Lightning connector

Connecting via the USB port

- ▶ DMH-342EX/DMH-341EX/DMH-340EX/DMH-130BT

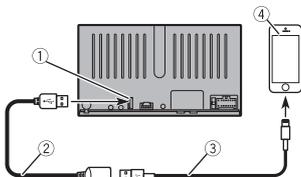

- ▶ DMH-241EX/DMH-240EX/AVH-241EX/AVH-240EX

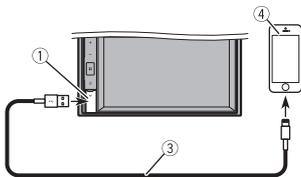


- ① USB port
- ② USB cable 1.5 m (4 ft. 11 in.)
- ③ USB interface cable for iPhone (sold separately)
- ④ iPhone with Lightning connector


Smartphone (Android™ device)

Connecting via the USB port

- ▶ DMH-342EX/DMH-341EX/DMH-340EX/DMH-130BT

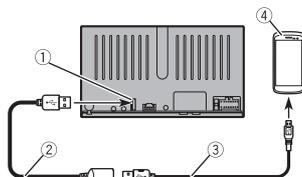

- ▶ DMH-241EX/DMH-240EX/AVH-241EX/AVH-240EX

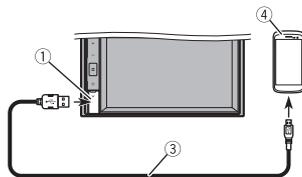

- ① USB port
- ② USB cable 1.5 m (4 ft. 11 in.)
- ③ USB - micro USB cable (Type USB A - micro USB B) (sold separately)
USB Type-C cable (Type USB A - USB C) (sold separately)
- ④ Smartphone

NOTES

- The length of Type USB A - micro USB B cable cannot exceed 2 m (6 ft. 6 in.) and Type USB A - USB C cannot exceed 4 m (13 ft. 1 in.) according to the USB cable standard. When using a cable other than the above conditions, the main unit function may not operate properly.
- Android is a trademark of Google LLC.

Camera

About rear view camera


When you use the rear view camera, the rear view image is automatically switched from the video by moving the shift lever to **REVERSE (R)**. **Camera View** mode also allows you to check what is behind you while driving.

⚠ WARNING

USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.

⚠ CAUTION

- The screen image may appear reversed.
- With the rear view camera you can keep an eye on trailers, or back into a tight parking spot. Do not use for entertainment purposes.
- Objects in rear view may appear closer or more distant than in reality.
- The image area of full-screen images displayed while backing or checking the rear of the vehicle may differ slightly.

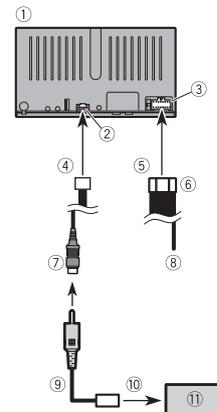


- ① This product
 - ② Pre out supply
 - ③ Power supply
 - ④ To pre out supply
 - ⑤ To power supply
 - ⑥ Power cord
 - ⑦ Brown (**REAR VIEW CAMERA IN**)
 - ⑧ Violet/white (**REVERSE-GEAR SIGNAL INPUT**)
- Refer to Power cord on page 3.
- ⑨ RCA cable (sold separately)
 - ⑩ To video output
 - ⑪ Rear view camera (sold separately)

NOTES

- Connect only the rear view camera to **REAR VIEW CAMERA IN**. Do not connect any other equipment.
- When the camera image is not displayed on screen, check the camera setting in the setting menu. For details, refer to the Operation Manual or the Owner's Manual.

External video component and the display

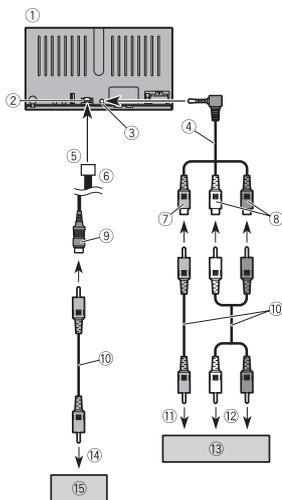

- ① This product
- ② Pre out supply
- ③ AUX input
- ④ Mini-jack AV cable (sold separately)
- ⑤ To pre out supply
- ⑥ Pre out cord
- ⑦ Yellow
- ⑧ Red, white
- ⑨ Yellow (**REAR MONITOR OUT**)
- ⑩ RCA cables (sold separately)
- ⑪ To video output
- ⑫ To audio outputs

- ⑬ External video component (sold separately)
- ⑭ To video input
- ⑮ Rear display with RCA input jack

 
⚠ WARNING

NEVER install the rear display in a location that enables the driver to watch the video source while driving.

This product's rear video output is for connection of a display to enable passengers in the rear seats to watch the video source.

⚠ CAUTION

Be sure to use a mini-jack AV cable (sold separately) for wiring. If you use other cables, the wiring position might differ resulting in disturbed images and sounds.

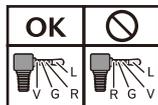

L: Left audio (White)
R: Right audio (Red)
V: Video (Yellow)
G: Ground

Installation

Precautions before installation

⚠ CAUTION


- Never install this product in places where, or in a manner that:
 - Could injure the driver or passengers if the vehicle stops suddenly.
 - May interfere with the driver's operation of the vehicle, such as on the floor in front of the driver's seat, or close to the steering wheel or shift lever.
- To ensure proper installation, be sure to use the supplied parts in the manner specified. If any parts are not supplied with this product, use compatible parts in the manner specified after you have the part compatibility checked by your dealer. If parts other than supplied or compatible ones are used, they may damage internal parts of this product or they may work loose and the product may become detached.
- Do not install this product where it may
 - (i) obstruct the driver's vision,
 - (ii) impair the performance of any of the vehicle's operating systems or safety features, including airbags, hazard lamp buttons or
 - (iii) impair the driver's ability to safely operate the vehicle.
- Never install this product in front of or next to the place in the dashboard, door, or pillar from which one of your vehicle's airbags would deploy. Please refer to your vehicle's owner's manual for reference to the deployment area of the frontal airbags.

Before installing

- Consult with your nearest dealer if installation requires drilling holes or other modifications of the vehicle.
- Before making a final installation of this product, temporarily connect the wiring to confirm that the connections are correct and the system works properly.

Installation notes

- Do not install this product in places subject to high temperatures or humidity, such as:
 - Places close to a heater, vent or air conditioner.
 - Places exposed to direct sunlight, such as on top of the dashboard.
 - Places that may be exposed to rain, such as close to the door or on the vehicle's floor.
- Install this product horizontally on a surface within 0 to 30 degrees tolerance (AVH) or 0 to 60 degrees tolerance (DMH).
- When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they are not blocking the vents.

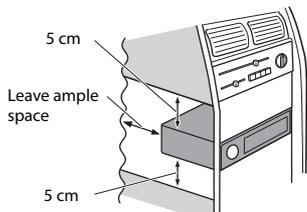


Before installing this product

▶ AVH-241EX/AVH-240EX

- 1 Remove the transport screws from the top of the unit.

Important

 Remove these two transport screws before installation. Otherwise, the disc player will not work.


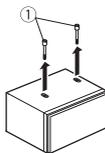


- 1 Transport screw

Installation using the screw holes on the side of this product

- 1 **Fastening this product to the factory radio-mounting bracket.**
Position this product so that its screw holes are aligned with the screw holes of the bracket, and tighten the screws at three locations on each side.

 Use either the truss head screws (5 mm × 9 mm) or flush surface screws (5 mm × 9 mm), depending on the shape of the bracket's screw holes.

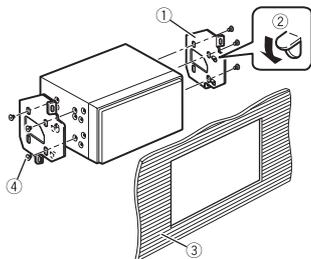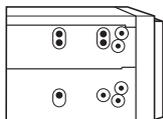

- 1 Factory radio-mounting bracket
- 2 If the pawl interferes with installation, you may bend it down out of the way.
- 3 Dashboard or console
- 4 Truss head screw or flush surface screw
Be sure to use the screws supplied with this product.


Installing the microphone

- Install the microphone in a place where its direction and distance from the driver make it easiest to pick up the driver's voice.
- Be sure to turn off (ACC OFF) the product before connecting the microphone.

- Depending on the vehicle model, the microphone cable length may be too short when you mount the microphone on the sun visor. In such cases, install the microphone on the steering column.


Mounting on the sun visor

- 1 Fit the microphone lead into the groove.

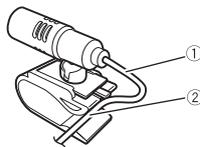

- 1 Microphone lead
- 2 Groove

- 2 Attach the microphone clip to the sun visor.

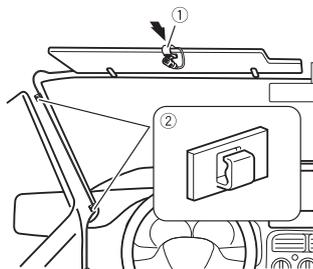


- 1 Microphone clip
- 2 Clamps
Use separately sold clamps to secure the lead where necessary inside the vehicle.

Install the microphone on the sun visor when it is in the up position. It cannot

recognize the driver's voice if the sun visor is in the down position.


Installation on the steering column

- 1 Detach the microphone base from the microphone clip by sliding the microphone base while pressing the tab.

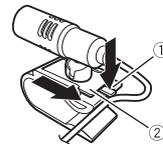

- 1 Tab
- 2 Microphone base

- 2 Mount the microphone on the steering column.

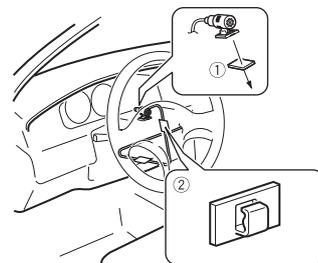

- 1 Double-sided tape
- 2 Clamps
Use separately sold clamps to secure the lead where necessary inside the vehicle.

NOTE

Install the microphone on the steering column, keeping it away from the steering wheel.

Adjusting the microphone angle

The microphone angle can be adjusted.



PIONEER CORPORATION

28-8, Honkomagome 2-chome, Bunkyo-ku,
Tokyo 113-0021, Japan

PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.
TEL: (800) 421-1404

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium/Belgique
TEL: (0) 3/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

2 Jalan Kilang Barat, #07-01, Singapore 159346
TEL: 65-6378-7888

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

5 Arco Lane, Heatherton, Victoria, 3202 Australia
TEL: (03) 9586-6300

PIONEER ELECTRONICS DE MÉXICO S.A. DE C.V.

Blvd. Manuel Ávila Camacho 138, 10 piso
Col.Lomas de Chapultepec, México, D.F. 11000
Tel: 52-55-9178-4270, Fax: 52-55-5202-3714

先鋒股份有限公司

台北市內湖區瑞光路407號8樓
電話：886-(0)2-2657-3588

先鋒電子（香港）有限公司

香港九龍長沙灣道909號5樓
電話：852-2848-6488

Pioneer

DMH-342EX

DMH-341EX

DMH-340EX

DMH-241EX

DMH-240EX

RDS AV RECEIVER

AVH-241EX

AVH-240EX

DVD RDS AV RECEIVER

Operation Manual



Important (Serial number)

The serial number is located on the bottom of this unit. For your own security and convenience, be sure to record this number on the enclosed warranty card.

Contents

Thank you for buying this Pioneer product.
Please read through these instructions so you will know how to operate your model properly. After you have finished reading the instructions, keep this document in a safe place for future reference.

Important

The screen shown in the examples may differ from actual screens, which may be changed without notice for performance and function improvements.

■ Precaution	3
■ Parts and controls	8
■ Basic operation	11
■ Bluetooth®	15
■ AV source	19
■ Radio	20
■ Disc	21
■ Compressed files	24
■ iPhone	29
■ WebLink™	31
■ AUX	33
■ Camera View	34
■ Settings	35
Displaying the setting screen	35
System Settings.....	35
Theme Settings	38
Audio Settings.....	38
■ Other functions	39
■ Appendix	40

Precaution

Important safety information

WARNING

- Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards.
- Do not allow this product to come into contact with liquids. Electrical shock could result. Also, damage to the product, smoke, and overheating could result from contact with liquids.
- If liquid or foreign matter should get inside this product, park your vehicle in a safe place, turn the ignition switch off (ACC OFF) immediately and consult your dealer or the nearest authorized Pioneer Service Station. Do not use this product in this condition because doing so may result in a fire, electric shock, or other failure.
- If you notice smoke, a strange noise or odor from this product, or any other abnormal signs on the LCD screen, turn off the power immediately and consult your dealer or the nearest authorized Pioneer Service Station. Using this product in this condition may result in permanent damage to the system.
- Do not disassemble or modify this product, as there are high-voltage components inside which may cause an electric shock. Be sure to consult your dealer or the nearest authorized Pioneer Service Station for internal inspection, adjustments or repairs.
- Do not ingest the battery, Chemical Burn Hazard.

(The remote control supplied or sold separately with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Before using this product, be sure to read and fully understand the following safety information:

- Do not operate this product, any applications, or the rear view camera option (if purchased) if doing so will divert your attention in any way from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating this product, pull over, park your vehicle in a safe location and apply the parking brake before making the necessary adjustments.
- Never set the volume of this product so high that you cannot hear outside traffic and emergency vehicles.
- To promote safety, certain functions are disabled unless the vehicle is stopped and the parking brake is applied.
- Keep this manual handy as a reference for operating procedures and safety information.

- Do not install this product where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags or hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.
- Please remember to fasten your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled.
- Never use headphones while driving.
- Rear visibility systems (backup cameras) are required in certain new vehicles sold in the U.S. and Canada. U.S. regulations began according to a two year phase-in on May 1, 2016, and both the U.S. and Canada require that all such vehicles manufactured on or after May 1, 2018 have rear visibility systems. **Owners of vehicles equipped with compliant rear visibility systems should not install or use this product in a way that alters or disables that system's compliance with applicable regulations.** If you are unsure whether your vehicle has a rear visibility system subject to the U.S. or Canadian regulations, please contact the vehicle manufacturer or dealer.

If your vehicle has a compliant backup camera that displays the backup view through the factory receiver, do not use the Pioneer receiver unless it is connected to and displays the same view as the factory backup camera. Connection to the factory backup camera will require an adaptor, sold separately. Not all vehicles may be able to connect. Please check with a qualified professional installer for installation options specific to your vehicle.

Parking brake interlock

Certain functions (such as viewing of video image and certain touch panel key operations) offered by this product could be dangerous (possibly resulting in serious injury or death) and/or unlawful if used while driving. To prevent such functions from being used while the vehicle is in motion, there is an interlock system that senses when the parking brake is set and when the vehicle is moving. If you attempt to use the functions described above while driving, they will become disabled until you stop the vehicle in a safe place, and (1) apply the parking brake, (2) release the parking brake, and then (3) apply the parking brake again. Please keep the brake pedal pushed down before releasing the parking brake.

To ensure safe driving

WARNING

- **LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE PARKING BRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE.**

- Do not take any steps to tamper with or disable the parking brake interlock system which is in place for your protection. Tampering with or disabling the parking brake interlock system could result in serious injury or death.
- To avoid the risk of damage and injury and the potential violation of applicable laws, this product is not for use with a video image that is visible to the driver.

• In some countries the viewing of video image on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed.

If you attempt to watch video image while driving, the warning **“Viewing of front seat video source while driving is strictly prohibited.”** will appear on the screen. To watch video image on this display, stop the vehicle in a safe place and apply the parking brake. Please keep the brake pedal pushed down before releasing the parking brake.

When using a display connected to the video output terminal

The video output terminal is for connection of a display to enable passengers in the rear seats to watch video images.

WARNING

NEVER install the rear display in a location that enables the driver to watch video images while driving.

To avoid battery exhaustion

Be sure to run the vehicle engine while using this product. Using this product without running the engine can drain the battery.

WARNING

Do not install this product in a vehicle that does not have an ACC wire or circuitry available.

Rear view camera

With an optional rear view camera, you are able to use this product as an aid to keep an eye on trailers, or backing into a tight parking spot.

WARNING

- SCREEN IMAGE MAY APPEAR REVERSED.
- USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.

CAUTION

The rear view mode is to use this product as an aid to keep an eye on the trailers, or while backing up. Do not use this function for entertainment purposes.

Handling the USB connector

CAUTION

- To prevent data loss and damage to the storage device, never remove it from this product while data is being transferred.
- Pioneer cannot guarantee compatibility with all USB mass storage devices and assumes no responsibility for any loss of data on media players, iPhone, smartphone, or other devices while using this product.
- It may not be recognized properly by this product if a USB device that had been incorrectly disconnected from the computer is connected.

Failure to operate

After-sales service for Pioneer products

Please contact the dealer or distributor from which you purchased the product for after-sales service (including warranty conditions) or any other information. In case the necessary information is not available, please contact the companies listed below.

Please do not ship your product to the companies at the addresses listed below for repair without making advance contact.

–USA&CANADA

Pioneer Electronics (USA) Inc.
CUSTOMER SUPPORT DIVISION
P.O. Box 1760 Long Beach, CA 90801-1760
800-421-1404

For warranty information, please see the Limited Warranty sheet included with your product.

Visit our website

Visit us at the following site:

<https://www.pioneerelectronics.com/PUSA/>

<https://www.pioneerelectronics.ca/POCEN/>

- 1** Register your product.
- 2** Receive updates on the latest products and technologies.
- 3** Download owner's manuals, order product catalogs, research new products, and much more.
- 4** Receive notices of software upgrades and software updates.

Protecting the LCD panel and screen

- Do not expose the LCD screen to direct sunlight when this product is not used. This may result in LCD screen malfunction due to the resulting high temperatures.

- When using a cellular phone, keep the antenna of the cellular phone away from the LCD screen to prevent disruption of the video in the form of spots, colored stripes, etc.
- To protect the LCD screen from damage, be sure to touch the touch panel keys only with your finger and do so gently.


Notes on internal memory

- The information will be erased by disconnecting the yellow lead from the battery (or removing the battery itself).
- Some of the settings and recorded contents will not be reset.

About this manual

- This manual uses diagrams of actual screens to describe operations. However, the screens on some units may not match those shown in this manual depending on the model used.
- When an iPhone is connected to the unit, the source name on the unit appears as [iPod]. Please note that this unit only supports iPhone regardless of the source name. For details of iPhone compatibility, refer to Compatible iPhone models (page 49).

 
Meanings of symbols used in this manual

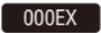	This indicates model names that are supported by the described operations.
	This indicates to touch the appropriate soft key on the touch screen.
	This indicates to touch and hold the appropriate soft key on the touch screen.


Parts and controls


Main unit

DMH- 342EX 341EX 340EX

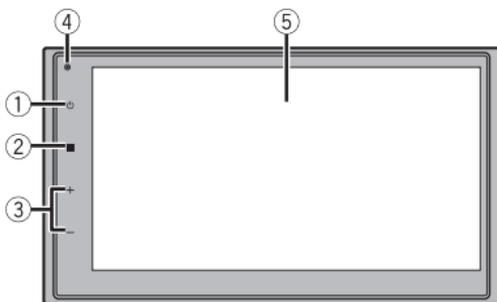

DMH- 241EX 240EX

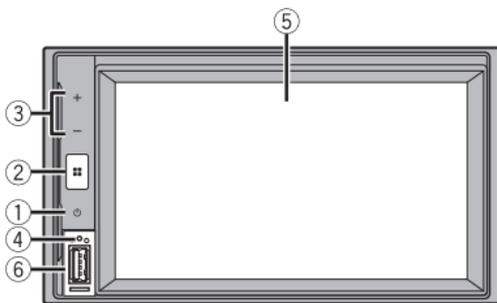

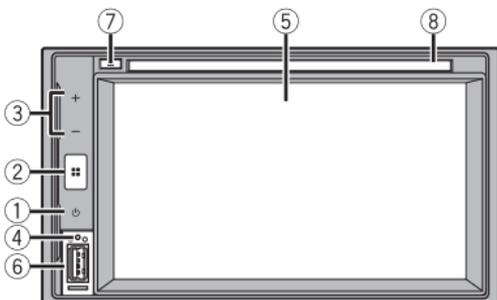

<p>①</p> 	<p>Press to turn off the display information. To turn on the display information, press again. Press and hold to power off. To power back on, press again.</p> <p>TIP</p> <p>If you power the unit off, you can turn off almost all functions. The unit turns on by operating the following functions:</p> <ul style="list-style-type: none"> • A rear view camera image is input when the vehicle is in reverse. • The ignition switch is turned off (ACC OFF), then turned on (ACC ON). <p>NOTE</p> <p>If you display the image from the back camera while the power is off, the image may be displayed on the rear monitor instead.</p>
<p>②</p> 	<p>Press to display the top menu screen. Press and hold to mute or unmute.</p>
<p>③</p>	<p>VOL (+/-)</p>
<p>④</p>	<p>RESET</p> <p>Press to reset the microprocessor (page 11).</p>
<p>⑤</p>	<p>LCD screen</p>
<p>⑥</p>	<p>USB port</p>
<p>⑦</p> 	<p>Press to eject a disc.*</p>
<p>⑧</p>	<p>Disc loading slot*</p>


* AVH-241EX, AVH-240EX

Remote control

342EX

341EX

241EX

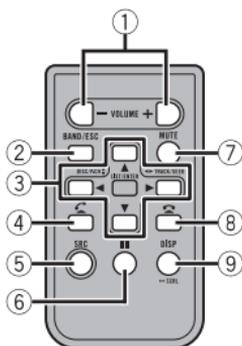

①	Volume (+/-)	
②	BAND/ESC	Press to select the tuner band when tuner is selected as a source.
③	◀ ▶	Press to select the previous or next track/file. Press and hold to perform fast reverse or fast forward. Press to perform seek tuning (Radio).
	▲ ▼	Press to select the next or previous folder. Press to select a preset channel (Radio).
④	☎	Press to answer a call.
⑤	SRC	Press to switch the sources.
⑥	⏸	Press to pause or resume playback.
⑦	MUTE	
⑧	☎	Press to end a call.
⑨	DISP	Press to switch the display on/off.

340EX

240EX

The remote control is sold separately.

Basic operation

Resetting the microprocessor

⚠ CAUTION

- Pressing the RESET button resets settings and recorded contents to the factory settings.
 - Do not perform this operation when a device is connected to this product.
 - Some of the settings and recorded contents will not be reset.
- The microprocessor must be reset under the following conditions:
 - Prior to using this product for the first time after installation.
 - If this product fails to operate properly.
 - If there appears to be problems with the operation of the system.

1 Turn the ignition switch OFF.

2 Press RESET with a pen tip or other pointed tools.
Settings and recorded contents are reset to the factory settings.

Preparing the remote control



342EX

341EX

241EX

Remove the insulation sheet before use.

How to replace the battery

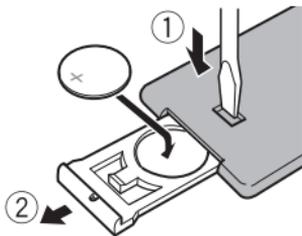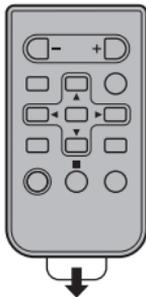

Insert the CR2025 (3 V) battery with the plus (+) and minus (-) poles orientated properly.

⚠ WARNING

Batteries (battery pack or batteries installed) must not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION

- Remove the battery if the remote control is not used for a month or longer.
- There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
- Do not expose a battery to high or low extreme temperatures during use, storage or transportation.
- Do not dispose of a battery into fire or a hot oven, or crush mechanically or cut a battery, that can result in an explosion.
- Do not handle the battery with metallic tools.
- Do not store the battery with metallic objects.
- If the battery leaks, wipe the remote control completely clean and install a new battery.
- When disposing of used batteries, please comply with governmental regulations or environmental public institution's rules that apply in your country/area.
- "Perchlorate Material – special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate. (Applicable to California, U.S.A.)"

Using the remote control

Point the remote control in the direction of the front panel to operate.

NOTE

The remote control may not function properly in direct sunlight.

Important

- Do not store the remote control in high temperatures or direct sunlight.
- Do not let the remote control fall onto the floor, where it may become jammed under the brake or gas pedal.

Using the touch panel

You can operate this product by touching the keys on the screen directly with your fingers.


NOTE

To protect the LCD screen from damage, be sure to touch the screen only with your finger gently.

Common touch panel keys

- : Returns to the previous screen.
- : Close the screen.

Operating list screens

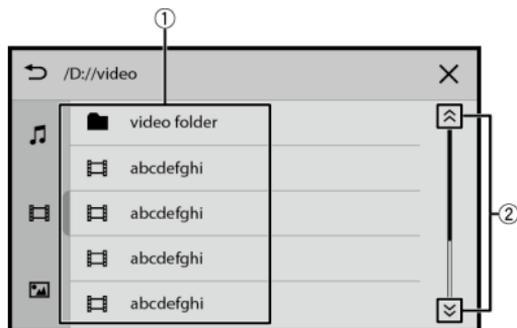


①

Touching an item on the list allows you to narrow down the options and proceed to the next operation.

②

Touch to view any hidden items.


Operating the time bar

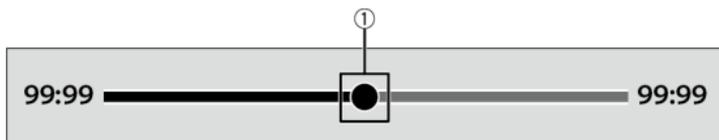

①

You can change the playback point by touching in the bar.

Top menu screen

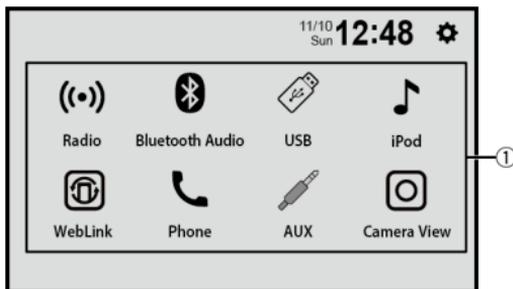

①

Source icons

TIP

You can display the hidden source icon(s) by swiping left or right on the screen. (some models)



Settings (page 35)

Bluetooth®

Bluetooth connection

- 1 Turn on the Bluetooth function on the device.
- 2 Press .
- 3 Touch [Phone] or [Bluetooth Audio].
The unit name is shown in the display.
- 4 Select the unit name shown in the mobile device display.
- 5 Perform the pairing operation by the mobile device and this unit.
After the device is successfully registered, a Bluetooth connection is established by the system.

TIP

To disconnect the connection, touch the connected device name on the top of the phone number input screen (page 16).

NOTE

You need to disconnect the Bluetooth connection with connected mobile device to connect another mobile device.

Hands-free phoning

To use this function you need to connect your cellular phone to this product via Bluetooth in advance (page 15).

CAUTION

For your safety, avoid talking on the phone as much as possible while driving.

Making a phone call

- 1 Press .
- 2 Touch [Phone].
The phone menu screen appears.
- 3 Touch one of the call icons on the phone menu screen.

	Synchronizes the contacts and call history on your phone manually.
	<p>Using phone book Select a contact from the phone book. Touch the contact on the list.</p> <p>TIP You can use initial search by touching the character at the right side of the phone book screen.</p>
	<p>Using call history Make a phone call by touching the one of the icon from the received call , dialed call , or missed call .</p>
	<p>Direct phone number input Touch the number keys to enter the phone number then touch  to make a call.</p> <p>TIP You can redial to the last dialed number by touching  without entering the number.</p>

► To end the call

- 1 Touch .

Receiving a phone call

- 1 Touch  to answer the call.
Touch  to end the call.

Voice recognition function (for iPhone)

By connecting your iPhone to this product, you can use the voice recognition function on this product.

Switching the audio output

You can switch the audio output between this unit and the connected mobile device.

- 1 Touch  when calling.

The audio output switches each time by touching the icon.

TIP

Touch  to mute or unmute the connected microphone.

► General notes

- Connection to all cellular phones featuring Bluetooth wireless technology is not guaranteed.
- The line-of-sight distance between this product and your cellular phone must be 10 meters or less when sending and receiving voice and data via Bluetooth technology.
- With some cellular phones, the ring sound may not be output from the speakers.
- If private mode is selected on the cellular phone, hands-free phoning may be disabled.

► Registration and connection

- Cellular phone operations vary depending on the type of cellular phone. Refer to the instruction manual that came with your cellular phone for detailed instructions.
- When phone book transfer does not work, disconnect your phone and then perform pairing again from your phone to this product.

► Making and receiving calls

- You may hear a noise in the following situations:
 - When you answer the phone using the button on the phone.
 - When the person on the other end of the line hangs up the phone.
- If the person on the other end of the line cannot hear the conversation due to an echo, decrease the volume level for hands-free phoning.
- With some cellular phones, even after you press the accept button on the cellular phone when a call comes in, hands-free phoning may not be performed.
- The registered name in the phone book is displayed if the phonebook is transferred to this unit.

► The received call and dialed number histories

- You cannot make a call to the entry of an unknown user (no phone number) in the received call history.

► Phone book transfers

- If there are more than 1 000 phone book entries on your cellular phone, not all entries may download completely.
- Depending on the phone, this product may not display the phone book correctly.
- If the phone book in the phone contains image data, the phone book may not be transferred correctly.
- Depending on the cellular phone, phone book transfer may not be available.

Bluetooth audio

Before using the Bluetooth audio player, register and connect the device to this product (page 15).

NOTES

- Depending on the Bluetooth audio player connected to this product, the available operations with this product may be limited to the following two levels:
 - A2DP (Advanced Audio Distribution Profile): Only playing back songs on your audio player is possible.
 - A2DP and AVRCP (Audio/Video Remote Control Profile): Playing back, pausing, selecting songs, etc., are possible.
- Depending on the Bluetooth device connected to this product, the available operations with this product may be limited or differ from the descriptions in this manual.
- While you are listening to songs on your Bluetooth device, refrain from operating the phone function as much as possible. If you try operating, the signal may cause noise for song playback.
- When you are talking on the Bluetooth device connected to this product via Bluetooth, it may pause playback.

1 Press .

2 Touch [Bluetooth Audio].

The Bluetooth audio playback screen appears.

Basic operation

	Switches between playback and pause.
	 Skips files forward or backward.
	 Performs fast forward or fast reverse.
	Sets a repeat play range.
	Plays files in random order.

AV source

Supported AV source

You can play or use the following sources with this product.

- Radio
- CD*
- ROM (compressed audio or video files on discs)*
- DVD-Video*
- USB

The following sources can be played back or used by connecting an auxiliary device.

- iPhone
- Bluetooth audio
- AUX

* AVH-241EX, AVH-240EX

Selecting a source

1 Press .

2 Touch the source icon.

TIP

You can display the hidden source icon(s) by swiping left or right on the screen. (some models)

Radio

Starting procedure

- 1 Press .
- 2 Touch [Radio].
The Radio screen appears.

Basic operation

	 <p>Recalls the preset channel stored to a key from memory.</p>
	 <p>Stores the current broadcast frequency to a key.</p>
	<p>Selects the FM1, FM2, FM3, AM1 or AM2 band.</p>
	 <p>Automatically stores the six strongest broadcast frequencies.</p> <p>NOTES</p> <ul style="list-style-type: none"> • Storing broadcast frequencies with BSM may replace those you have already saved. • Previously stored broadcast frequencies may remain stored if the number of frequencies stored has not reached the limit.
	 <p>Manual tuning</p>
	 <p>Seek tuning Skips to the nearest station from the current frequency.</p>
	<p>Tunes into only radio stations with sufficiently strong signals.</p> <p>NOTE Only available with the stations with the strongest signals when [Local] is set to on.</p>
	<p>Switches to display or hide the radio station name.</p>

NOTE
Some functions are available only when you receive the FM band.

Disc

AVH- 241EX 240EX

Inserting and ejecting a disc

You can play a normal music CD, Video-CD, or DVD-Video using the built-in drive of this product.

CAUTION

Do not insert anything other than a disc into the disc-loading slot.

Inserting a disc

- 1 **Insert a disc into the disc-loading slot.**
The source changes and then playback will start.

NOTE

If the disc is already set, select [Disc] as the playing source.

Ejecting a disc

- 1 Press .

Basic operation

Audio source

	Track number indicator
	Switches between playback and pause.




	 Skips files forward or backward.
	 Performs fast forward or fast reverse.
	Sets a repeat play for the current disc/the current track.
	Plays or does not play tracks in random order.
	Selects a track from the list. Touch a track on the list to play back.

Video source

CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

	Switches between playback and pause.
	Skips files/chapters forward or backward.
	Performs fast forward or fast reverse.
	Stops playback.
	Displays the DVD menu.
	NOTE This function may not work properly with some DVD disc content. In that case, use touch panel keys to operate the DVD menu.
	Sets a repeat play for all files/the current chapter/the current title.
	Switches screen display mode.

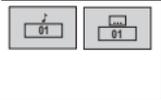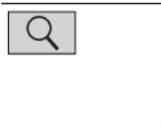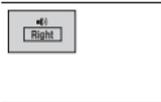  	<p>Switches the audio/subtitle language.</p> <p>NOTE This function is available for DVD-Video.</p>
	<p>Displays the hidden function bar.</p>
	<p>Searches for the part you want to play. Select search target, input the desired number then touch .</p> <p>TIP To cancel an input number, touch [C].</p>
	<p>Selects the audio output.</p> <p>NOTE This function is available for Video-CDs and DVDs recorded with LPCM audio.</p>
	<p>Changes the viewing angle (Multi-angle). This function is available for DVDs featuring multi-angle recordings.</p>
	<p>Resumes playback (Bookmark). This function is available for DVD-Video. You can memorize one point as a Bookmark for a disc. To clear the bookmark on the disc, touch and hold this key.</p>
	<p>Returns and begins playback from the specified point. This function is available for DVD-Video.</p>
	<p>Displays the DVD menu keypad. If items on the DVD menu appear, the touch panel keys may overlay them. If so, select an item using these touch panel keys. Touch , , , or  to select the menu item then touch .</p> <p>NOTE The way to display the menu differs depending on the disc.</p> <p>TIP If you touch , you can operate the DVD menu directly.</p>

Compressed files

Inserting and ejecting media

You can play compressed audio, compressed video, or still image files stored in a disc or an external storage device.

CAUTION

Do not insert anything other than a disc into the disc-loading slot.

Inserting a disc

▶ AVH-241EX/AVH-240EX

- 1 Insert a disc into the disc-loading slot.
The source changes and then playback will start.

NOTE

If the disc is already set, select [Disc] as the playing source.

Ejecting a disc

▶ AVH-241EX/AVH-240EX

- 1 Press .

Plugging a USB storage device

▶ DMH-342EX/DMH-341EX/DMH-340EX

- 1 Pull out the plug from the USB port of the USB cable.
- 2 Plug a USB storage device into the USB cable.

▶ DMH-241EX/DMH-240EX/AVH-241EX/AVH-240EX

- 1 Open the USB port cover.
- 2 Plug in the USB storage device using an appropriate cable.

CAUTION

Use a USB cable (sold separately) to connect the USB device as any device connected directly to the unit will protrude out from the unit, which could be dangerous.

NOTES

- This product may not achieve optimum performance with some USB storage devices.
 - Connection via a USB hub is not possible.
 - A USB cable is required for connection.*
- * DMH-342EX, DMH-341EX, DMH-340EX

Unplugging a USB storage device

- 1 Pull out the USB storage device from the USB cable.

NOTES

- Check that no data is being accessed before pulling out the USB storage device.
- Turn off (ACC OFF) the ignition switch before unplugging the USB storage device.

Starting procedure**For Disc****▶ AVH-241EX/AVH-240EX**

- 1 Insert the disc.

TIP

If the disc is already set, select [Disc] as the playing source.

For USB

- 1 Plug the USB storage device into the USB cable.

TIP

You can also start this source by pressing  then touching [USB].

Basic operation**Audio source**

Switches between playback and pause.

	<p> Skips files forward or backward.</p>
	<p> Performs fast forward or fast reverse.</p>
	<p>Sets a repeat play range for all files/the current folder/the current file.</p>
	<p>Plays files or does not play in random order.</p>
	<p>Selects a file from the list. Touch a file on the list to playback.</p> <p>TIPS</p> <ul style="list-style-type: none"> • Touching a folder on the list shows its contents. You can play a file on the list by touching it. • You can switch the following media file types. <ul style="list-style-type: none"> - : Compressed audio files - : Compressed video files - : Image files <p>NOTE</p> <p>The files and folders displayed depend on the media. Some files and folders may not be displayed if there are 1 300 files or more in the media, if the files contain additional information, or if many folders are registered.</p>
	<p>Displays the hidden function bar. (only for disc)</p>
	<p>Selects the previous folder or the next folder. (only for disc)</p>
	<p>Switches the current music information display. (only for disc)</p>

Video source

CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

	<p>Switches between playback and pause.</p>
--	--

	Stops playback then displays playlist.
	Skips files forward or backward.
	Performs fast forward or fast reverse. (only for USB)
	Performs fast forward or fast reverse. (only for disc)
	Performs fast forward or fast reverse. (only for disc)
	Sets a repeat play range for all files/the current folder/the current file.
	<p>Selects a file from the list. Touch a file on the list to playback.</p> <p>TIPS</p> <ul style="list-style-type: none"> • Touching a folder on the list shows its contents. You can play a file on the list by touching it. • You can switch the following media file types. <ul style="list-style-type: none"> - : Compressed audio files - : Compressed video files - : Image files <p>NOTE</p> <p>The files and folders displayed depend on the media. Some files and folders may not be displayed if there are 1 300 files or more in the media, if the files contain additional information, or if many folders are registered.</p>
	Displays the hidden function bar. (only for USB)
	Selects the previous folder or the next folder. (only for disc)
	Switches screen display mode.
	Switches the audio/subtitle language. (only some files)

Still image source

	Switches between playback and pause.
--	---

	Stops playback then displays playlist.
	Skips files forward or backward.
	Rotates the displayed picture 90° counterclockwise.
	Sets a repeat play range for all files/the current folder.
	<p>Selects a file from the list. Touch a file on the list to playback.</p> <p>TIPS</p> <ul style="list-style-type: none"> • Touching a folder on the list shows its contents. You can play a file on the list by touching it. • You can switch the following media file types. <ul style="list-style-type: none"> - : Compressed audio files - : Compressed video files - : Image files <p>NOTE</p> <p>The files and folders displayed depend on the media. Some files and folders may not be displayed if there are 1 300 files or more in the media, if the files contain additional information, or if many folders are registered.</p>
	Displays the hidden function bar.
	Switches screen display mode.

iPhone

NOTE

iPhone may be referred to as iPod in this manual.

Starting procedure

When connecting an iPhone to this product, the settings are automatically configured according to the device to be connected. For details of the compatibility, refer to Compatible iPhone models (page 49).

NOTE

[iPhone USB Settings] is set to [iPod] (page 35).

- 1 Connect your iPhone via USB.**
Playback is automatically performed.

TIP

You can also start this source by pressing  then touching [iPod].

NOTE

For USB connection, refer to the Installation Manual.

Basic operation

	<p>Switches between playback and pause.</p>
	<p>Skips files forward or backward.</p>
	<p>Performs fast forward or fast reverse.</p>
	<p>Sets a repeat play range for the selected list or album/the current file.</p>
	<p>Plays songs within the selected list/album randomly.</p>

**Selects a song from the list.**

Touch the category then the title of the list to playback of the selected list.

TIP

You can switch the song list by selecting the character in the initial bar while the initial bar is displayed.

NOTE

Only 1 300 songs in the iPhone are available in the list if the iPhone has more than 1 300 songs. The number of songs available may be less than 1 300, due to the additional information included in the songs. Available songs depend on the iPhone.

NOTE

Depending on the generation or version of the iPhone, some functions may not be available.

WebLink™

You can operate WebLink compatible applications with finger gestures such as tapping, dragging, scrolling, or flicking on the screen of this product.

NOTES

- The supported finger gestures may vary depending on the WebLink compatible application.
- To use WebLink, you must first install the WebLink Host app on the iPhone or smartphone. For details about the WebLink Host app, visit the following site: <https://www.abaltatech.com/weblink/>
- Be sure to read Using app-based connected content (page 49) before you perform this operation.
- Copyright protected files such as DRM cannot be played.

WARNING

Certain uses of the iPhone or smartphone may not be legal while driving in your jurisdiction, so you must be aware of and obey any such restrictions. If in doubt as to a particular function, only perform it while the car is parked. No feature should be used unless it is safe to do so under the driving conditions you are experiencing.

Using WebLink

Important

- Pioneer is not responsible for content or functions accessed via WebLink, which are the responsibility of the application and content providers.
- Availability of non-Pioneer content and services, including apps and connectivity, may change or discontinue without notice.
- When using WebLink with the Pioneer product, available content and functions will be limited while driving.
- WebLink allows access to applications other than those listed, subject to limitations while driving.

Starting procedure

For iPhone users

System requirement

iOS 13.4 or higher

NOTE

[iPhone USB Settings] is set to [WebLink] (page 35).

- 1 **Unlock your iPhone and connect it to this product via USB.**
WebLink is automatically launched.

TIP

You can also start this source by pressing  then touching [WebLink].

NOTE

For USB connection, refer to the Installation Manual.

For smartphone (Android™) users

System requirement

Android 7.0 or higher

NOTE

The video playback capability depends on the connected Android device.

1 Unlock your smartphone and connect it to this product via USB.

WebLink is automatically launched.

TIP

You can also start this source by pressing  then touching [WebLink].

NOTES

- For USB connection, refer to the Installation Manual.
- Make sure that file transfer mode for USB connection is enabled on your smartphone if WebLink does not start automatically.

Basic operation

Touch the desired application icon after the WebLink app is launched. The desired application is launched, and the application operation screen appears.



Displays the main menu of the WebLink source screen.

TIPS

- If you connect your device to this product while a WebLink compatible application is already running, the application operation screen will appear on this product.
- Check the Bluetooth connection between the mobile device and this unit if there is no sound output from this unit (page 15).

AUX

You can display the video image output by the device connected to AUX input.

⚠ CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

NOTE

A Mini-jack AV cable (sold separately) is required for connection. For details, refer to the Installation Manual.

Starting procedure

- 1 Press .
- 2 Touch [AUX].
The AUX screen appears.

Camera View

You can display the video image output by the device connected to camera input. For details, refer to the Installation Manual.

CAUTION

Rear camera function is only as an assistant tool for driving. It cannot replace the drivers' attentions and judgement.

▶Rear view camera

This product features a function that automatically switches to the full-screen image of the rear view camera installed on your vehicle when the shift lever is in the REVERSE (R) position.

▶Camera for Camera View mode

Camera View can be displayed at all times. Note that with this setting, the camera image is not resized to fit, and that a portion of what is seen by the camera is not viewable.

CAUTION

Pioneer recommends the use of a camera which outputs mirror reversed images, otherwise the screen image may appear reversed.

- Immediately verify whether the display changes to the rear view camera image when the shift lever is moved to REVERSE (R) from another position.

Starting procedure

- 1 Press .
AVH-241EX, AVH-240EX
Press  then swipe left on the screen.
- 2 Touch [Camera View] for connected camera view.
The video image is displayed on the screen.

Settings

You can adjust various settings in the main menu.

Displaying the setting screen

- 1 Press .
- 2 Touch .
- 3 Touch one of the following categories, then select the options.
 - : System Settings (page 35)
 - : Theme Settings (page 38)
 - : Audio Settings (page 38)

NOTE

Some settings are available only when you stop your vehicle in a safe place and apply the parking brake.

System Settings

Menu Item	Description
[System Language]	Select the system language. NOTES <ul style="list-style-type: none"> • If the embedded language and the selected language setting are not the same, the text information may not display properly. • Some characters may not be displayed properly.
[iPhone USB Settings] [iPod], [WebLink]	Select the desired function to use when the iPhone is connected via USB.
[Date & Time]	Set the date and time by touching  or  .
	TIPS <ul style="list-style-type: none"> • You can change the time display format to [AM], [PM] or [24H]. • You can change the order of the month/date display format.
[Back Camera Input]	Select to enable or disable camera view or rear view camera function.
[Dimmer Trigger] [Auto] [Day] [Night]	Select the screen brightness automatically according to the vehicle's lighting switch or select the brightness manually by [Day] or [Night].
[Dimmer Value]	Adjust the display brightness in the day time or night time.

Menu Item	Description
[Picture Adjustment] [Brightness] [Contrast] [Color] [Hue] [Sharpness]	Adjust the image quality while playing Video-CD *1, DVD-Video *1, disc *1 / USB video. TIP Adjust the image quality of the camera image by touching anywhere on the screens while in Camera View mode.
[Restore Settings]	Touch [OK] to restore the settings to the default settings. ⚠ CAUTION Do not turn off the engine while restoring the settings. NOTES <ul style="list-style-type: none"> • The source is turned off and the Bluetooth connection is disconnected before the process starts. • Before starting the restore process, disconnect any device that is connected to the USB port. Otherwise, some settings may not be restored correctly.
[System Information]	Displaying the firmware version.
[License]	Displaying the open source license.
[Touch panel calibration]*2	Adjust the response positions of the touch panel screen if the touch panel keys on the screen deviate from the actual positions. 1 Touch four corners of the [+] mark displayed on the screen. 2 Touch the center of the [+] mark displayed on the screen. 3 Touch [OK]. The adjustment results are saved. NOTES <ul style="list-style-type: none"> • Do not use sharp pointed tools such as ballpoint or mechanical pens. They may damage the screen. • Do not turn off the engine while saving the adjusted position data.

Menu Item	Description
[TV Aspect]*1	<p>Set the aspect ratio suitable for your rear display 16:9 (wide screen display) or 4:3 (regular display). (We recommend use of this function only when you want to fit the aspect ratio to the rear display.)</p> <p>NOTES</p> <ul style="list-style-type: none"> When using a regular display, select either [Letter Box] or [Pan Scan]. Selecting [16:9] may result in an unnatural image. If you select the TV aspect ratio, this product's display will change to the same setting. When playing discs that do not have a panscan system, the disc is played back with [Letter Box] even if you select the [Pan Scan] setting. Confirm whether the disc package bears the  mark. The TV aspect ratio cannot be changed for some discs. For details, refer to the disc's instructions.
[16:9]	Displays the wide screen image (16:9) as it is.
[Letter Box]	Makes the image in the shape of a letterbox with black bands on the top and bottom of the screen.
[Pan Scan]	Cuts the image short on the right and left sides of the screen.
[Parental]*1	<p>Set restrictions so that children cannot watch violent or adult-oriented scenes.</p> <p>The first time you select [Parental], set a password. Next, enter the password you set and set the parental lock level. The lower the level is set, the tighter the restriction is applied.</p> <p>NOTES</p> <ul style="list-style-type: none"> We recommend keeping a record of the password in case you forget it. The parental lock level is recorded on the disc. You can confirm it by looking at the disc package, the included booklet, or the disc itself. You cannot use parental lock with discs that do not feature a recorded parental lock level. With some discs, parental lock operates to skip certain scenes only, after which normal playback resumes. For details, refer to the disc's instructions.

*1 AVH-241EX, AVH-240EX

*2 DMH-241EX, DMH-240EX, AVH-241EX, AVH-240EX

Theme Settings

NOTE

This setting is not available when the video/image file is in playback.

Menu Item	Description
[Background]	Select the wall paper from the preset items in this product.
[Illumination]*	Select an illumination color from the preset list.

* DMH-342EX, DMH-341EX, DMH-340EX

Audio Settings

Menu Item	Description
[EQ] [Flat] [Super Bass] [Powerful] [Natural] [Vocal] [Custom]	Select or customize the equalizer curve.
[Fader/Balance]	Touch  or  to adjust the front/rear speaker balance. Set front/rear speaker balance to 0 when using a dual speaker system. Touch  or  to adjust the left/right speaker balance. TIP You can also set the value by touching the desired place on the displayed table.
[Volume]	Adjust the volume level by touching [+]/[-].
[Main Volume]	Other than Bluetooth audio
[Talking Volume]	Hands-free phone
[TA Volume]	Traffic announce
[Bluetooth Audio Volume]	Bluetooth audio
[Loudness] [Off] [Low] [Mid] [High]	Compensates for deficiencies in the low-frequency and high-frequency ranges at low volume.
[Bass Boost]	Adjust the bass boost level.
[Cutoff] [Front HPF] [Rear HPF] [Subwoofer LPF]	Adjust each speaker cutoff frequency value.
[Beep Tone]	Select off to disable the beep sound when the button is pressed or the screen is touched.

Other functions

Setting the time and date

You can adjust the date and time from [Date & Time] in the [System Settings] menu (page 35).

Restoring this product to the default settings

You can restore settings or recorded content to the default settings from [Restore Settings] in the [System Settings] menu (page 36).

Firmware update

When the latest software is released on our website, you can update the software of this unit (page 6).

CAUTION

- The USB storage device for updating must contain only the correct update file.
- Never turn this product off, disconnect the USB storage device while the firmware is being updated.
- You can only update the firmware when the vehicle is stopped and the parking brake is engaged.

- 1** Download the firmware update files into your computer.
- 2** Connect a blank (formatted) USB storage device to your computer then locate the correct update file and copy it onto the USB storage device.
- 3** Connect the USB storage device to this product (page 24).
- 4** Follow the on-screen instructions to finish updating the firmware.

NOTES

- This product will reset automatically after the firmware update is completed if the update is successful.
- If an error message appears on the screen, perform the above steps again.

Appendix

Troubleshooting

If you have problems operating this product, refer to this section. The most common problems are listed below, along with likely causes and solutions. If a solution to your problem cannot be found here, contact your dealer or the nearest authorized Pioneer service facility.

Common problems

A black screen is displayed, and operation is not possible using the touch panel keys.

- Power off mode is on.
 - Press  to release the mode.

Problems with the AV screen

The screen is covered by a caution message and the video cannot be shown.

- The parking brake lead is not connected or the parking brake is not applied.
 - Connect the parking brake lead correctly, and apply the parking brake.
- The parking brake interlock is activated.
 - Park your vehicle in a safe place and apply the parking brake.

The audio or video skips.

- This product is not firmly secured.
 - Secure this product firmly.

No sounds are produced. The volume level will not rise.

- Cables are not connected correctly.
 - Connect the cables correctly.

iPhone cannot be operated.

- The iPhone is frozen.
 - Reconnect the iPhone with the USB interface cable for iPhone.
 - Update the iPhone software version.
- An error has occurred.
 - Reconnect the iPhone with the USB interface cable for iPhone.
 - Park your vehicle in a safe place, and then turn off the ignition switch (ACC OFF). Subsequently, turn the ignition switch to on (ACC ON) again.
 - Update the iPhone software version.
- Cables are not connected correctly.
 - Connect the cables correctly.

Sound from the iPhone cannot be heard.

- The audio output direction may switch automatically when the Bluetooth and USB connections are used at the same time.
 - Use the iPhone to change the audio output direction.

No back camera image when the vehicle is in reverse.

- The back camera input setting on the receiver is set to Off.
 - Change the back camera setting to On in the settings menu. (Refer to the System Settings section of this manual to adjust.)
- The camera input may be loose or not connected.
 - Check the connection and make sure the male end of the camera is connected to the brown input on the back of the receiver. (Refer to the installation manual.)
- The reverse lead on the receiver may not be connected to the proper wire at the reverse lamp.

- Check the connection and make sure that the violet/white lead of the receiver is connected to the lead whose voltage changes when the shift lever is put in reverse. (Refer to the installation manual.)

Black screen displayed when the vehicle is in reverse, with no camera installed.

- Back camera input is set to On.
 - Turn the setting to Off in the settings menu. (Refer to the System Settings section of this manual to adjust.)

Problems with the phone screen

Dialing is impossible because the touch panel keys for dialing are inactive.

- Your phone is out of range for service.
 - Retry after re-entering the range for service.

Problems with Application screen

The screen is displayed, but operation does not work at all.

- An error has occurred.
 - Park your vehicle in a safe place, and then turn off the ignition switch (ACC OFF). Subsequently, turn the ignition switch to on (ACC ON) again.

The smartphone was not charged.

- Charging stopped because the temperature of the smartphone rose due to prolonged use of the smartphone during charging.
 - Disconnect the smartphone from the cable, and wait until the smartphone cools down.
- More battery power was consumed than was gained from charging.

- This problem may be resolved by stopping any unnecessary services on the smartphone.

Error messages

When problems occur with this product, an error message appears on the display. Refer to the table below to identify the problem, then take the suggested corrective action. If the error persists, record the error message and contact your dealer or your nearest Pioneer service center.

Common

AMP Error

- This product fails to operate or the speaker connection is incorrect; the protective circuit is activated.
 - Check the speaker connection. If the message fails to disappear even after the engine is switched off/on, contact your dealer or an authorized Pioneer Service Station for assistance.

Disc

Load Failed

- The disc is dirty.
 - Clean the disc.
- The disc is scratched.
 - Replace the disc.
- The disc is loaded upside down.
 - Check that the disc is loaded correctly.
- The disc format cannot be played back.
 - Replace the disc.
- The loaded disc is a type this product cannot play.
 - Check what type of disc it is.

File Error

- This type of file is not supported on this product.

- Select a file that can be played.

No Media Files

- There is no playable file on the disc.
 - Check that the files in the disc is compatible with this product.

Unplayable File

- This type of file is not supported on this product.
 - Select a file that can be played.

Audio Code Not Supported

- This type of file is not supported on this product.
 - Select a file that can be played.

USB storage device

HUB Error

- The connected USB hub is not supported by this product.
 - Directly connect the USB storage device to this product.

No Response

- This product cannot recognize the connected USB storage device.
 - Disconnect the device and replace it with another USB storage device.

Load Failed

- Failed to load the USB storage device.
 - Reconnect the USB storage device.
- Security for the connected USB storage device is enabled.
 - Follow the USB storage device instructions to disable security.
- This product cannot recognize the connected USB storage device.
 - Disconnect the device and replace it with another USB storage device.

Device Not Supported

- The connected USB storage device is not supported by this product.

- Disconnect your device and replace it with a compatible USB storage device.

File Error

- This type of file is not supported on this product.
 - Select a file that can be played.

No Media Files

- There is no playable file in the USB storage device.
 - Check that the files in the USB storage device are compatible with this product.

Unplayable File

- This type of file is not supported on this product.
 - Select a file that can be played.

Audio Code Not Supported

- This type of file is not supported on this product.
 - Select a file that can be played.

iPhone

Load Failed

- Failed to load the iPhone.
 - Disconnect the connected iPhone and check the iPhone is working properly.

Device Not Supported

- The connected iPhone is not supported by this product.
 - Disconnect your device and replace it with a compatible iPhone.

No Media Files

- There is no playable file in the iPhone.
 - Check that the files in the iPhone are compatible with this product.

No Music Files

- There is no playable file in the selected folder.

- Select a compatible file with this product in another folder.

Camera View & AUX

No Video Signal

- There is no video signal input.
 - Confirm whether the connection with the unit is established and there is an output from the external device.

Handling and care of discs

Some basic precautions are necessary when handling your discs.

Built-in drive and care

- Use only conventional, fully circular discs. Do not use shaped discs.
- Do not use cracked, chipped, warped, or otherwise damaged discs as they may damage the built-in drive.
- Use 12-cm discs. Do not use 8-cm discs or an adapter for 8-cm discs.
- When using discs that can be printed on label surfaces, check the instructions and the warnings of the discs. Depending on the discs, inserting and ejecting may not be possible. Using such discs may result in damage to this equipment.
- Do not attach labels, write on or apply chemicals to the surface of the discs.
- Do not attach commercially available labels or other materials to the discs.
- To clean a disc, wipe it with a soft cloth, moving outward from the center.
- Condensation may temporarily impair the built-in drive's performance.
- Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback

environment, storage conditions and so on.

- Road shocks may interrupt disc playback.
- Read the precautions for discs before using them.

Ambient conditions for playing a disc

- At extremely high temperatures, a temperature cutout protects this product by switching it off automatically.
- Despite our careful design of the product, small scratches that do not affect actual operation may appear on the disc surface as a result of mechanical wear, ambient conditions for use or handling of the disc. This is not a sign of the malfunction of this product. Consider it to be normal wear and tear.

Playable discs

AVH-241EX, AVH-240EX

DVD-Video



- **DVD** is a trademark of DVD Format/Logo Licensing Corporation.
- It is not possible to play DVD Audio discs. This DVD drive may not be able to play all discs bearing the marks shown above.



AVCHD recorded discs

This unit is not compatible with discs recorded in AVCHD (Advanced Video Codec High Definition) format. Do not insert in AVCHD discs. If inserted, the disc may not be ejected.

Playing DualDisc

- DualDiscs are two-sided discs that have a recordable CD for audio on one side and a recordable DVD for video on the other.
- Playback of the DVD side is possible with this product. However, since the CD side of DualDiscs is not physically compatible with the general CD standard, it may not be possible to play the CD side with this product.
- Frequent loading and ejecting of a DualDisc may result in scratches to the disc.
- Serious scratches can lead to playback problems on this product. In some cases, a DualDisc may become stuck in the disc-loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this product.
- Please refer to the manufacturer for more detailed information about DualDiscs.

Dolby®

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



Detailed information for playable media

Compatibility

Common notes about disc compatibility

- Certain functions of this product may not be available for some discs.
- Compatibility with all discs is not guaranteed.
- It is not possible to play DVD-RAM discs.
- Playback of discs may become impossible with direct exposure to sunlight, high temperatures, or depending on the storage conditions in the vehicle.

DVD-Video discs

- DVD-Video discs that have incompatible region numbers cannot be played on this DVD drive. The region number of the player can be found on this product's chassis.

DVD-R/DVD-RW/DVD+R/DVD+RW/ DVD-R DL (Dual Layer) discs

- Unfinalized discs which have been recorded with the Video format (video mode) cannot be played back.
- Discs which have been recorded with the Video Recording format (VR mode) cannot be played back.

- DVD-R DL (Dual Layer) discs which have been recorded with Layer Jump recording cannot be played back.
- For detailed information about recording mode, please contact the manufacturer of media, recorders, or writing software.

CD-R/CD-RW discs

- Unfinalized discs cannot be played back.
- It may not be possible to playback CD-R/CD-RW discs recorded on a music CD recorder or a computer because of disc characteristics, scratches or dirt on the disc, or dirt, scratches or condensation on the lens of the built-in drive.
- Playback of discs recorded on a computer may not be possible, depending on the recording device, writing software, their settings, and other environmental factors.
- Please record with the correct format. (For details, please contact manufacturer of media, recorders, or writing software.)
- Titles and other text information recorded on a CD-R/CD-RW disc may not be displayed by this product (in the case of audio data (CD-DA)).
- Read the precautions with CD-R/CD-RW discs before using them.

Common notes about the USB storage device

- Do not leave the USB storage device in any location with high temperatures.
- Depending on the kind of the USB storage device you use, this product may not recognize the storage device or files may not be played back properly.
- The text information of some audio and video files may not be correctly displayed.
- File extensions must be used properly.
- There may be a slight delay when starting playback of files on an USB storage device with complex folder hierarchies.
- Operations may vary depending on the kind of an USB storage device.

- It may not be possible to play some music files from USB because of file characteristics, file format, recorded application, playback environment, storage conditions, and so on.

USB storage device compatibility

- For details about USB storage device compatibility with this product, refer to Specifications (page 51).
- Protocol: bulk
- You cannot connect a USB storage device to this product via a USB hub.
- Partitioned USB storage device is not compatible with this product.
- Firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or gas pedal.
- There may be a slight delay when starting playback of audio files encoded with image data.
- Some USB storage devices connected to this product may generate noise on the radio.
- Do not connect anything other than the USB storage device.

The sequence of audio files on USB storage device.

For USB storage device, the sequence is different from that of USB storage device.

Handling guidelines and supplemental information

- Copyright protected files cannot be played back.

Media compatibility chart

General

- Maximum playback time of audio file stored in the disc: 60 h
- Maximum playback time of audio file stored on an USB storage device: 7.5 h (450 minutes)

CD-R/-RW, DVD-R/-RW/-R DL/+R/+RW

CODEC FORMAT	MP3, WMA, AAC, AVI, MPEG
--------------	--------------------------

USB storage device

CODEC FORMAT	MP3, WMA, WAV, AAC, FLAC, AVI, MPEG-PS, MP4, WMV, MKV, MOV, FLV, MPEG-TS
--------------	--

MP3 compatibility

- Ver. 2.x of ID3 tag is prioritized when both Ver. 1.x and Ver. 2.x exist.
- This product is not compatible with the following: MP3i (MP3 interactive), mp3 PRO, m3u playlist

SAMPLING FREQUENCY	8 kHz to 48 kHz
TRANSMISSION RATE	CBR (8 kbps to 320 kbps)/VBR
ID3 TAG	ver.1.0/1.1/2.2/2.3/2.4

WMA compatibility

- This product is not compatible with the following: Windows Media™ Audio 9.2 Professional, Lossless, Voice

SAMPLING FREQUENCY	32 kHz to 48 kHz
TRANSMISSION RATE	CBR (8 kbps to 320 kbps)/VBR

WAV compatibility

- The sampling frequency shown in the display may be rounded.

SAMPLING FREQUENCY	16 kHz to 48 kHz
QUANTIZATION BIT RATE	8 bit, 16 bit

AAC compatibility

- This product plays back AAC files encoded by iTunes.

SAMPLING FREQUENCY	8 kHz to 48 kHz
--------------------	-----------------

TRANSMISSION RATE	CBR (16 kbps to 320 kbps)
-------------------	---------------------------

FLAC compatibility

SAMPLING FREQUENCY	8 kHz to 192 kHz
QUANTIZATION BIT RATE	8 bit, 16 bit, 24 bit

Video files compatibility

- Files may not be played back properly depending on the environment in which the file was created or on the contents of the file.
- This product is not compatible with packet write data transfer.
- This product can recognize up to 32 characters, beginning with the first character, including extension for the file and folder name. Depending on the display area, this product may try to display them with a reduced font size. However, the maximum number of the characters that you can display varies according to the width of each character, and of the display area.
- Folder selection sequence or other operations may be altered, depending on the encoding or writing software.
- Regardless of the length of blank section between the songs of original recording, compressed audio files play with a short pause between songs.
- Files may not be able to be played back depending on the bit rate.
- The maximum resolution depends on the compatible video codec.

.avi

Compatible video codec	MPEG4, H.264
Maximum resolution	1 920 × 1 080
Maximum frame rate	30 fps

.mpg/.mpeg

Compatible video codec	MPEG2
------------------------	-------

Maximum resolution	720 × 576
Maximum frame rate	30 fps

.mp4

Compatible video codec	MPEG4, H.264
Maximum resolution	1 920 × 1 080
Maximum frame rate	30 fps

.mkv

Compatible video codec	MPEG4, H.264, VC-1
Maximum resolution	1 920 × 1 080
Maximum frame rate	30 fps

.mov

Compatible video codec	MPEG4, H.264
Maximum resolution	1 920 × 1 080
Maximum frame rate	30 fps

.flv

Compatible video codec	H.264, H.263
Maximum resolution	1 920 × 1 080
Maximum frame rate	30 fps

.wmv

Compatible video codec	VC-1
Maximum resolution	1 920 × 1 080
Maximum frame rate	30 fps

.m4v

Compatible video codec	H.264
Maximum resolution	1 920 × 1 080
Maximum frame rate	30 fps

.ts

Compatible video codec	H.264, MPEG2
Maximum resolution	1 920 × 1 080
Maximum frame rate	30 fps

.m2ts

Compatible video codec	H.264, MPEG2
Maximum resolution	1 920 × 1 080

Maximum frame rate	30 fps
--------------------	--------

.mts

Compatible video codec	H.264
Maximum resolution	1 920 × 1 080
Maximum frame rate	30 fps

Example of a hierarchy**NOTE**

This product assigns folder numbers. The user cannot assign folder numbers.

Bluetooth

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Pioneer Corporation is under license. Other trademarks and trade names are those of their respective owners.

WMA

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

- This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

FLAC

Copyright © 2000-2009 Josh Coalson
Copyright © 2011-2013 Xiph.Org
Foundation

Redistribution and use in source and binary forms, with or without modification,

are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

AAC

AAC is short for Advanced Audio Coding and refers to an audio compression

technology standard used with MPEG-2 and MPEG-4. Several applications can be used to encode AAC files, but file formats and extensions differ depending on the application which is used to encode. This unit plays back AAC files encoded by iTunes.

WebLink

WebLink™ is a trademark of Abalta Technologies, Inc.

Android

Android is a trademark of Google LLC.

Detailed information regarding connected iPhone devices

- Pioneer accepts no responsibility for data lost from an iPhone, even if that data is lost while using this product. Please back up your iPhone data regularly.
- Do not leave the iPhone in direct sunlight for extended amounts of time. Extended exposure to direct sunlight can result in iPhone malfunction due to the resulting high temperature.
- Do not leave the iPhone in any location with high temperatures.
- Firmly secure the iPhone when driving. Do not let the iPhone fall onto the floor, where it may become jammed under the brake or gas pedal.
- For details, refer to the iPhone manuals.

iPhone and Lightning



Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with an Apple product may affect wireless performance.

iPhone and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.

iOS

iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

iTunes

iTunes is a trademark of Apple Inc., registered in the U.S. and other countries.

Compatible iPhone models

- iPhone SE (2nd generation)
- iPhone 11 Pro Max
- iPhone 11 Pro
- iPhone 11
- iPhone XR
- iPhone XS Max

- iPhone XS
- iPhone X
- iPhone 8
- iPhone 8 Plus
- iPhone 7
- iPhone 7 Plus
- iPhone SE (1st generation)
- iPhone 6s
- iPhone 6s Plus
- iPhone 6
- iPhone 6 Plus

Depending on the iPhone models, it may not be compatible with some AV sources. For details about iPhone compatibility with this product, refer to the information on our website.

Using app-based connected content

Important

Requirements to access app-based connected content services using this product:

- Latest version of the Pioneer compatible connected content application(s) for the smartphone, available from the service provider, downloaded to your smartphone.
- A current account with the content service provider.
- Smartphone Data Plan.
Note: if the Data Plan for your smartphone does not provide for unlimited data usage, additional charges from your carrier may apply for accessing app-based connected content via 3G, EDGE and/or LTE (4G) networks.
- Connection to the Internet via 3G, EDGE, LTE (4G) or Wi-Fi network.
- Optional Pioneer adapter cable connecting your iPhone to this product.

Limitations:

- Access to app-based connected content will depend on the availability of cellular and/or Wi-Fi network coverage for the purpose of allowing your smartphone to connect to the Internet.
- Service availability may be geographically limited to the region. Consult the connected content service provider for additional information.
- Ability of this product to access connected content is subject to change without notice and could be affected by any of the following: compatibility issues with future firmware versions of smartphone; compatibility issues with future versions of the connected content application(s) for the smartphone; changes to or discontinuation of the connected Content application(s) or service by its provider.
- Pioneer is not liable for any issues that may arise from incorrect or flawed app-based content.
- The content and functionality of the supported applications are the responsibility of the App providers.
- In WebLink, functionality through the product is limited while driving, with available functions determined by the App providers.
- Availability of WebLink functionalities is determined by the App provider, and not determined by Pioneer.
- WebLink allows access to applications other than those listed (subject to limitations while driving), but the extent to which content can be used is determined by the App providers.

Notice regarding video viewing

Remember that use of this system for commercial or public viewing purposes

may constitute an infringement on the author's rights as protected by the Copyright Law.

Notice regarding DVD-Video viewing

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Using the LCD screen correctly

Handling the LCD screen

- When the LCD screen is subjected to direct sunlight for a long period of time, it will become very hot, resulting in possible damage to the LCD screen. When not using this product, avoid exposing it to direct sunlight as much as possible.
- The LCD screen should be used within the temperature ranges shown in Specifications on page 51.
- Do not use the LCD screen at temperatures higher or lower than the operating temperature range, because the LCD screen may not operate normally and could be damaged.
- The LCD screen is exposed in order to increase its visibility within the vehicle. Please do not press strongly on it as this may damage it.
- Do not push the LCD screen with excessive force as this may scratch it.
- Never touch the LCD screen with anything besides your finger when

operating the touch panel functions. The LCD screen can scratch easily.

Liquid crystal display (LCD) screen

- If the LCD screen is near the vent of an air conditioner, make sure that air from the air conditioner is not blowing on it. Heat from the heater may break the LCD screen, and cool air from the cooler may cause moisture to form inside this product, resulting in possible damage.
- Small black dots or white dots (bright dots) may appear on the LCD screen. These are due to the characteristics of the LCD screen and do not indicate a malfunction.
- The LCD screen will be difficult to see if it is exposed to direct sunlight.
- When using a cellular phone, keep the antenna of the cellular phone away from the LCD screen to prevent disruption of the video in the form of disturbances such as spots or colored stripes.

Maintaining the LCD screen

- When removing dust from or cleaning the LCD screen, first turn this product off and then wipe the screen with a soft dry cloth.
- When wiping the LCD screen, take care not to scratch the surface. Do not use harsh or abrasive chemical cleaners.

LED (light-emitting diode) backlight

A light emitting diode is used inside the display to illuminate the LCD screen.

- At low temperatures, using the LED backlight may increase image lag and degrade the image quality because of the characteristics of the LCD screen. Image

quality will improve with an increase in temperature.

- The product lifetime of the LED backlight is more than 10 000 hours. However, it may decrease if used in high temperatures.
- If the LED backlight reaches the end of its product lifetime, the screen will become dimmer and the image will no longer be visible. In that case, please consult your dealer or the nearest authorized Pioneer Service Station.

Specifications

General

Rated power source:

14.4 V DC (10.8 V to 15.1 V allowable)

Grounding system:

Negative type

Maximum current consumption:

10.0 A

Dimensions (W × H × D):

Chassis (D):

(DMH-342EX/DMH-341EX/DMH-340EX/
DMH-241EX/DMH-240EX)

178 mm × 100 mm × 110 mm (7 in. × 3-7/8 in. × 4-3/8 in.)

(AVH-241EX/AVH-240EX)

178 mm × 100 mm × 162 mm (7 in. × 3-7/8 in. × 6-3/8 in.)

Nose:

171 mm × 97 mm × 3 mm (6-3/4 in. × 3-7/8 in. × 1/8 in.)

Weight:

(DMH-342EX/DMH-341EX/DMH-340EX)

1.1 kg (2.4 lbs)

(DMH-241EX/DMH-240EX)

1.0 kg (2.2 lbs)

(AVH-241EX/AVH-240EX)

1.7 kg (3.7 lbs)

Display

Screen size/aspect ratio:

(DMH-342EX/DMH-341EX/DMH-340EX)

6.75 inch wide/16:9 (effective display area: 151.8 mm × 79.68 mm) (6 in. × 3-1/8 in.)

(DMH-241EX/DMH-240EX/AVH-241EX/AVH-240EX)

6.2 inch wide/16:9 (effective display area: 137.40 mm × 77.28 mm) (5-3/8 in. × 3 in.)

Pixels:

800 (Width) × 480 (Height) × 3 (RGB)

Display method:

TFT Active matrix driving

Color system:

PAL/NTSC compatible

Temperature range:

-10 °C to +60 °C (+14 °F to +140 °F)

Audio

Maximum power output:

50 W × 4

Continuous power output:

22 W × 4 (50 Hz to 15 kHz, 5 %THD, 4 Ω LOAD, Both Channels Driven)

Load impedance:

4 Ω (4 Ω to 8 Ω allowable)

Preout output level (max): 2.0 V

Equalizer (13-Band Graphic Equalizer):

Frequency:

50 Hz/80 Hz/125 Hz/200 Hz/315 Hz/

500 Hz/800 Hz/1.25 kHz/2 kHz/3.15

kHz/5 kHz/8 kHz/12.5 kHz

Gain: ±12 dB (2 dB/step)

HPF:

Frequency:

25 Hz/32 Hz/40 Hz/50 Hz/63 Hz/80 Hz/

100 Hz/125 Hz/160 Hz/200 Hz/250 Hz

Subwoofer/LPF:

Frequency:

25 Hz/32 Hz/40 Hz/50 Hz/63 Hz/80 Hz/

100 Hz/125 Hz/160 Hz/200 Hz/250 Hz

Bass boost:

Gain: +12 dB to 0 dB (2 dB/step)

DVD drive (AVH-241EX/AVH-240EX)

System:

DVD-V, VCD, CD, MP3, WMA, WAV, AAC, MPEG player

Usable discs:

DVD-VIDEO, VIDEO-CD, CD, CD-R, CD-RW, DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-R DL

Region number: 1

Signal Format:

Sampling frequency:

8 kHz/16 kHz/32 kHz/44.1 kHz/48 kHz

Number of quantization bits:

16 bit/20 bit/24 bit; linear

Frequency response:

5 Hz to 22 000 Hz (with DVD, at sampling frequency 48 kHz)

Signal-to-noise ratio:

85 dB (1 kHz) (IHF-A network) (RCA level)

Number of channels: 2 (stereo)

MP3 decoding format:

MPEG-1, 2 & 2.5 Audio Layer 3

WMA decoding format:

Ver. 7, 7.1, 8, 9, 9.1, 9.2 (2 ch audio) (Windows Media Player)

AAC decoding format:

MPEG-4 AAC (iTunes encoded only): (.m4a) (Ver. 10.6 and earlier)

MPEG video decoding format:

MPEG1 (Low Level), MPEG2 (Main Level), MPEG4 (part2) (Main Level)

USB

USB standard spec:

USB 1.1, USB 2.0 full speed, USB 2.0 high speed

Max current supply: 1.5 A

USB Class:

MSC (Mass Storage Class)

File system: FAT16, FAT32, NTFS

<USB audio>

MP3 decoding format:

MPEG-1 & 2 & 2.5 Audio Layer 3

WMA decoding format:

Ver. 7, 8, 9, 9.1, 9.2 (2 ch audio)

AAC decoding format:

MPEG-4 AAC (iTunes encoded only) (Ver. 12.5 and earlier)

FLAC decoding format:

Ver. 1.3.0 (Free Lossless Audio Codec)

WAV signal format:

Linear PCM

Sampling frequency:

Linear PCM:

16 kHz/22.05 kHz/24 kHz/32 kHz/44.1 kHz/48 kHz

<USB image>

JPEG decoding format:

.jpeg, .jpg

Pixel Sampling: 4:2:2, 4:2:0

Decode Size:

MAX: 7 680 (H) × 8 192 (W)

MIN: 32 (H) × 32 (W)

PNG decoding format:

.png

Decode Size:

MAX: 576 (H) × 720 (W)

MIN: 32 (H) × 32 (W)

BMP decoding format:

.bmp

Decode Size:

MAX: 936 (H) × 1 920 (W)

MIN: 32 (H) × 32 (W)

<USB video>

H.264 video decoding format:

Base Line Profile, Main Profile, High Profile

H.263 video decoding format:

Base Line Profile 0/3

VC-1 video decoding format:

Simple Profile, Main Profile, Advanced Profile

AVI video decoding format

MPEG4 video decoding format:

Simple Profile, Advanced Simple Profile

MPEG1, 2 video decoding format:

Main Profile

Quick Time video decoding format

Matroska video decoding format

TS Stream video decoding format

Bluetooth

Version:

Bluetooth 4.2 certified

Output power:

+4 dBm Max. (Power class 2)

Frequency band(s):

2.402 GHz to 2.48 GHz

FM tuner

Frequency range:

87.9 MHz to 107.9 MHz

Usable sensitivity:

12 dBf

Signal-to-noise ratio:

50 dB (analog broadcasting) (IHF-A network)

AM tuner

Frequency range:

530 kHz to 1 710 kHz

Usable sensitivity:

28 μ V (S/N: 20 dB)

Signal-to-noise ratio:

45 dB (analog broadcasting) (IHF-A network)

CTA2006 Specifications

Power output:

14 W RMS × 4 Channels (4 Ω and \leq 1 % THD+N)

S/N ratio:

91 dBA (reference: 1 W into 4 Ω)**NOTE**

Specifications and design are subject to possible modifications without notice due to improvements.

Register your product at

<https://www.pioneerelectronics.com/PUSA/>

in Canada **<https://www.pioneerelectronics.ca/POCEN/>**

PIONEER CORPORATION

28-8, Honkomagome 2-chome, Bunkyo-ku,
Tokyo 113-0021, Japan

PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.
TEL: (800) 421-1404

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium/Belgique
TEL: (0) 3/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

2 Jalan Kilang Barat, #07-01, Singapore 159346
TEL: 65-6378-7888

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

5 Arco Lane, Heatherton, Victoria, 3202 Australia
TEL: (03) 9586-6300

PIONEER ELECTRONICS DE MÉXICO S.A. DE C.V.

Bld. Manuel Ávila Camacho 138, 10 piso
Col.Lomas de Chapultepec, México, D.F. 11000
Tel: 52-55-9178-4270, Fax: 52-55-5202-3714

先鋒股份有限公司

台北市內湖區瑞光路407號8樓
電話：886-(0)2-2657-3588

先鋒電子（香港）有限公司

香港九龍長沙灣道909號5樓
電話：852-2848-6488



**PIONEER ELECTRONICS (USA) INC.
LIMITED WARRANTY**

WARRANTY VALID ONLY IN COUNTRY OF PRODUCT PURCHASE

WARRANTY

Pioneer Electronics (USA) Inc. (Pioneer) warrants that Pioneer® Car/Marine Electronics, Speaker, and Accessory Products distributed by Pioneer in the U.S.A. and Canada that fail to function properly under normal use due to a manufacturing defect when installed and operated according to the owner's manual enclosed with the unit will be repaired or replaced with a unit of comparable value, at Pioneer's option, without charge to you for parts or actual repair work. Replacement units and/or parts supplied under this warranty may be new or rebuilt at Pioneer's option.

This Limited Warranty applies to the original or any subsequent owner of this Pioneer product during the warranty period provided the product was purchased from an authorized Pioneer dealer in the U.S.A. or Canada. **You will be required to provide a sales receipt or other valid proof of purchase showing the date of original purchase. In the event service is required, the product must be delivered within the warranty period, transportation prepaid, only from within the country of purchase as explained in this document. You will be responsible for removal and installation of the product.** Pioneer will pay to return the repaired or replacement product to you within the country of purchase.

PRODUCT WARRANTY PERIOD (Runs from the date of first retail sale)	Parts	Labor
Car/Marine Electronics, Speakers, and Accessories (excluding Blind Spot Detection System).....	1 Year	1 Year
Blind Spot Detection System	3 Years	3 Years

WHAT IS NOT COVERED

This Limited Warranty applies to Pioneer products that are purchased from an authorized Pioneer dealer. **IF THIS PRODUCT WAS PURCHASED FROM ANY OTHER SOURCE, THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND THIS PRODUCT IS SOLD STRICTLY "AS IS" AND "WITH ALL FAULTS."** PIONEER SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL AND/OR INCIDENTAL DAMAGES. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Pioneer does not warrant any product listed above when it is used in a trade or business or in any industrial or commercial application. This warranty does not apply if the product has been subjected to power in excess of its published power rating. This warranty does not cover cosmetic scratches or any other appearance item; damage or defects resulting from alterations or modifications not authorized in writing by Pioneer; accident, collisions, misuse or abuse; the use of unauthorized parts or labor; improper installation or maintenance; lightning or power surges; subsequent damage from leaking; damage from inoperative batteries; or the use of batteries not conforming to those specified in the owner's manual. This warranty does not cover the cost of parts or labor that would otherwise be provided without charge under this warranty obtained from any source other than Pioneer. Altered, defaced, or removed serial numbers void this warranty.

NO OTHER WARRANTIES

TO THE FULLEST EXTENT PERMITTED BYLAW, PIONEER MAKES NO REPRESENTATIONS OR WARRANTIES OR ACCEPTS ANY CONDITIONS WITH RESPECT TO THIS PRODUCT EXCEPT AS STATED IN THIS DOCUMENT. PIONEER LIMITS ITS OBLIGATIONS UNDER ANY IMPLIED WARRANTIES AND CONDITIONS INCLUDING, BUT NOT LIMITED TO, WARRANTIES AND CONDITIONS, WHETHER EXPRESS OR IMPLIED, OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO A PERIOD NOT TO EXCEED THE WARRANTY PERIOD. NO WARRANTIES OR CONDITIONS SHALL APPLY AFTER THE WARRANTY PERIOD. Some states and provinces do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province. To the extent any provision of this limited warranty is deemed invalid or unenforceable under applicable law, such determination will have no effect on the remaining provisions, which will continue in full force and effect.

TO OBTAIN SERVICE

In the U.S.A. or Canada, to receive warranty service, you need to present your sales receipt showing place and date of original owner's transaction. **Please contact one of the following to obtain service:**

Your Authorized Pioneer Dealer - Your Pioneer Dealer may repair or replace your unit or refer you to an Authorized Pioneer Service Company. Your sales receipt should list the contact information (phone number, fax, email, etc.) for your Dealer.

Pioneer Customer Support - Can advise the optimal service option for your model and geographic location.

Please call us at **1-800-421-1404** or visit **www.pioneerelectronics.com** (for USA) or **http://www.pioneerelectronics.ca** (for Canada), click on **"Support,"** then select **"Contact Us."**

Your Authorized Pioneer Service Company - Can perform repairs for most Car/Marine Electronics, Speaker and Accessory products and advise other options as applicable. Please visit Pioneer's website, click on **"Support,"** and select **"Find a Service Center."**

Shipping Your Unit for Service – YOU MUST FIRST CONTACT PIONEER TO GET RETURN AUTHORIZATION. PLEASE DO NOT SEND IN YOUR PRODUCT WITHOUT CONTACTING CUSTOMER SUPPORT. If you have a return authorization number, please package the product carefully and send it transportation prepaid by a traceable, insured method to an Authorized Pioneer Service Company or Pioneer. Use adequate padding material to prevent damage in transit. Include your name, address and a telephone number where you can be reached during business hours.

For questions about your product, please contact Pioneer Customer Support as described above or write to us at:

**Customer Support, Pioneer Electronics (USA) Inc.
P.O. Box 1720
Long Beach, California 90801 U.S.A.**

DISPUTE RESOLUTION

Following our response to any initial request to Customer Support, should a dispute arise between you and Pioneer, Pioneer makes available its Complaint Resolution Program to resolve the dispute. The Complaint Resolution Program is available to you without charge. In the U.S.A., you are required to use the Complaint Resolution Program before you exercise any rights under, or seek any remedies, created by the Magnuson-Moss Warranty Act but may be entitled to file suit under state law without using the Complaint Resolution Program. To use the Complaint Resolution Program, call 1-800-421-1404 and explain to the customer service representative the problem you are experiencing, steps you have taken to have the product repaired during the warranty period, and the name of the authorized Pioneer Dealer from which the Pioneer product was purchased. After the complaint has been explained to the representative, a resolution number will be issued. Within forty (40) days of receiving your complaint, Pioneer will investigate the dispute and will either: (1) respond to your complaint in writing informing you what action Pioneer will take, and in what time period, to resolve the dispute; or (2) respond to your complaint in writing informing you why Pioneer will not take any action.

RECORD THE PLACE AND DATE OF PURCHASE. KEEP THIS INFORMATION AND YOUR SALES RECEIPT IN A SAFE PLACE

Model No. _____ Serial No. _____ Purchase Date _____

Purchased From _____



**PIONEER ELECTRONICS (USA) INC.
GARANTIE LIMITÉE**

GARANTIE VALIDE UNIQUEMENT DANS LE PAYS D'ACHAT DU PRODUIT

GARANTIE

Pioneer Electronics (USA) Inc. (ci-après « Pioneer ») garantit que les appareils électroniques, haut-parleurs et accessoires automobiles/marins Pioneer® distribués par Pioneer aux États-Unis et au Canada, s'ils sont installés et utilisés conformément au manuel de l'utilisateur qui accompagne l'appareil et ne fonctionnent pas correctement dans des conditions normales d'utilisation en raison d'un défaut de fabrication, seront réparés ou remplacés par un appareil de valeur comparable, à la discrétion de Pioneer, sans frais de pièces ou de réparation. Les appareils de remplacement et/ou pièces fournies en vertu de cette garantie peuvent être neufs ou remis à neuf, à la discrétion de Pioneer.

Cette garantie limitée s'applique au propriétaire initial ou à tout propriétaire ultérieur de ce produit Pioneer pendant la période de garantie, sous réserve que le produit ait été acheté d'un détaillant Pioneer autorisé aux États-Unis ou au Canada. **Vous devrez fournir un reçu de caisse ou autre preuve d'achat valide indiquant la date de l'achat initial. Si une réparation s'avère nécessaire, le produit doit être expédié dans la période de garantie, frais de port prépayés, uniquement depuis le pays de l'achat, et tel qu'expliqué dans le présent document. Vous serez responsable du retrait et de l'installation du produit.** Pioneer paiera les frais de retour du produit réparé ou de remplacement, à l'intérieur du pays d'achat.

PÉRIODE DE GARANTIE DU PRODUIT (La garantie prend effet à compter de la première vente au détail)

	Pièces	Main d'oeuvre
Appareils électroniques, haut-parleurs et accessoires automobiles/marins	1 an	1 an
Systèmes de détection d'angles morts	3 ans	3 ans

ÉLÉMENTS NON COUVERTS PAR LA GARANTIE

Cette garantie limitée s'applique aux produits Pioneer achetés d'un détaillant Pioneer autorisé. **SI CE PRODUIT A ÉTÉ ACHETÉ DE TOUTE AUTRE SOURCE, IL N'Y A PAS DE GARANTIES, EXPLICITES OU IMPLICITES, Y COMPRIS LES GARANTIES IMPLICITES DE QUALITÉ MARCHANDE ET GARANTIES IMPLICITES D'ADAPTATION À UN USAGE PARTICULIER, ET CE PRODUIT EST VENDU « TEL QUEL » ET « AVEC TOUS SES DÉFAUTS ».** PIONEER NE SERA RESPONSABLE D'AUCUN DOMMAGE CONSÉCUTIF ET/OU ACCESSOIRE. Certains États et certaines provinces n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, par conséquent, la limitation ou l'exclusion indiquée plus haut peut ne pas s'appliquer à vous.

Pioneer ne garantit aucun des produits énumérés ci-dessus s'ils sont utilisés à des fins commerciales ou professionnelles, ou dans toute application industrielle ou commerciale. Cette garantie ne s'applique pas si le produit a été soumis à une puissance nominale excédant celle indiquée dans les documents s'y appliquant. Cette garantie ne couvre pas les rayures ou tout autre élément esthétique ; les dommages ou défauts résultant de retouches ou modifications non autorisées par écrit par Pioneer ; les accidents, collisions, usages inappropriés ou abusifs ; l'utilisation non autorisée de pièces ou de main-d'œuvre ; l'installation ou la maintenance inadéquate ; les dommages causés par la foudre ou la surtension ; les dommages découlant de fuites ; les dommages découlant de piles défectueuses ; ou l'utilisation de piles non conformes à celles spécifiées dans le manuel de l'utilisateur. Cette garantie ne couvre pas le coût des pièces ou de la main-d'œuvre qui seraient autrement offertes sans frais en vertu de la présente garantie, si elles sont obtenues auprès d'une source autre que Pioneer. Les numéros de série modifiés, oblitérés ou enlevés annulent cette garantie.

INVALIDITÉ DE TOUTES AUTRES GARANTIES

DANS TOUTE LA MESURE AUTORISÉE PAR LA LOI, SAUF DISPOSITION CONTRAIRE DANS LE PRÉSENT DOCUMENT, PIONEER NE FAIT AUCUNE REPRÉSENTATION ET N'OFFRE AUCUNE GARANTIE, NI N'ACCEPTÉ AUCUNE CONDITION CONCERNANT CE PRODUIT. PIONEER LIMITE SES OBLIGATIONS EN VERTU DE TOUTES GARANTIES ET CONDITIONS IMPLICITES, Y COMPRIS, MAIS SANS S'Y LIMITER, LES GARANTIES ET CONDITIONS, EXPRESSES OU IMPLICITES, DE COMMERCIALITÉ ET D'ADAPTATION À UN USAGE PARTICULIER, À UNE PÉRIODE N'EXCÉDANT PAS LA PÉRIODE DE GARANTIE. AUCUNE GARANTIE OU CONDITION NE S'APPLIQUERA APRÈS LA PÉRIODE DE GARANTIE. Certains états et certaines provinces n'autorisent pas les limitations sur la durée d'une garantie implicite. Par conséquent, il se pourrait que certaines des limitations ou exclusions précitées ne s'appliquent pas à vous. Cette garantie vous confère des droits spécifiques légaux, mais vous pouvez bénéficier d'autres droits qui peuvent varier selon les États ou les provinces. Dans la mesure où toute disposition de cette garantie limitée est considérée comme invalide ou inexécutable en vertu du droit applicable, elle sera sans effet sur les autres dispositions, qui resteront pleinement en vigueur.

DEMANDE DE SERVICE

Aux États-Unis et au Canada, pour recevoir un service de garantie vous devez présenter votre reçu de caisse indiquant le lieu et la date de la transaction d'origine.

Pour toute demande de service, veuillez contacter :

Votre détaillant Pioneer autorisé - Votre détaillant Pioneer peut réparer ou remplacer votre appareil ou vous mettre en contact avec une entreprise de services Pioneer autorisée. Vous devriez trouver les coordonnées (numéro de téléphone, numéro de télécopieur, adresse de courriel, etc.) de votre détaillant sur votre reçu de caisse.

Support à la clientèle Pioneer - peut vous conseiller sur le choix de l'option de service optimal pour votre modèle et votre région géographique. Appelez-nous au **1-800-421-1404** ou visitez notre site Web à **www.pioneerelectronics.com** (pour les États-Unis) ou **http://www.pioneerelectronics.ca** (pour le Canada), cliquez sur « **Soutien** », puis sélectionnez « **Contactez-nous** ».

Votre entreprise de services Pioneer autorisée - peut effectuer des réparations pour la plupart des produits électroniques automobiles/marins, des haut-parleurs et des accessoires et peut vous conseiller sur le choix d'autres options, selon le cas. Visitez le site Web de Pioneer, cliquez sur « **Soutien** », puis sélectionnez « **Trouver un Centre de service** ».

Expédition de votre appareil aux fins de service — VOUS DEVEZ D'ABORD CONTACTER PIONEER POUR OBTENIR UNE AUTORISATION DE RETOUR. VEUILLEZ NE PAS ENVOYER VOTRE PRODUIT SANS AVOIR D'ABORD CONTACTÉ LE SERVICE À LA CLIENTÈLE. Si vous avez un numéro d'autorisation de retour, veuillez emballer le produit soigneusement et l'envoyer, frais de port prépayés avec un service d'expédition traçable et assurable, à une société de services Pioneer autorisée ou à Pioneer. Utilisez des matériaux d'emballage coussinés adéquats pour éviter les dommages pendant le transport. Incluez votre nom, votre adresse et un numéro de téléphone où nous pouvons vous joindre pendant les heures de bureau.

Pour toute question concernant votre produit, veuillez contacter le soutien à la clientèle Pioneer comme décrit ci-dessus ou écrivez-nous à :

Customer Support, Pioneer Electronics (USA) Inc., P.O. Box 1720, Long Beach, California 90801 U.S.A.

RÈGLEMENT DES CONFLITS

Dans le cas d'un conflit entre vous et Pioneer après notre réponse à votre demande initiale adressée service à la clientèle (Customer Support), Pioneer met à votre disposition son Programme de résolution des plaintes pour résoudre le conflit. Le Programme de résolution des plaintes est disponible sans frais. Aux États-Unis, vous êtes tenu de recourir au Programme de règlement des plaintes avant d'exercer vos droits ou d'exiger réparation en vertu de la loi sur la garantie « Magnuson-Moss Warranty Act », mais vous êtes en droit d'engager une action en justice en vertu des lois de l'État sans passer par le Programme de résolution des plaintes. Pour avoir recours au Programme de résolution des plaintes, composez le 1-800-421-1404 et décrivez au représentant du service à la clientèle le problème que vous rencontrez et les démarches que vous avez entreprises pour faire réparer le produit pendant la période de garantie, et donnez-lui le nom du détaillant Pioneer autorisé auprès duquel vous vous êtes procuré le produit Pioneer. Une fois que votre plainte a été expliquée au représentant, un numéro de résolution vous sera communiqué. Pioneer étudiera le conflit et, dans un délai de quarante (40) jours après la réception de votre plainte, (1) répondra à votre plainte par écrit pour vous aviser des démarches qu'elle entreprendra pour résoudre le conflit, et indiquera combien de temps ces démarches prendront ; ou (2) répondra à votre plainte par écrit pour vous indiquer les raisons pour lesquelles Pioneer n'entreprendra aucune démarche.

ENREGISTREZ LE LIEU ET LA DATE D'ACHAT. CONSERVEZ CES INFORMATIONS ET VOTRE REÇU DE CAISSE DANS UN ENDROIT SÛR

No. de Modèle. _____ No. de série _____ Date d'achat _____

Acheté de _____