

IMPORTANT TIP




Cautions on Power Supply Wires Connection

When connecting the power supply wires, be sure to read the OWNER'S MANUAL and this document carefully, and then connect it correctly.

About power supply wires

Use the specified wire size according to the total fuse capacity of the amplifier to be installed and the specified wire length. For details, refer to "Cautions on Power Supply Wires" in the OWNER'S MANUAL and this document and use the wire of the specified size.

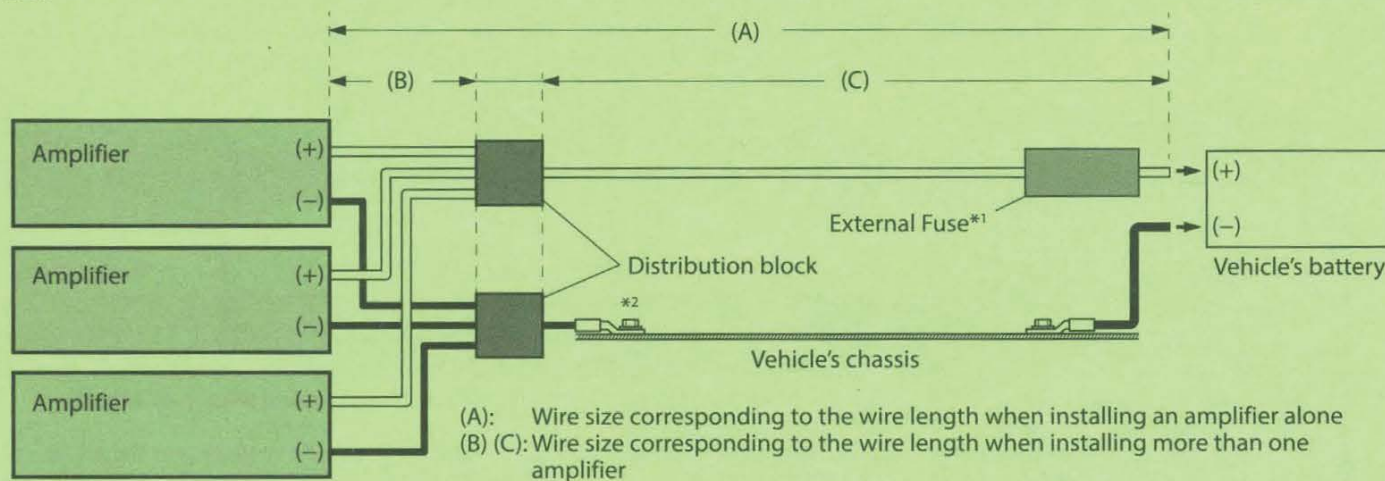

*1 Be sure to add an External Fuse (e.g. Fuse Block, Circuit Breaker) with the battery lead as close as possible to the battery's positive (+) terminal.

*2 Connect all equipment to the same ground point while keeping wire length as short as possible.

Fuse capacity (Total)		30A max.	40A max.	50A max.	60A max.	70A max.	80A max.	90A max.	100A max.	150A max.	200A max.	350A max.
BATTERY (+) GROUND (-)	1m											
	2m											
	3m		8 AWG (8 mm ²)									1/0 AWG (53 mm ²) or 4 AWG (21 mm ²) x 2
	4m											
	5m						4 AWG (21 mm ²)					1/0 AWG (53 mm ²)
	6m											1/0 AWG x 2 (53 mm ² x 2)

About connection of power supply wires

For connecting the wire lead, note the following.

- Remove the insulation from the ends of the wire leads by about 7-10 mm (9/32"–13/32"), and then twist the core line (lead wire part) of the tip.
- When connecting the wire leads, use the screws attached with the Power Supply Terminal or Battery Connector of the amplifier to tighten them.
 - Due to the specification of the Power Supply Terminal of the amplifier, wire leads may be fixed using a wire with a round terminal.
- For details on connecting the wire lead, refer to the supplied OWNER'S MANUAL and be sure to connect securely by following the specified method.



EN

DE

FR

ES

IT

SE

RU

CS

R2-A75M

MONO POWER AMPLIFIER

R2-A60F

4 CHANNEL POWER AMPLIFIER

- **OWNER'S MANUAL**
Please read before using this equipment.
- **BEDIENUNGSANLEITUNG**
Lesen Sie diese Bedienungsanleitung bitte vor Gebrauch des Gerätes.
- **MODE D'EMPLOI**
Veuillez lire avant d'utiliser cet appareil.
- **MANUAL DE OPERACIÓN**
Léalo antes de utilizar este equipo.
- **ISTRUZIONI PER L'USO**
Si prega di leggere prima di utilizzare il attrezzatura.
- **ANVÄNDARHANDLEDNING**
Innan du använder utrustningen bör du läsa igenom denna användarhandledning.
- **РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ**
Прочтите настоящее руководство перед началом использования оборудования.
- **用户手册**
使用本设备前请先阅读。

CONTENTS

WARNING.....	1
SERVICE CARE	2
ACCESSORIES	3
INSTALLATION.....	3
REMOVING THE TOP COVER.....	3
CONNECTIONS	4
CONNECTION CHECK LIST	7
SWITCH SETTINGS	8
SYSTEM DIAGRAMS	12
SPECIFICATIONS.....	21

WARNING

Points to Observe for Safe Usage

Read this manual carefully before using the system components. They contain instructions on how to use this product in a safe and effective manner. Alpine cannot be responsible for problems resulting from failure to observe the instructions in this manual.



WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISES WHILE DRIVING.

Excessive volume levels that obscure sounds such as emergency vehicle sirens or road warning signals (train crossings, etc.) can be dangerous and may result in an accident. LISTENING AT LOUD VOLUME LEVELS IN A CAR MAY ALSO CAUSE HEARING DAMAGE.

DO NOT DISASSEMBLE OR ALTER.

Doing so may result in an accident, fire or electric shock.

USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.

Use for other than its designed application may result in fire, electric shock or other injury.

USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.

Failure to do so may result in fire or electric shock.

DO NOT BLOCK VENTS OR RADIATOR PANELS.

Doing so may cause heat to build up inside and may result in fire.

MAKE THE CORRECT CONNECTIONS.

Failure to make the proper connections may result in fire or product damage.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL.

Failure to do so may result in electric shock or injury due to electrical shorts.

DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS.

Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, gear lever, brake pedals, etc. can be extremely hazardous.

DO NOT SPLICE INTO ELECTRICAL CABLES.

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES.

When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS.

Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc.

KEEP SMALL OBJECTS SUCH AS BATTERIES OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

**CAUTION**

This symbol means important instructions. Failure to heed them can result in injury or property damages.

HALT USE IMMEDIATELY IF A PROBLEM APPEARS.

Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Center for repairing.

HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS.

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY.

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.

Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wire's insulation from being cut by the metal edge of the hole.

DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

SERVICE CARE

◆ IMPORTANT NOTICE

This Amplifier has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules. This equipment generates and uses radio frequency energy, and it must be installed and used properly in accordance with the manufacturer's instructions.

SERIAL NUMBER: _____

INSTALLATION DATE: _____

INSTALLATION TECHNICIAN: _____

PLACE OF PURCHASE: _____

◆ IMPORTANT

Please record the serial number of your unit in the space provided here and keep it as a permanent record. The serial number plate is located on the rear of the unit.

◆ For European Customers

Should you have any questions about warranty, please consult your store of purchase.

◆ For Customers in other Countries**IMPORTANT NOTICE**

Customers who purchase the product with which this notice is packaged, and who make this purchase in countries other than the United States of America and Canada, please contact your dealer for information regarding warranty coverage.



ACCESSORIES

- Self-Tapping Screw4
- Hexagon Wrench.....1 SET

INSTALLATION



Due to the high power output of the R2-A75M/ R2-A60F considerable heat is produced when the amplifier is in operation. For this reason, the amplifier should be mounted in a location which will allow for free circulation of air, such as inside the trunk. For alternate installation locations, please contact your authorized Alpine dealer.

1. Using the amplifier as a template, mark the four screw locations.
2. Make sure there are no objects behind the surface that may become damaged during drilling.
3. Drill the screw holes.
4. Position the R2-A75M/R2-A60F over the screw holes, and secure with four self-tapping screws.

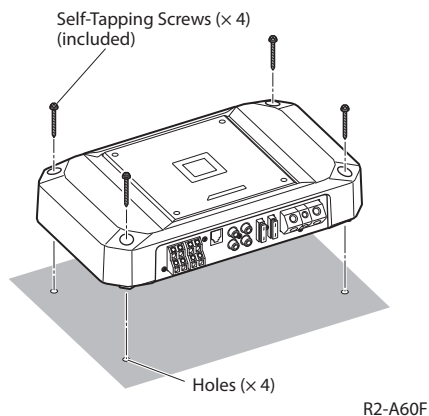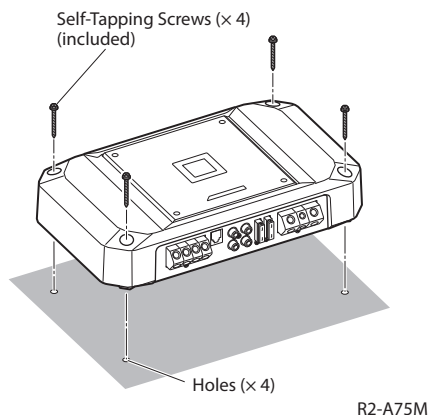

REMOVING THE TOP COVER


To use the top inner panel, remove the top cover.

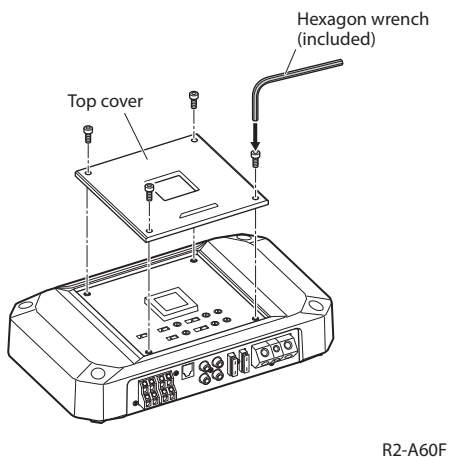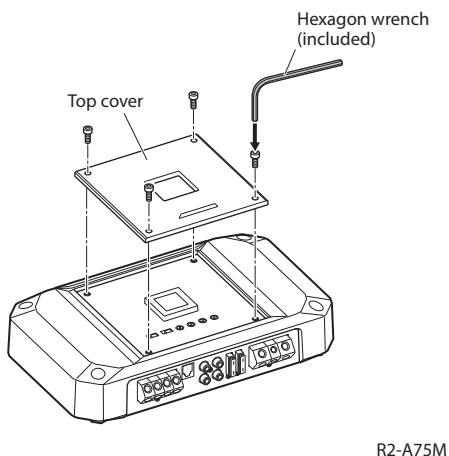


CONNECTIONS

Before making connections, be sure to turn the power off to all audio components.

R2-A75M

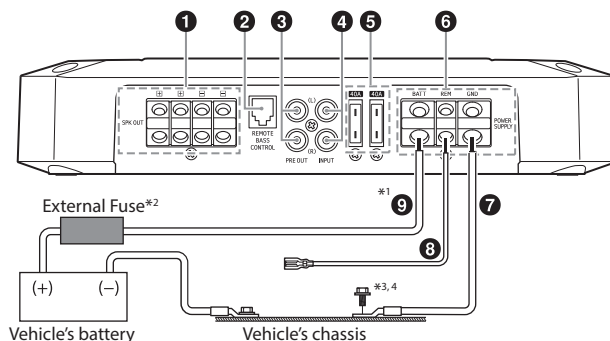

R2-A60F

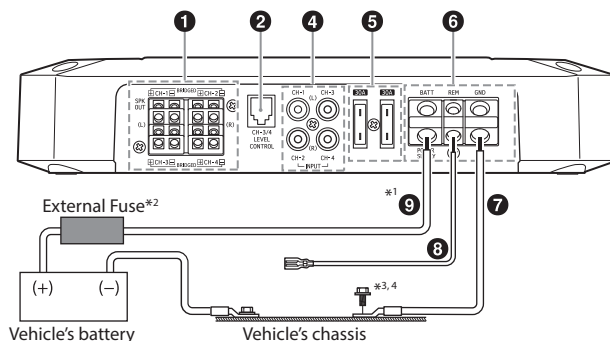

*1 For details on the wires size to be used, refer to the supplied "Cautions on Power Supply Wires Connection" and "Cautions on Power Supply Wires" (page 20), and then use the wire of the specified size.

*2 Be sure to add an External Fuse (e.g. Fuse Block, Circuit Breaker) with the battery lead as close as possible to the battery's positive (+) terminal. Add an external fuse with the same capacity, or a slightly larger capacity, as the sum total of the fuse capacities of the amplifier.

For details on the fuse capacity of this machine, see "Battery Lead (9)" (page 5).

*3 Connect all equipment to the same ground point while keeping wire length as short as possible.

*4 To securely connect the ground lead, use an already installed screw.

To prevent external noise from entering the audio system

- Locate the unit and route the leads at least 10 cm (4") away from the vehicle's harness.
- Keep the battery power leads as far away from other leads as possible.
- Connect the ground lead securely to a bare metal spot (remove any paint or grease if necessary) of the vehicle's chassis.
- If you add an optional noise suppressor, connect it as far away from the unit as possible. Your Alpine dealer carries various noise suppressors, contact them for further information.
- Your Alpine dealer knows best about noise prevention measures so consult your dealer for further information.

1 Speaker Output Terminals

Connect the Speaker Output Lead (+) / (–) using the Hexagon hole screw of the Speaker Output Terminals (1).

- For details on how to connect, see “Cautions on wire lead connections” (page 6).

Be sure to observe correct speaker output connections and polarity in relation to the other speakers in the system. Connect the positive output to the positive speaker terminal and the negative to negative.

About Subwoofer Input/Output (R2-A75M only)

- The input is stereo but the output is monaural.
- Reversing subwoofer polarity (swapping positive and negative connections to the subwoofer) may be desirable in some installations for optimum bass performance.

About Bridged Connections (R2-A60F only)

In the bridged mode, connect the left positive to the positive terminal of the speaker and the right negative to the negative terminal of the speaker. Do not use the speaker (–) terminals as a common lead between the left and right channels.

NOTE:

- Do not connect the speaker (–) terminal to the vehicle's chassis.

2 Remote Bass Control (optional) (R2-A75M only)

CH-3/4 Remote Level Control (optional) (R2-A60F only)

Connect the Remote Bass Control Unit RUX-KNOB.2 (sold separately) to adjust the output level remotely. This is not to replace appropriate gain level setting between the amplifier and head unit.

3 Pre-Out Jacks (R2-A75M only)

These jacks provide a line level output. This is an ideal output for driving a second subwoofer amp. This output is full-range, and is not affected by the crossover.

4 RCA Input Jacks

Connect these jacks to the line out leads on your head unit using RCA extension cables or Speaker-RCA Conversion cable (sold separately). Be sure to observe correct channel connections; Left to Left and Right to Right.

5 Fuse

R2-A75M40 A × 2
R2-A60F30 A × 2

USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.

Failure to do so may result in fire or electric shock.

6 Power Supply Terminal

Connect the Ground Lead (7), Remote Turn-on Lead (8), and Battery Lead (9) using the Hexagon hole screw of the Power Supply Terminal (6).

- For details on how to connect, see “Cautions on wire lead connections” (page 6).

7 Ground Lead (sold separately)

Connect this lead securely to a clean, bare metal spot on the vehicle's chassis. Verify this point to be a true ground by checking for continuity between that point and the negative (–) terminal of the vehicle's battery. Ground all your audio components to the same point on the chassis to prevent ground loops while keeping wire length as short as possible.

- For details on the wires size to be used, refer to the supplied “Cautions on Power Supply Wires Connection” and “Cautions on Power Supply Wires” (page 20), and then use the wire of the specified size.

8 Remote Turn-On Lead (sold separately)

Connect this lead to the remote turn-on (positive trigger, (+) 12 V only) lead of your head unit. If a remote turn-on lead is not available, see “CONNECTION CHECK LIST” section on page 7 for alternative method.

- When connecting the speaker output leads of the head unit to this unit with a Speaker-RCA Conversion cable (sold separately), you do not need to connect the remote turn-on lead, owing to the “REMOTE SENSING” function of this unit. However, the “REMOTE SENSING” function may not work depending on the signal source connected. In such a case, connect the remote turn-on lead to an incoming power supply cord (accessory power) in the ACC position.

9 Battery Lead (sold separately)

Be sure to add an External Fuse (e.g. Fuse Block, Circuit Breaker) with the battery lead as close as possible to the battery's positive (+) terminal. This fuse will protect your vehicle's electrical system in case of a short circuit. See below for appropriate fuse value requirement:


R2-A75M80 A
R2-A60F60 A

- For details on the wires size to be used, refer to the supplied “Cautions on Power Supply Wires Connection” and “Cautions on Power Supply Wires” (page 20), and then use the wire of the specified size.

Cautions on wire lead connections

When using third-party wire cables (power supply wire), use the supplied screws to simplify the connection. Refer to the description below for the proper procedure. If you are in doubt about how to make this connection, consult your dealer.

1. Check the wire size.
 - For details on the wires size to be used, refer to the supplied "Cautions on Power Supply Wires Connection" and "Cautions on Power Supply Wires" (page 20), and then use the wire of the specified size.
 - If the wire gauge used is unknown, ask your dealer.
2. Remove the insulation from the ends of the wire leads by about 7 – 10 mm (9/32" – 13/32").

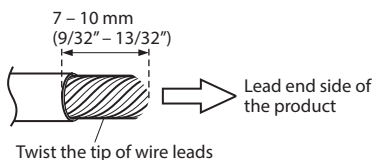


NOTES:


- If length of the exposed wire is too short, a poor connection may occur causing operation failure or sound interruption.
 - On the other hand, if the length is too long, an electrical short-circuit may occur.
3. Tighten the hexagon hole screw with the hexagon wrench (Large or Small) (included) to secure the lead.

Before making this connection, use insulated shrink tubing to cover any exposed wire extending beyond the terminal.


Power Supply Terminal

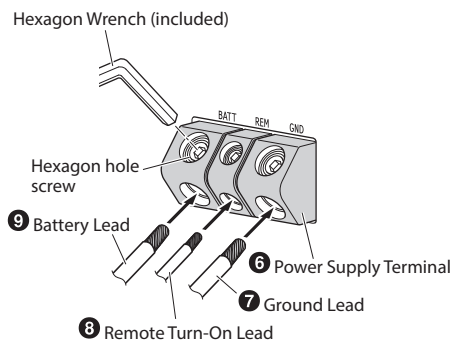

Speaker Output Terminals

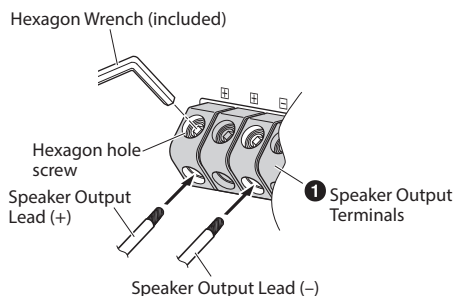

R2-A75M

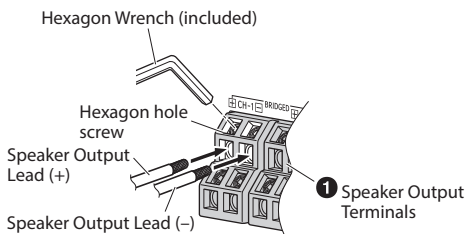

R2-A60F

NOTES:

- Be sure to use the Hexagon hole screw attached to the Power Supply Terminal (6) or Speaker Output Terminals (1).
- For safety reasons, connect the battery leads last.
- To prevent disconnection of the leads or dropping of the unit, do not use the cabling to carry the unit.

CONNECTION CHECK LIST

Please check your head unit for the conditions listed below:


Remote Turn-On Lead

- The head unit does not have a remote turn-on or power antenna lead.
- The head unit's power antenna lead is activated only when the radio is on (turns off in the tape or CD Mode).
- The head unit's power antenna lead is logic level output (+) 5 V, negative trigger (grounding type), or cannot sustain (+) 12 V when connected to other equipment in addition to the vehicle's power antenna.

If any of the above conditions exist, the remote turn-on lead of your R2-A75M/R2-A60F must be connected to a switched power source (ignition) in the vehicle. Be sure to use a 3 A fuse as close as possible to this ignition tap. Using this connection method, the R2-A75M/R2-A60F will turn on and stay on as long as the ignition switch is on.

If this is objectionable, a SPST (Single Pole, Single Throw) switch, in addition to the 3 A fuse mentioned above, may be installed in-line on the R2-A75M/R2-A60F turn-on lead. This switch will then be used to turn on (and off) the R2-A75M/R2-A60F. Therefore, the switch should be mounted so that is accessible by the driver. Make sure the switch is turned off when the vehicle is not running. Otherwise, the amplifier will remain on and drain the battery.


- 1 Blue/White
- 2 Power Antenna
- 3 Remote Turn-On Lead
- 4 To other Alpine component's Remote Turn-On Leads
- 5 SPST Switch (optional)
- 6 Fuse (3 A)
- 7 As close as possible to the vehicle's ignition tap
- 8 Ignition Source

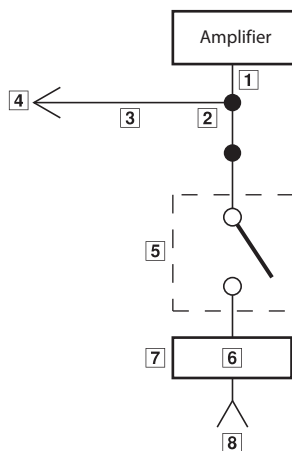

SWITCH SETTINGS


- Before switching each Selector Switch, turn off the power and insert a small screwdriver, etc., perpendicularly to the Switch.
- To use the top inner panel, remove the top cover. See "REMOVING THE TOP COVER" (page 3).

R2-A75M

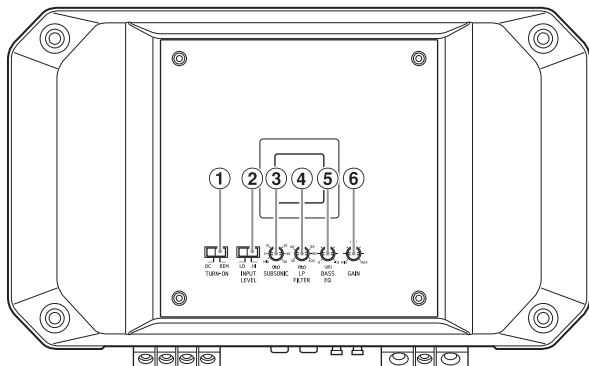

(Top inner panel)

R2-A60F

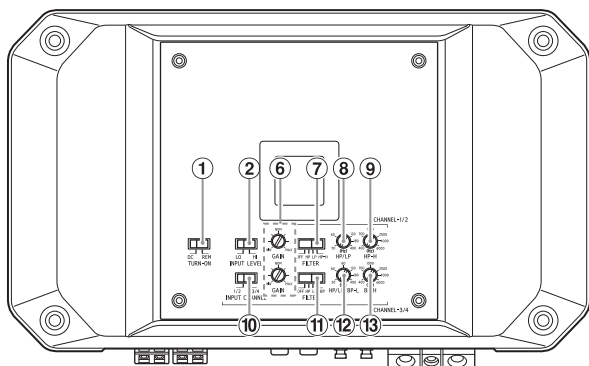

(Top inner panel)

① Auto Turn-on Switch




- a) For the "DC" Input setting, connecting the Remote Turn-On Lead is not required due to the "REMOTE SENSING" function of this product.




- b) However, the "REMOTE SENSING" function may not work correctly depending on the signal source connected. In such a case, connect the Remote Turn-On Lead to an incoming power supply cord (accessory power) in the ACC position and switch to the "REM" Input setting.

- The DC offset auto turn-on circuit was designed to work with ONLY high level signals (i.e., speaker level signals). These high level signals usually come from the amplified output of radios, head units, and amplifiers. Because LO signal input (i.e., low level signals) cannot turn on the amplifier, the REMOTE trigger signal must be supplied and the REM setting needs to be used for LO signal input.*
* For details on turning on the unit with the ACC trigger signal, see the Remote Turn-On Lead (⑧) section (page 5).

② Input Level Switch



- a) If input is via the head unit pre-out line using an RCA extension cable (sold separately), set to "LO".



- b) If input is via the head unit speaker line using a speaker-RCA conversion cable (sold separately), set to "HI".

③ Subsonic Filter Adjustment Knob (R2-A75M only)

The subsonic filter is for cutting ultra low frequencies from the input signal before being amplified. Frequencies lower than the specified frequency are attenuated at 24 dB/octave.

This is desirable for several reasons:

- To protect speakers too small or not capable of reproducing ultra low frequencies.
- To minimize power wasted from reproducing inaudible sound.
- To protect subwoofers in vented enclosures from over excursion below the tuning frequency.

④ Crossover Frequency Adjustment Knob (LP FILTER) (R2-A75M only)

Use this control to adjust the crossover frequency between 50 Hz to 400 Hz.

⑤ Bass EQ Adjustment Knob (R2-A75M only)

Add a 50 Hz bass boost up to +12 dB to tune your bass response.

⑥ Input Gain Adjustment Knob

Set the R2-A75M/R2-A60F input gain to the minimum position. Using a dynamic CD as a source, increase the head unit volume until the output distorts. Then, reduce the volume 1 step (or until the output is no longer distorted). Now, increase the amplifier gain until the sound from the speakers becomes distorted. Reduce the gain slightly so the sound is no longer distorted to achieve the optimum gain setting.

⑦ Filter Mode Selector Switch (CHANNEL-1/2) (R2-A60F only)



- a) Set to the "OFF" position when the amplifier will be used for driving full range speakers or when using an external electronic crossover. The full frequency bandwidth will be output to the speakers with no high or low frequency attenuation.



- b) Set to the "HP" position when the amplifier is used to drive a tweeter/midrange system. At this setting, Crossover Frequency Adjustment Knob (⑧) provides adjustment between 50 Hz to 400 Hz. The frequencies below the crossover point will be attenuated at 12 dB/octave.

NOTE:

- In this case the maximum Bass EQ boost level is reduced.



- c) Set to the "LP" position when the amplifier is used to drive a subwoofer. At this setting, Crossover Frequency Adjustment Knob (⑧) provides adjustment between 50 Hz to 400 Hz. The frequencies above the crossover point will be attenuated at 12 dB/octave.



- d) Set to the "HP-H" position when the amplifier is used to drive a tweeter system.
At this setting, Crossover Frequency Adjustment Knob (⑨) provides adjustment between 400 Hz to 6 kHz. The frequencies below the crossover point will be attenuated at 12 dB/octave.

⑧ Crossover Frequency Adjustment Knob (HP/LP FREQ.) (R2-A60F only)

Use this control to adjust the crossover frequency between 50 Hz to 400 Hz.

⑨ Crossover Frequency Adjustment Knob (HP-H FREQ.) (R2-A60F only)

Use this control to adjust the crossover frequency between 400 Hz to 6 kHz.

⑩ Input Channel Selector Switch (CHANNEL-3/4) (R2-A60F only)



- a) This switch setting is for selecting either 2-channel or 4-channel input mode. When set to "1/2", signal will be copied from CH-1/2 and sent to CH-3/4, eliminating the need for Y-adapters.



- b) Setting this switch to "3/4" will keep both inputs, CH-1/2 and CH-3/4 independent.
A 4-channel source is required for this mode.

⑪ Filter Mode Selector Switch (CHANNEL-3/4) (R2-A60F only)



- a) Set to the "OFF" position when the amplifier will be used for driving full range speakers or when using an external electronic crossover. The full frequency bandwidth will be output to the speakers with no high or low frequency attenuation.



- b) Set to the "HP" position when the amplifier is used to drive a tweeter/midrange system.
At this setting, Crossover Frequency Adjustment Knob (⑫) provides adjustment between 50 Hz to 400 Hz. The frequencies below the crossover point will be attenuated at 12 dB/octave.



- c) Set to the "LP" position when the amplifier is used to drive a subwoofer.
At this setting, Crossover Frequency Adjustment Knob (⑬) provides adjustment between 50 Hz to 400 Hz. The frequencies above the crossover point will be attenuated at 12 dB/octave.



- d) Set to "BP" if the amplifier is used to drive a midbass or midrange speaker.
Frequencies lower than the specified frequency set by Crossover Frequency Adjustment Knob (⑫), and higher than the frequency specified set by Crossover Frequency Adjustment Knob (⑬), are attenuated at 12 dB/octave.

⑫ Crossover Frequency Adjustment Knob (HP/LP/BP-L FREQ.) (R2-A60F only)

Use this control to adjust the crossover frequency between 50 Hz to 400 Hz.

NOTE:

- When the Crossover Mode Selector Switch (⑪) is set to [BP], adjust the Crossover Frequency Adjustment Knob (⑫) and (⑬).


⑬ Crossover Frequency Adjustment Knob (BP-H FREQ.) (R2-A60F only)

Use this control to adjust the crossover frequency between 400 Hz to 6 kHz.


NOTES:

- When the Crossover Mode Selector Switch (⑪) is set to [BP], adjust the Crossover Frequency Adjustment Knob (⑫) and (⑬).
- When the Crossover Mode Selector Switch (⑪) is set to [HP] or [LP], adjustment of the Crossover Frequency Adjustment Knob (⑬) is disabled.

Adjustment range on the Bandpass Filter Crossover Frequency

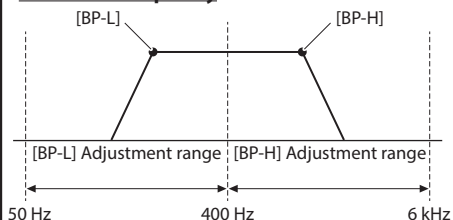

About Power Indicator

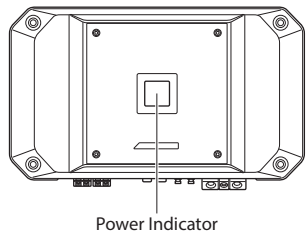

Lights up when power is on.
Is off when power is off.

Indication color	Status	Solution
Blue	Amplifier circuit is normal.	
Red (blinking)	Operating temperature is high.	Turn down the volume of the head unit (input signal). Decrease the vehicle's interior temperature to a normal level. The indicator color changes to blue.
Red	Amplifier circuit is abnormal. An electrical short has occurred, or supply current is too high.	Turn off the power supply and eliminate the cause. Then turn on the unit and verify that the indicator color has changed to blue. If it remains red, turn off the unit and consult your dealer.
	Operating temperature is too high.	Decrease the vehicle's interior temperature to a normal level. The indicator color changes to blue.
	Power supply voltage is too high.	Use the correct power supply voltage. The indicator color changes to blue.


SYSTEM DIAGRAMS

Before making a connection, check the total number of impedance of the speaker connected to the unit. If you have any questions, contact the nearest Alpine dealer.

Basic Connection Diagram for R2-A75M


- | | |
|---|--|
| ❶ Speaker Output Terminals | ❷ Rear Output |
| ❷ Remote Bass Control (optional) | ❸ Subwoofer Output |
| ❸ Pre-Out Jacks | ❹ Front Speakers |
| ❹ RCA Input Jacks | ❺ Rear Speaker |
| ❺ Fuse | ❻ Subwoofer |
| ❻ Power Supply Terminal | ❼ Dual Voice Coil Subwoofer |
| ❼ Ground Lead (sold separately) | ❽ RCA Extension Cable (sold separately) |
| ❽ Remote Turn-On Lead (sold separately) | ❾ Speaker-RCA Conversion Cable (sold separately) |
| ❾ Battery Lead (sold separately) | ❿ Y-Adapter (sold separately) |
| ❿ Head Unit, etc. | ⓫ Front Speakers (Tweeter) |
| ⓫ Front Output | ⓬ Front Speakers (Midrange) |
-

Subwoofer System

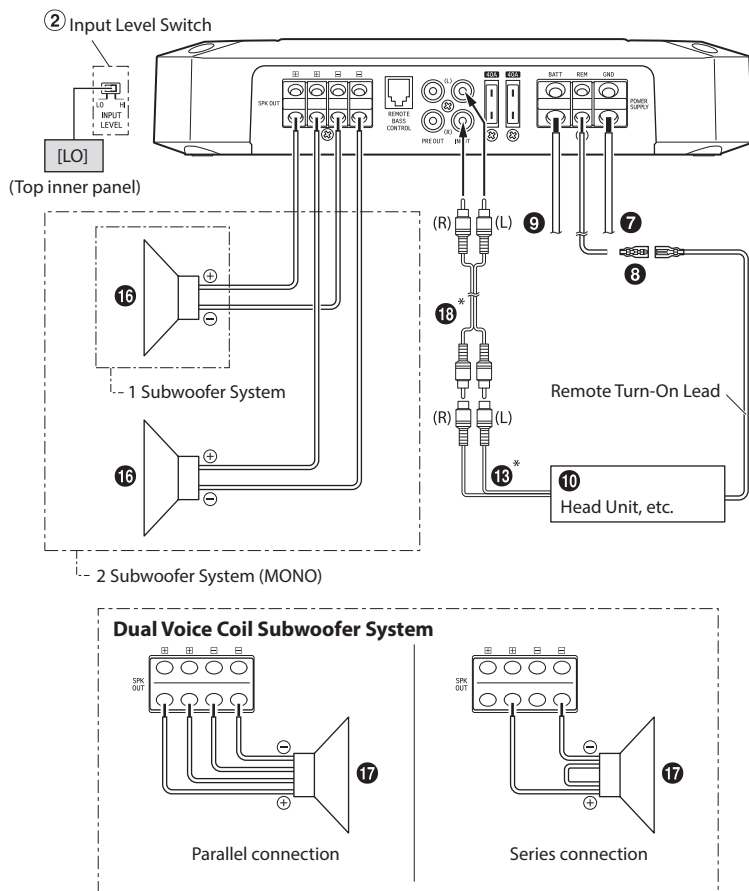

- * If the connected head unit does not have an RCA Output and RCA Extension Cable (18) cannot be used, you can use the Speaker-RCA Conversion Cable (19) (sold separately). For details on how to make a connection, see "About Connecting to the Speaker Input Level System" (page 19).
- For the 2 Subwoofer System/Dual Voice Coil Subwoofer System, make sure that the minimum impedance exceeds $2\ \Omega$ in total. In addition, the Power Output listed in the SPECIFICATIONS (page 21) is the specification with the total impedance value.

4 Speaker + Subwoofer / 2 Amplifier System (Connection example with R2-A60F)

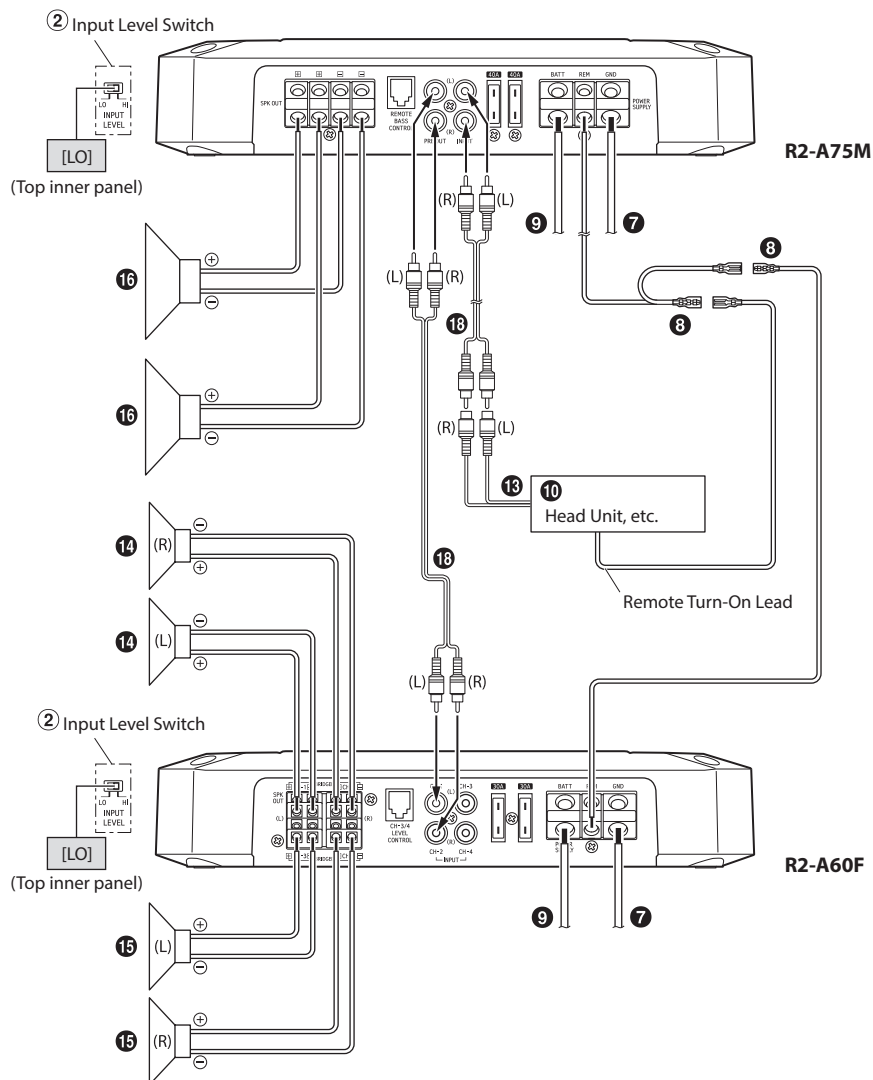



- For details on the connection of R2-A60F, see “Basic Connection Diagram for R2-A60F” (page 15).


Basic Connection Diagram for R2-A60F

- | | |
|---|--|
| ① Speaker Output Terminals | ⑫ Rear Output |
| ② Remote Bass Control (optional) | ⑬ Subwoofer Output |
| ③ Pre-Out Jacks | ⑭ Front Speakers |
| ④ RCA Input Jacks | ⑮ Rear Speaker |
| ⑤ Fuse | ⑯ Subwoofer |
| ⑥ Power Supply Terminal | ⑰ Dual Voice Coil Subwoofer |
| ⑦ Ground Lead (sold separately) | ⑱ RCA Extension Cable (sold separately) |
| ⑧ Remote Turn-On Lead (sold separately) | ⑲ Speaker-RCA Conversion Cable (sold separately) |
| ⑨ Battery Lead (sold separately) | ⑳ Y-Adapter (sold separately) |
| ⑩ Head Unit, etc. | ㉑ Front Speakers (Tweeter) |
| ㉒ Front Output | ㉓ Front Speakers (Midrange) |

For R2-A60F, change the Input Channel Selector Switch (⑩) setting according to the number of channels of the speaker input.


	4-Channel Input: ⑪ ⑫	2-Channel Input: ⑪
⑩ Input Channel Selector Switch (CHANNEL-3/4)		

4 Speaker System

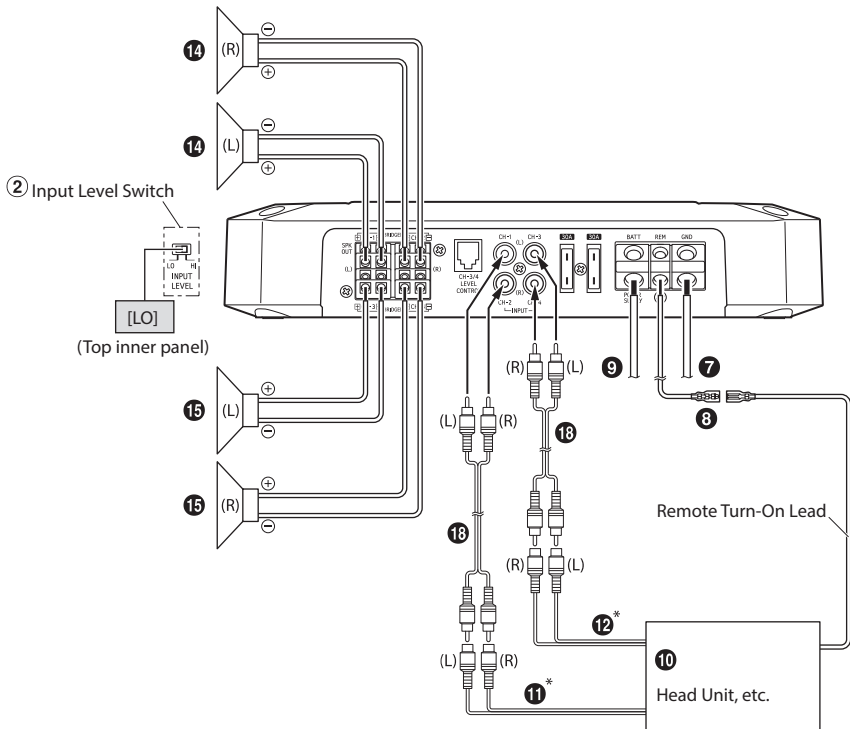


* If the connected head unit does not have an RCA Output and RCA Extension Cable (⑱) cannot be used, you can use the Speaker-RCA Conversion Cable (⑲) (sold separately). For details on how to make a connection, see "About Connecting to the Speaker Input Level System" (page 19).

2 Speaker + Subwoofer System (Bridged Connections)

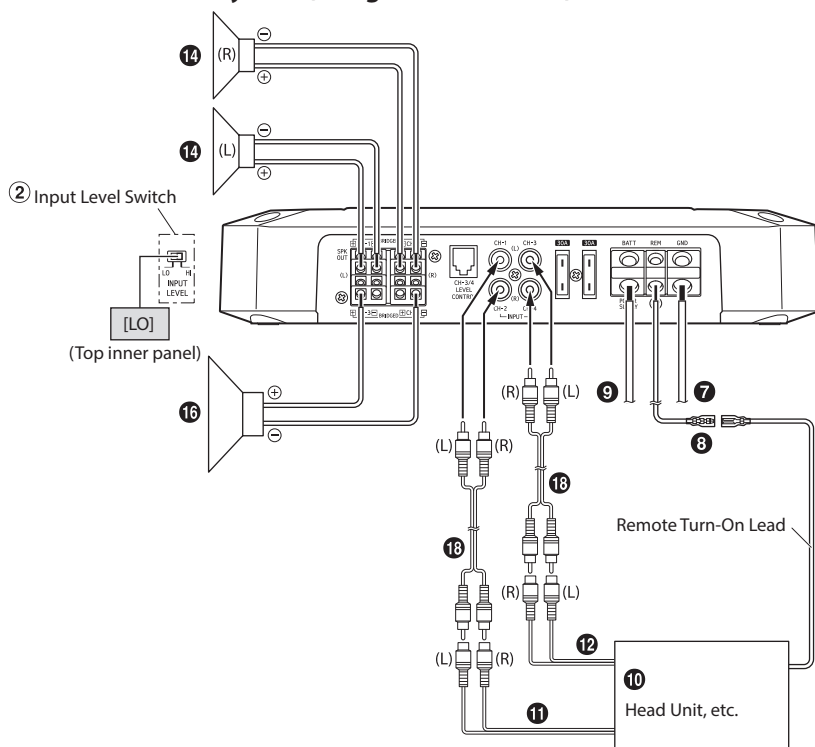
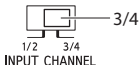



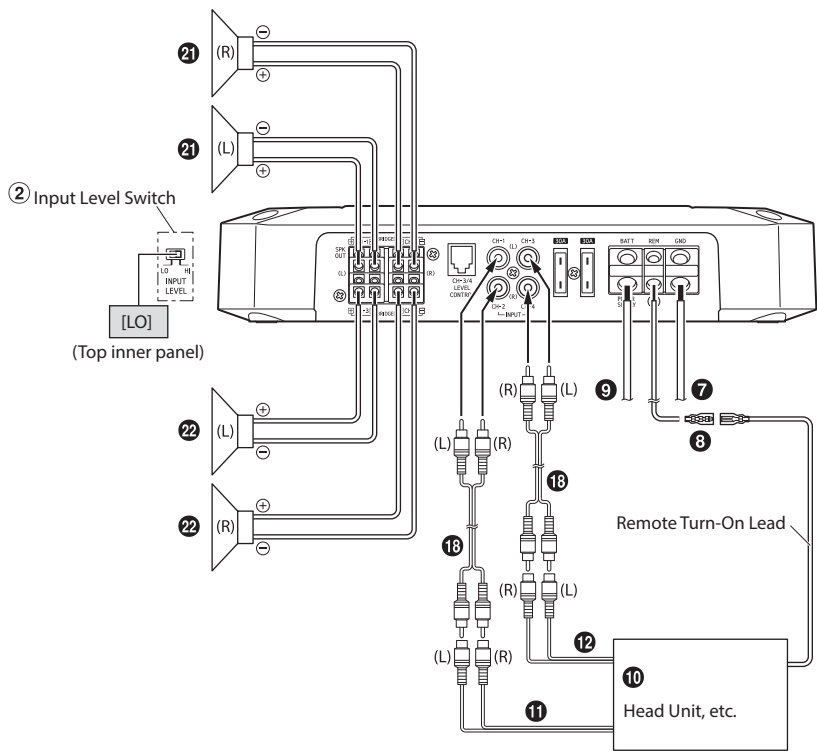
2 Speaker System (Bridged Connections)

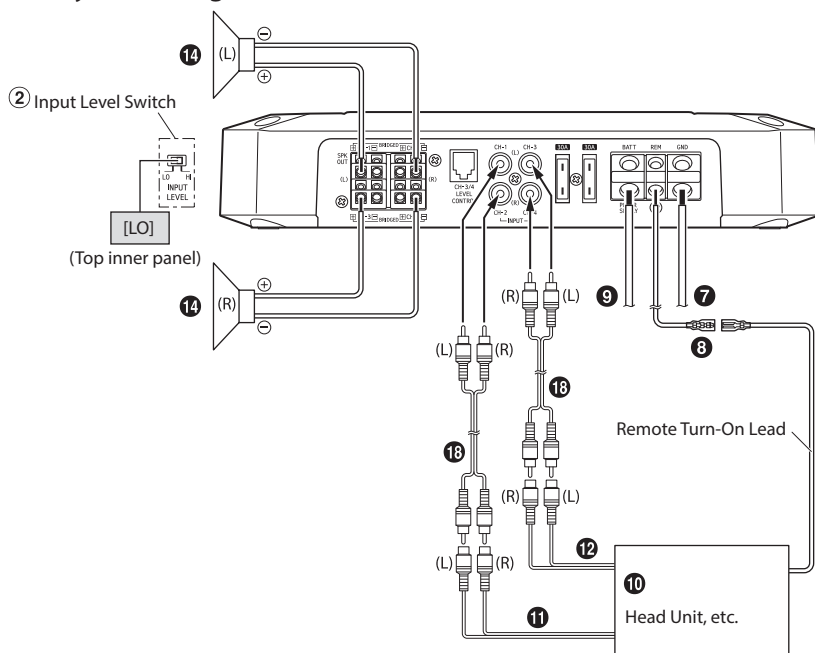

Front 2-Way System


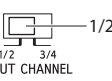

When using the Front 2-Way System, set each switch as follows.

<p>⑦ Crossover Mode Selector Switch (CHANNEL-1/2)</p> 	<p>⑩ Input Channel Selector Switch (CHANNEL-3/4)</p> 	<p>⑪ Crossover Mode Selector Switch (CHANNEL-3/4)</p> 
---	--	---





Front 2-Way + Subwoofer / 2 Amplifier System (Connection example with R2-A75M)

When using the Front 2-Way + Subwoofer / 2 Amplifier System, set each switch as follows.

<p>⑦ Crossover Mode Selector Switch (CHANNEL-1/2)</p>  <p>HP-H OFF HP LP HP-H FILTER</p>	<p>⑩ Input Channel Selector Switch (CHANNEL-3/4)</p>  <p>1/2 3/4 INPUT CHANNEL</p>	<p>⑪ Crossover Mode Selector Switch (CHANNEL-3/4)</p>  <p>BP OFF HP LP BP FILTER</p>
---	---	---


② Input Level Switch

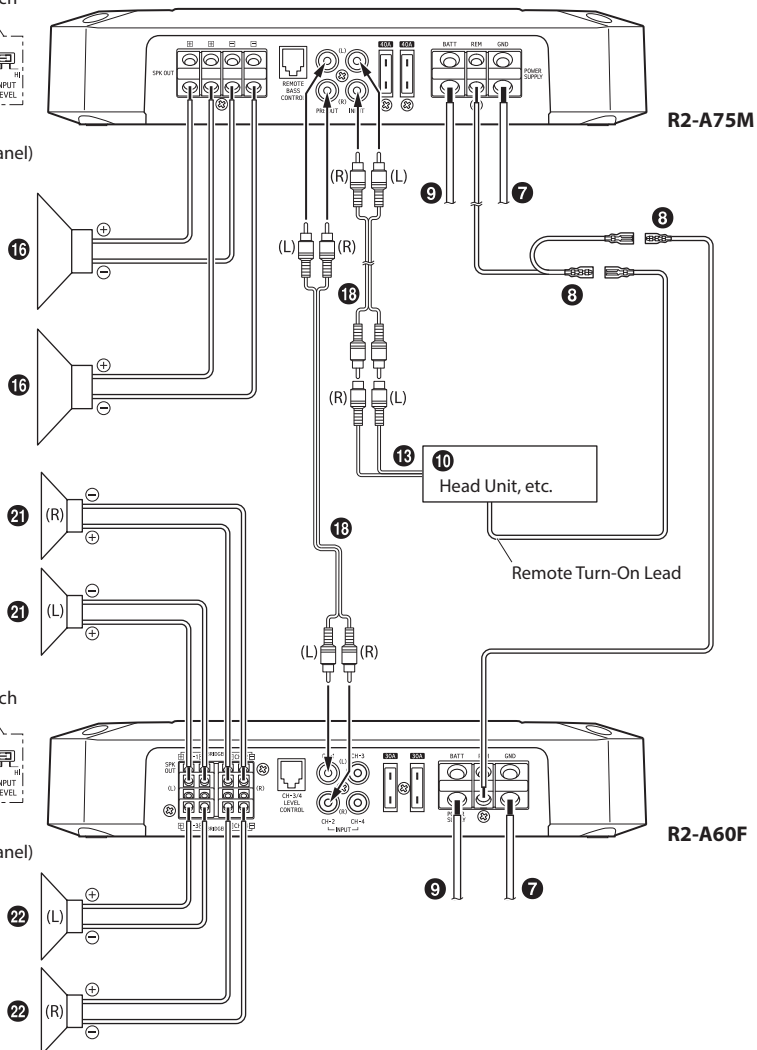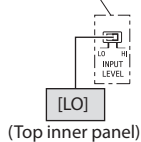

■ About Connecting to the Speaker Input Level System

When connecting by using the Speaker-RCA Conversion Cable (19) (sold separately), switch the Input Level Switch (2) to "HI".

e.g. R2-A60F

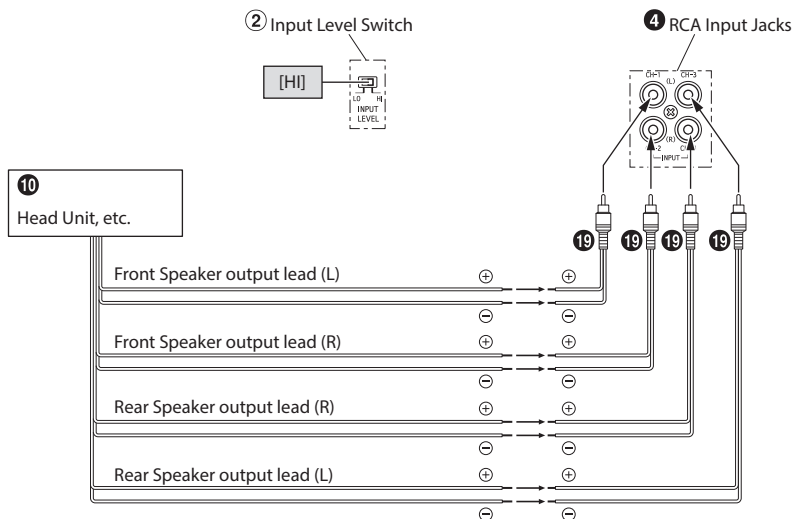


- Do not mistake the Speaker Output Lead on the head unit side connected to this unit. Front Speaker output (L)/(R) to CH1/CH2, Rear Speaker output (L)/(R) to CH3/CH4
- For the "Speaker Input Level System" setting, connecting the Remote Turn-On Lead is not required due to the "REMOTE SENSING" function of this product. However, the "REMOTE SENSING" function may not work depending on the signal source connected. In such a case, connect the Remote Turn-On Lead to an incoming power supply cord (accessory power) in the ACC position.

■ Important Tips on Bridging an Amplifier


Low output will result if only one channel input is used. The Y-adapter is not required if a stereo/mono pair line output is used to drive both inputs of the bridged amp.



Proper connection

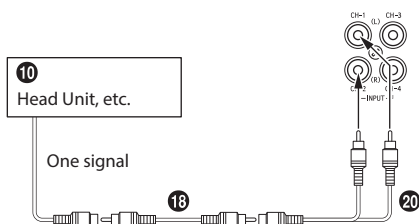

Improper connection

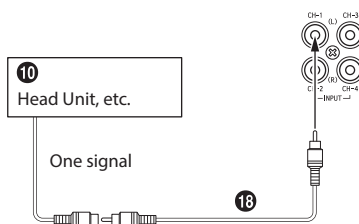


■ Cautions on Power Supply Wires

Use the specified wire size according to the total fuse capacity of the amplifier to be installed and the wire length.

For details on the wire size to be used, refer to the supplied "Cautions on Power Supply Wires Connection" and the following connection example.


Connection example when installing an amplifier alone

- When the wire length from the amplifier to the vehicle's battery is (A)
Wire size used for (A): 4 AWG/21 mm² (Max. length 8 m)
- External Fuse capacity: Make it equal to or larger than the fuse capacity of the amplifier
R2-A75M: equal to or larger than 80 A
R2-A60F: equal to or larger than 60 A

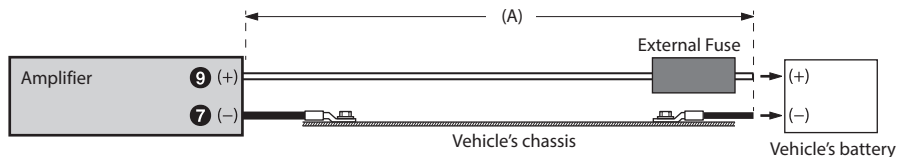

Connection example when installing two amplifiers with a fuse capacity of 80 A and one amplifier with 60 A

- When the wire length from each amplifier to the distribution block is 1 m
Wire size used for (B): 4 AWG/21 mm²
- When the wire length from the distribution block to the vehicle's battery is 5 m
Wire size used for (C): 1/0 AWG/53 mm² or 4 AWG/21 mm² x 2
- External Fuse capacity: Make it equal to or larger than total fuse capacity of the number of amplifiers installed
80 A + 80 A + 60 A = equal to or larger than 220 A

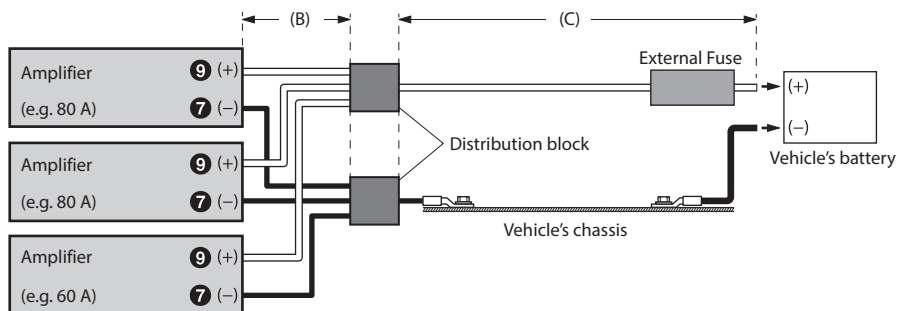

NOTE:

- If the length of the power and ground cables exceed 1 m, or if you connect more than one amplifier, a distribution block should be used.

SPECIFICATIONS

■ R2-A75M

Performance		
Power Output	Per Channel, Ref.: 4 Ω , 14.4 V	500 W RMS \times 1
	Per Channel, Ref.: 2 Ω , 14.4 V	750 W RMS \times 1
THD+N	Ref.: 10 W into 4 Ω	$\leq 0.04\%$
	Ref.: 10 W into 2 Ω	$\leq 0.06\%$
	Ref.: Rated Power into 4 Ω	$\leq 1.0\%$
	Ref.: Rated Power into 2 Ω	$\leq 1.0\%$
S/N Ratio	IHF A-wtd + AES-17 Ref.: 1 W into 4 Ω	> 75 dB
	IHF A-wtd + AES-17 Ref.: Rated Power into 4 Ω	> 102 dB
Frequency Response	+0/-3 dB, Ref.: 1 W into 4 Ω	10 Hz - 400 Hz
	+0/-1 dB, Ref.: 1 W into 4 Ω	15 Hz - 325 Hz
Damping Factor	Ref.: 10 W into 4 Ω at 100 Hz	> 250
Control		
Input Sensitivity	RCA Input Ref.: Rated Power into 4 Ω	Hi: 0.4 - 10 V Lo: 0.1 - 4.0 V
Crossover	Variable LPF	50 Hz - 400 Hz (-24 dB/oct.)
	Variable Subsonic	8 Hz - 40 Hz (-24 dB/oct.)
Equalizer	Bass EQ ($f_c=50$ Hz)	0 to +12 dB (Variable)
Remote Level*	Linear Attenuation	0 to -20 dB
General		
Input Impedance		> 10 k Ω
Preamp Output	CH-1/2 Input Pass-through, Buffered	4 V max
Dimensions	Width	282 mm (11-1/8")
	Height	55 mm (2-3/16")
	Depth	165 mm (6-1/2")
Weight		3.5 kg (7 lb 10 oz)

* Requires optional RUX-KNOB.2.

NOTE:

- Specifications and design are subject to change without notice.

■ R2-A60F


Performance			
Power Output	Per Channel, Ref.: 4 Ω , 14.4 V		100 W RMS \times 4
	Per Channel, Ref.: 2 Ω , 14.4 V		150 W RMS \times 4
	Bridged, Ref.: 4 Ω , 14.4 V		300 W RMS \times 2
THD+N	Ref.: 10 W into 4 Ω		$\leq 0.04\%$
	Ref.: 10 W into 2 Ω		$\leq 0.06\%$
	Ref.: Rated Power into 4 Ω		$\leq 0.5\%$
	Ref.: Rated Power into 2 Ω		$\leq 1.0\%$
S/N Ratio	IHF A-wtd + AES-17 Ref.: 1 W into 4 Ω		>80 dB
	IHF A-wtd + AES-17 Ref.: Rated Power into 4 Ω		>100 dB
Frequency Response	+0/−3 dB, Ref.: 1 W into 4 Ω		10 Hz - 45 kHz
	+0/−1 dB, Ref.: 1 W into 4 Ω		20 Hz - 20 kHz
Damping Factor	Ref.: 10 W into 4 Ω at 100 Hz		>100
Control			
Input Select	Selectable Input Signal Configuration (2ch/4ch Input)		CH-3/4: CH-1/2 or CH-3/4
Input Sensitivity	RCA Input Ref.: Rated Power into 4 Ω		Hi: 0.5 - 10 V Lo: 0.2 - 4.0 V
Crossover	Variable HPF/LPF/HPF-H	CH-1/2	HPF/LPF: 50 Hz - 400 Hz (−12 dB/oct.)
			HPF-H: 400 Hz - 6 kHz
	Variable HPF/LPF/BPF	CH-3/4	HPF/LPF/BPF-L: 50 Hz - 400 Hz
			BPF-H: 400 Hz - 6 kHz (−12 dB/oct.)
Remote Level*	Linear Attenuation		CH-3/4: 0 to −20 dB
General			
Input Impedance		>10 k Ω	
Dimensions	Width		282 mm (11-1/8")
	Height		55 mm (2-3/16")
	Depth		165 mm (6-1/2")
Weight		3.3 kg (7 lb 3 oz)	

* Requires optional RUX-KNOB.2.

NOTE:

- Specifications and design are subject to change without notice.

To customers/Hinweis an Kunden/A l'attention de l'utilisateur/ Información para los clientes/Informazioni per i clienti/ Till kunder

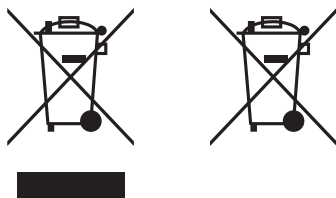

ENGLISH

Information on Disposal of Old Electrical and Electronic Equipment and Battery (applicable for countries that have adopted separate waste collection systems)

If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling. Contact your local authority for details in locating a recycle facility nearest to you. Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment.

DEUTSCH

Informationen zur Entsorgung von Elektro- und Elektronikgeräten und Batterien (anwendbar für Länder, die ein separates Sammelsystem übernommen haben)

Wenn Sie dieses Produkt entsorgen wollen, entsorgen Sie dies nicht über den normalen Hausmüll. Es gibt ein separates Sammelsystem für gebrauchte elektronische Geräte in Einklang mit den Rechtsvorschriften, die eine angemessene Behandlung, Verwertung und Recycling erfordert. Kontaktieren Sie Ihre lokale Behörde für Details bei der Suche nach einer Recycling-Anlage Ihrer Nähe. Ordnungsgemäße Verwertung und Entsorgung trägt dazu bei, Ressourcen zu schonen und schädliche Auswirkungen auf unsere Gesundheit und die Umwelt zu verhindern.

FRANÇAIS

Information sur le traitement des Déchets Electriques et Electroniques (DEEE), pour les pays ayant adopté un traitement séparés de ces déchets

Si vous possédez des appareils Electriques ou Electroniques usagés, ne les jetez pas dans le système général. Conformément à la Directive Européenne, transposée dans votre pays, il existe un système séparé de recyclage et de traitement de ces déchets. Veuillez contacter l'administration locale afin de prendre connaissance du lieu de recyclage et de traitement le plus proche de chez vous. Ce système est destiné à protéger l'environnement.

ESPAÑOL

Información sobre la eliminación de Viejos Equipos Eléctricos y Electrónicos, así como Baterías (aplicable en los países que han adoptado sistemas de recogida selectiva de residuos)

Si desea deshacerse de este producto, no lo mezcle con los residuos generales de su hogar. Existe un sistema de recogida selectiva para aparatos electrónicos usados de acuerdo a la legislación, que requiere un tratamiento adecuado de recuperación y reciclado. Póngase en contacto con las autoridades locales para obtener más información sobre el punto de recogida y tratamiento más cercano. El apropiado reciclado y eliminación de residuos ayuda a conservar los recursos y a contribuir en la prevención de los efectos negativos y perjudiciales sobre nuestra salud y el medio ambiente.

ITALIANO

Avvertenze sullo smaltimento di dispositivi elettronici guasti o usati e delle batterie (valido per quei paesi che hanno adottato il sistema di raccolta differenziata)

In caso di smaltimento del prodotto, non gettarlo assolutamente insieme ai rifiuti domestici. Esiste un sistema di raccolta differenziata per prodotti elettronici conforme alle leggi che regolano il trattamento, il deposito e il riciclo. Contattare le autorità locali per ulteriori informazioni e per trovare il punto di raccolta più vicino alla vostra abitazione. Un corretto riciclo e un appropriato smaltimento dei rifiuti contribuirà a conservare le risorse e a prevenire effetti nocivi sia sulla salute che sull'ambiente.

SVENSKA

Information om återvinning av avfall från elektriska och elektroniska produkter och batterier (tillämpligt för länder som har infört system för återvinning och sortering av avfall)

Om du vill slänga denna produkt, blanda den ej med vanliga hushållssopor. Det finns ett separat direktiv för elektronikåtervinning som kräver rätt hantering av förbrukade produkter. Kontakta din kommun angående information om var du kan lämna den för återvinning. Rätt återvinning och sophantering sparar jordens resurser och vår hälsa samt miljö.



ALPS ALPINE NORTH AMERICA, INC.

1500 Atlantic Blvd.
Auburn Hills, Michigan 48326, U.S.A.
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPS ALPINE EUROPE GmbH

Ohmstrasse 4, 85716 Unterschleissheim, Germany
Phone: +49 (0) 89-32 42 640
For contact information on your respective country,
please visit www.alpine-europe.com.

ALPS ALPINE EUROPE GmbH

Aurora House, Deltic Avenue, Rooksley, Milton Keynes,
MK13 8LW, United Kingdom
Phone: 0345-313-1640

ALPINE ELECTRONICS OF AUSTRALIA PTY., LTD.

161-165 Princes Highway,
Hallam Victoria 3803, Australia
Phone 03-8787-1200

阿尔卑斯（中国）有限公司

北京市朝阳区光华路7号汉威大厦东区28层
电话: 010-65660308

ALPS ALPINE ASIA CO., LTD.

The 9th Towers, Tower B, 24th Floor, Unit TNB01-03,
33/4 Rama 9 road, Huay Kwang, Bangkok, 10310, Thailand
Phone +66 (2) 090 9596

アルパインマーケティング株式会社

〒145-0067 東京都大田区雪谷大塚町1番7号
電話：03-5499-4531



LIMITED WARRANTY

●PRODUCTS COVERED:

This Limited Warranty ("Limited Warranty") covers Alpine Car Audio Products and Related Accessories (the "Product"). Products purchased in Canada are covered only in Canada. Products purchased in the U.S.A. are covered only in the U.S.A.

●LENGTH OF WARRANTY:

This Warranty is in effect for one year (1) from the date of the original retail purchase on the Product.

●WHO IS COVERED:

This Warranty only covers the original purchaser of the Product, who must reside in the United States, Puerto Rico or Canada.

●WHAT IS COVERED:

This Warranty covers defects in materials or workmanship (parts and labor), under normal use, in the Product.

●WHAT IS NOT COVERED:

This Limited Warranty does not cover the following:

- ① Damage occurring during shipment of the Product to Alpine for repair (claims must be presented to the carrier).
- ② Damage caused by normal wear and tear, accidents or abuse, including burned voice coils caused by over-driving the speaker (amplifier level is turned up and driven into distortion or clipping). Speaker mechanical failure (e.g. punctures, tears or rips). Cracked or damaged LCD panels. Dropped or damaged hard drives.
- ③ Damage caused by negligence, misuse, improper operation or failure to follow instructions contained in the Owner's manual.
- ④ Damage caused by an act of God, including without limitation, earthquake, fire, flood, storms or other acts of nature. Any cost or expense related to the removal or reinstallation of the Product.
- ⑤ Service performed by an unauthorized person, company or association.
- ⑥ Any Product which has the serial number defaced, altered or removed.
- ⑦ Any Product which has been adjusted, disassembled, altered or modified without Alpine's consent.
- ⑧ Any Product not distributed by Alpine within the United States, Puerto Rico or Canada.
- ⑨ **Any Product not purchased from an Authorized Alpine Dealer.**

●HOW TO OBTAIN WARRANTY SERVICE:

- ① You are responsible for delivery of the Product to an Authorized Alpine Service Center or Alpine for repair and for payment of any initial shipping charges. Alpine will, at its option, repair or replace the Product with a new or reconditioned product without charge. If the repairs are covered by this Limited Warranty, and if the Product was shipped to an Authorized Alpine Service Center or Alpine, Alpine will pay the return shipping charges. The repaired or replaced Product will continue to be covered under the original Limited Warranty period.
- ② You should provide a detailed description of the problem(s) for which service is required.
- ③ You must supply proof of your purchase of the Product.
- ④ You must package the Product securely to avoid damage during shipment. To prevent lost packages, it is recommended to use a carrier that provides a tracking service.

●HOW WE LIMIT IMPLIED WARRANTIES:

ANY IMPLIED WARRANTIES INCLUDING FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY ARE LIMITED IN DURATION TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE AND NO PERSON OR THIRD PARTY IS AUTHORIZED TO ADD TO, MODIFY, OR EXTEND THE TERMS OF THIS LIMITED WARRANTY AND/OR ASSUME FOR ALPINE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCT.

●HOW WE EXCLUDE CERTAIN DAMAGES:

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, ALPINE AND ITS PARENT COMPANY, AFFILIATES, AND SUBSIDIARIES EXPRESSLY DISCLAIM LIABILITY TO YOU UNDER ANY THEORY OF LIABILITY FOR ALL INCIDENTAL, INDIRECT DAMAGES, SPECIAL, PUNITIVE, AND CONSEQUENTIAL DAMAGES WHICH MAY BE INCURRED BY YOU IN RELATION TO THE PRODUCT. THE TERM INCIDENTAL DAMAGES INCLUDES, BUT IS NOT LIMITED TO, COSTS AND EXPENSES OF TRANSPORTING THE PRODUCT TO THE ALPINE SERVICE CENTER, LOSS OF THE ORIGINAL PURCHASER'S TIME, LOSS OF THE USE OF THE PRODUCT, BUS FARES, CAR RENTALS OR OTHER COSTS RELATING TO THE CARE AND CUSTODY OF THE PRODUCT. THE TERM CONSEQUENTIAL DAMAGES INCLUDES, BUT IS NOT LIMITED TO, THE COST OF REPAIRING OR REPLACING OTHER PROPERTY WHICH IS DAMAGED WHEN THIS PRODUCT DOES NOT WORK PROPERLY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, THIS LIMITED WARRANTY AND THE REMEDIES PROVIDED HEREUNDER ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE TOTAL LIABILITY OF ALPINE, ITS PARENT COMPANY, AFFILIATES, AND SUBSIDIARIES IN CONNECTION WITH THIS LIMITED WARRANTY AND/OR THE PRODUCT SHALL NOT EXCEED THE AMOUNT YOU ACTUALLY PAID FOR THE PRODUCT.

●HOW STATE/PROVINCIAL LAW RELATES TO THE LIMITED WARRANTY:

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state and province to province. In addition, some states/provinces do not allow limitations on how long an implied warranty lasts, and some do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, limitations as to these matters contained herein may not apply to you.

If any of the terms of this Limited Warranty are held to be null, void, illegal or unenforceable for any reason, the remaining terms of this Limited Warranty will remain in full force and effect.

For warranty service in the Canadian market, contact:
Phone: (905) 513-7733 Fax: (905) 513-7740
Email: info@gentec-intl.com
Or visit our website at <http://www.alpine-canada.com>

●HOW TO CONTACT CUSTOMER SERVICE:

Should the Product require service, please call the following number for your nearest Authorized Alpine Service Center.

CUSTOMER SERVICE	1-800-421-2284, ext. 860304
TECH SUPPORT	1-800-TECH-101 (1-800-832-4101)

Or visit our website at <http://www.alpine-usa.com>

This Limited Warranty is provided by ALPINE ELECTRONICS OF AMERICA, INC., whose principal office is at 1500 Atlantic Blvd, Auburn Hills, MI 48326, U.S.A.

Do not send Products to this address.

Call the toll-free telephone number or visit the website to locate a service center.



GARANTIE LIMITÉE

●PRODUITS COUVERTS :

La présente Garantie Limitée (la « Garantie Limitée ») couvre les produits audio pour la voiture d'Alpine et les accessoires connexes (le « Produit »). Les produits achetés au Canada sont couverts au Canada seulement. Les produits achetés aux États-Unis sont couverts aux États-Unis seulement.

●DURÉE DE LA GARANTIE :

La présente Garantie d'une durée d'un (1) an entre en vigueur à la date d'achat au détail originale du produit.

●QUI EST COUVERT :

La présente Garantie couvre uniquement l'acheteur d'origine du produit, qui doit résider aux États-Unis, à Puerto Rico ou au Canada.

●CE QUI EST COUVERT :

La présente Garantie couvre les vices de matériau ou de fabrication (pièces et main-d'œuvre) du produit, dans le cadre de son utilisation normale.

●CE QUI N'EST PAS COUVERT :

La présente Garantie ne couvre pas ce qui suit :

- ① Les dommages occasionnés pendant l'expédition du produit à Alpine pour obtenir une réparation (les demandes doivent être présentées à la compagnie de transport).
- ② Les dommages causés par l'usure normale, les incidents ou l'abus, incluant le bris des bobines acoustiques causé par l'usage abusif du haut-parleur (niveau de l'amplificateur trop haut, causant de la distorsion ou de l'écrêtage). La défaillance mécanique du haut-parleur (p. ex. trous, déchirures ou accrocs). Les panneaux ACL craqués ou endommagés. Les disques durs échappés ou endommagés.
- ③ Les dommages causés par la négligence, le mauvais usage, l'utilisation abusive ou le non-respect des instructions présentées dans le Guide d'utilisation.
- ④ Les dommages causés par les catastrophes naturelles, y compris mais sans s'y limiter, les séismes, les incendies, les inondations, les tempêtes ou d'autres calamités naturelles. Les coûts ou les frais reliés au retrait ou à la réinstallation du produit.
- ⑤ Une réparation effectuée par une personne, une entreprise ou une association non autorisée.
- ⑥ Tout produit dont le numéro de série est abîmé, altéré ou effacé.
- ⑦ Tout produit ajusté, démonté, altéré ou modifié sans l'approbation d'Alpine.
- ⑧ Tout produit qui n'est pas distribué par Alpine aux États-Unis, à Puerto Rico ou au Canada.
- ⑨ **Tout produit qui n'a pas été acheté chez un distributeur Alpine agréé.**

●COMMENT SE PRÉVALOIR DE LA GARANTIE :

- ① Vous êtes responsable de la livraison du produit à un centre de réparation Alpine agréé pour obtenir une réparation, ainsi que des frais d'expédition initiaux. Alpine choisira, à sa discrétion, de réparer ou de remplacer le produit par un nouveau produit ou un produit remis à neuf sans frais. Si les réparations sont couvertes par la présente Garantie, et si le produit a été expédié à un centre de réparation Alpine agréé ou directement à Alpine, Alpine payera les frais d'expédition du retour. Le produit réparé ou remplacé continuera à être couvert par la période initiale de la Garantie.
- ② Vous devez fournir une description détaillée du ou des problèmes qui nécessitent une réparation.
- ③ Vous devez fournir une preuve d'achat du produit.
- ④ Vous devez emballer le produit de façon sécuritaire, pour éviter tout dommage durant l'expédition. Pour prévenir la perte du colis, nous recommandons l'utilisation d'une compagnie de transport qui offre un service de suivi.

●QUELLES SONT LES LIMITES DES GARANTIES IMPLICITES :

TOUTE GARANTIE IMPLICITE, Y COMPRIS L'APTITUDE À UN USAGE PARTICULIER ET LA QUALITÉ MARCHANDE, EST LIMITÉE DANS LE TEMPS À LA PÉRIODE DE LA GARANTIE EXPRESSE ÉNONCÉE CI-DESSUS ET AUCUNE PERSONNE OU TIERCE PARTIE N'EST AUTORISÉE À AJOUTER, MODIFIER OU ÉTENDRE LES TERMES DE CETTE GARANTIE LIMITÉE ET/OU À ASSUMER AU NOM D'ALPINE TOUTE AUTRE RESPONSABILITÉ EN RAPPORT AVEC LA VENTE DU PRODUIT.

●QUELS SONT LES DOMMAGES NON COUVERTS :

DANS LA MESURE MAXIMALE PERMISE PAR LA LOI APPLICABLE, ALPINE ET SA SOCIÉTÉ MÈRE, SES FILIALES ET SES SOCIÉTÉS AFFILIÉES DÉCLINENT EXPRESSÉMENT TOUTE RESPONSABILITÉ ENVERS VOUS EN VERTU DE TOUTE THÉORIE DE RESPONSABILITÉ POUR TOUTS LES DOMMAGES ACCESSOIRES, INDIRECTS, SPÉCIAUX, PUNITIFS ET CONSÉCUTIFS QUI POURRAIENT ÊTRE ENCOURUS PAR VOUS EN RELATION AVEC LE PRODUIT. LE TERME DOMMAGES ACCESSOIRES COMPREND, MAIS SANS S'Y LIMITER, LES COÛTS ET LES FRAIS DE TRANSPORT DU PRODUIT AU CENTRE DE RÉPARATION ALPINE, LA PERTE DE TEMPS DE L'ACHETEUR INITIAL, LA PERTE D'UTILISATION DU PRODUIT, LES FRAIS D'AUTOBUS, DE LOCATION DE VÉHICULE OU D'AUTRES FRAIS LIÉS AU SOIN ET À LA GARDE DU PRODUIT. LE TERME DOMMAGES CONSÉCUTIFS COMPREND, MAIS SANS S'Y LIMITER, LE COÛT DE LA RÉPARATION OU DU REMPLACEMENT D'AUTRES BIENS QUI SONT ENDOMMAGÉS LORSQUE CE PRODUIT NE FONCTIONNE PAS CORRECTEMENT. DANS LA MESURE OÙ LA LOI APPLICABLE LE PERMET, LA PRÉSENTE GARANTIE ET LES RECOURS PRÉVUS PAR LA PRÉSENTE SONT EXCLUSIFS ET REMPLACENT TOUTS LES AUTRES. DANS LA MESURE MAXIMALE PERMISE PAR LA LOI APPLICABLE, LA RESPONSABILITÉ TOTALE D'ALPINE, DE SA SOCIÉTÉ MÈRE, DE SES SOCIÉTÉS AFFILIÉES ET DE SES FILIALES EN RAPPORT AVEC LA PRÉSENTE GARANTIE ET/OU LE PRODUIT NE DOIT PAS DÉPASSER LE MONTANT QUE VOUS AVEZ EFFECTIVEMENT PAYÉ POUR LE PRODUIT.

●COMMENT LA LOI DE L'ÉTAT/LA PROVINCE AFFECTE LA GARANTIE :

La présente Garantie vous confère des droits légaux spécifiques, et vous pourriez bénéficier d'autres droits qui varient d'un État ou d'une province à l'autre. De plus, certains États/certaines provinces ne permettent pas les limites de durée pour les garanties implicites, et d'autres ne permettent pas l'exclusion ou la limitation des dommages indirects. Les limitations susmentionnées pourraient donc ne pas s'appliquer dans votre cas.

Si l'une des conditions de la présente Garantie est considérée comme nulle, invalide, illégale ou inapplicable pour quelque raison que ce soit, les autres conditions de la présente Garantie resteront pleinement en vigueur.

Pour se prévaloir de la garantie sur le marché canadien, contactez :
Téléphone : 905-513-7733 Télécopieur : 905-513-7740
Courriel : info@gentec-intl.com
Ou visitez notre site Web au <http://www.alpine-canada.com>

●COMMENT PRENDRE CONTACT AVEC LE SERVICE À LA CLIENTÈLE :

Si le produit doit être réparé, veuillez téléphoner au numéro suivant afin de connaître le centre de réparation Alpine agréé le plus près de chez vous.

SERVICE À LA CLIENTÈLE 1-800-421-2284, poste 860304 ASSISTANCE TECHNIQUE 1-800-TECH-101 (1-800-832-4101)

Ou visitez notre site Web au <http://www.alpine-usa.com>

La présente Garantie est fournie par **ALPINE ELECTRONICS OF AMERICA, INC.**, dont le siège social se trouve au 1500 Atlantic Blvd, Auburn Hills, MI 48326, États-Unis.

N'envoyez pas de produits à cette adresse.

Téléphonez au numéro sans frais ou visitez le site Web pour trouver un centre de réparation.



REGISTER YOUR PRODUCT

Register your Alpine product(s) to help us track your warranty and get access to exclusive content, giveaways and special offers.



REGISTER ONLINE

Visit alpineusa.link/register



TEXT TO REGISTER

Text **"ALPINE"** to **71739** (US Only)

One message per opt-in. Text **"HELP"** for help. Text **"STOP"** to cancel. Message and data rates may apply.
See full privacy policy and SMS terms at www.alpine-usa.com/terms-of-use



SCAN TO REGISTER

Scan the QR Code below using your phone or device



REGISTRE SU PRODUCTO

Registre su(s) producto(s) Alpine para ayudarnos a hacer un seguimiento de su garantía y obtener acceso a contenido exclusivo, obsequios y ofertas especiales.



REGISTRO EN LÍNEA

Visite alpineusa.link/register



MENSAJE DE TEXTO PARA REGISTRARSE

Mensaje de texto con "ALPINE" al 71739 (solo en los EE.UU.)

Un mensaje por cada opción de registro. Mensaje de texto con "HELP" para obtener ayuda. Mensaje de texto con "STOP" para cancelar. Pueden aplicar tarifas por mensajes y datos. Consulte la política de privacidad completa y los términos de SMS en www.alpine-usa.com/terms-of-use



ESCANEE PARA REGISTRARSE

Escanee el siguiente código QR con su teléfono o dispositivo



ENREGISTREZ VOTRE PRODUIT

Enregistrez votre ou vos produit(s) Alpine pour nous aider à suivre votre garantie et pour accéder à des contenus exclusifs, des cadeaux et des offres spéciales.



ENREGISTREMENT EN LIGNE

Visitez alpineusa.link/register



ENREGISTREMENT PAR TEXTO

Textez « ALPINE » au 71739 (États-Unis seulement)

Un seul message par envoi. Textez « HELP » pour obtenir de l'aide. Textez « STOP » pour annuler. Des frais de messagerie et de données peuvent être exigibles. Voir la politique de confidentialité complète et les conditions d'utilisation des SMS sur www.alpine-usa.com/terms-of-use



ENREGISTREMENT PAR SCAN

Scannez le code QR ci-dessous à l'aide de votre téléphone ou autre appareil.





Verification Certificate

PASSED

Date : 2023.03.15

Load Impedance : 2 ohms

Model : R2-A75M

Test Voltage : 14.4V D.C

Serial : W

— ACTUAL TEST MEASUREMENT —

● TEST

● SPECIFICATION

● ACTUAL

Output Power(RMS) 750W min. (Subwoofer)

785 W

ALPSALPINE CO.,LTD.