




**American
International**
Car Stereo Installation Kits & Accessories

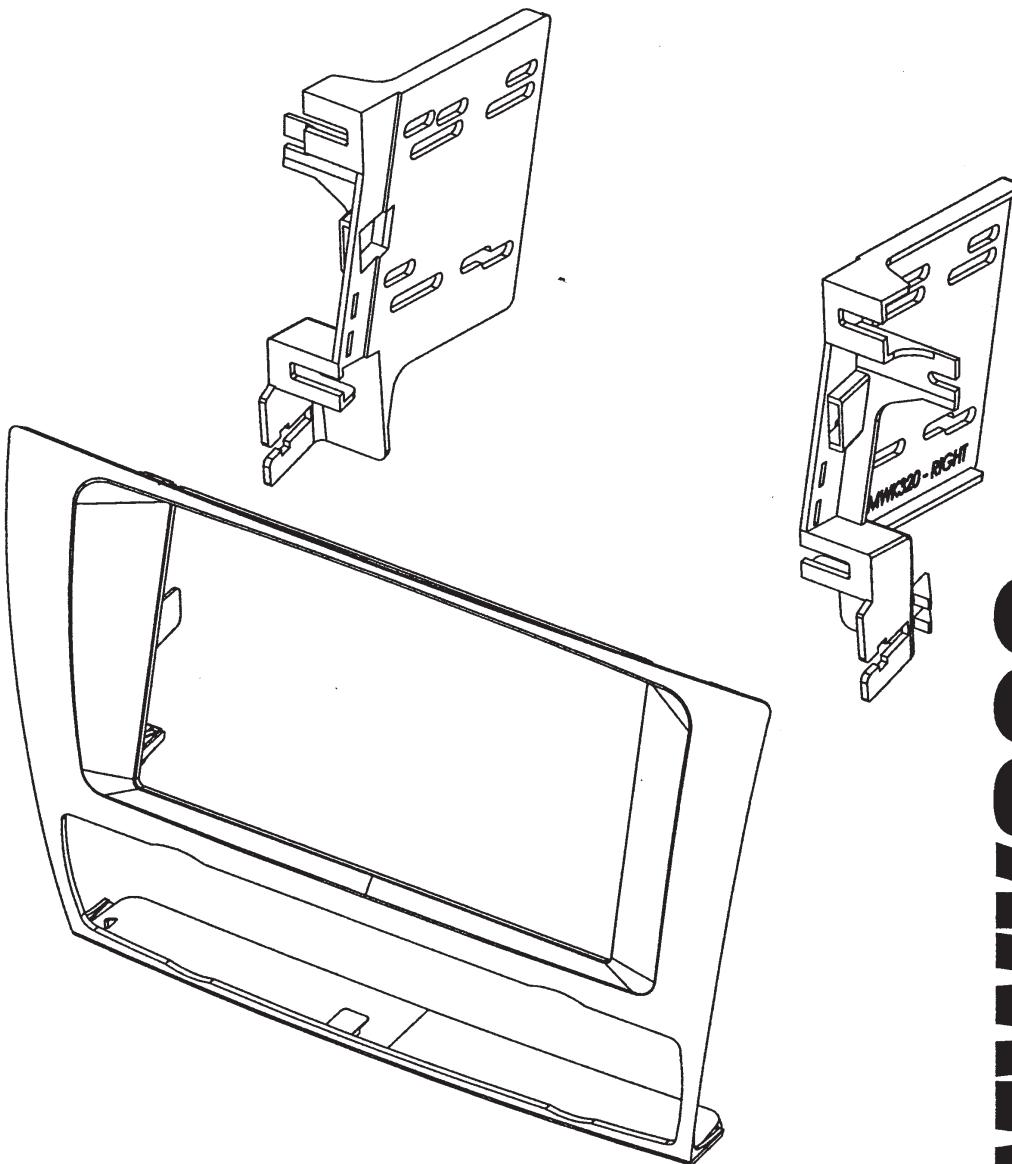

BMW K320 Mounting Kit

VEHICLE APPLICATIONS

BMW

2006-11 3 SERIES (without OEM Navigation)

2012-13 3 SERIES Non Sedan (without OEM Navigation)


**NOTE: THIS INSTALLATION KIT REQUIRES
PROFESSIONAL INSTALLATION. THE OEM CLIMATE
CONTROLS WILL NEED TO BE CUT TO MOUNT KIT.**

DASH DISASSEMBLY INSTRUCTIONS

1. Carefully remove the climate control assembly unplug harness(s)
2. Remove (2) Phillips Head Screws from the bottom of the OEM Radio.
3. Remove OEM radio and unplug harness(s)
4. Remove (4) Torx screws and (2) Hex Bolts from the OEM bracket and remove.

CLIMATE CONTROL MODIFICATION

1. Remove OEM climate controls from its bezel.
2. Trim climate control at both sides (as shown)

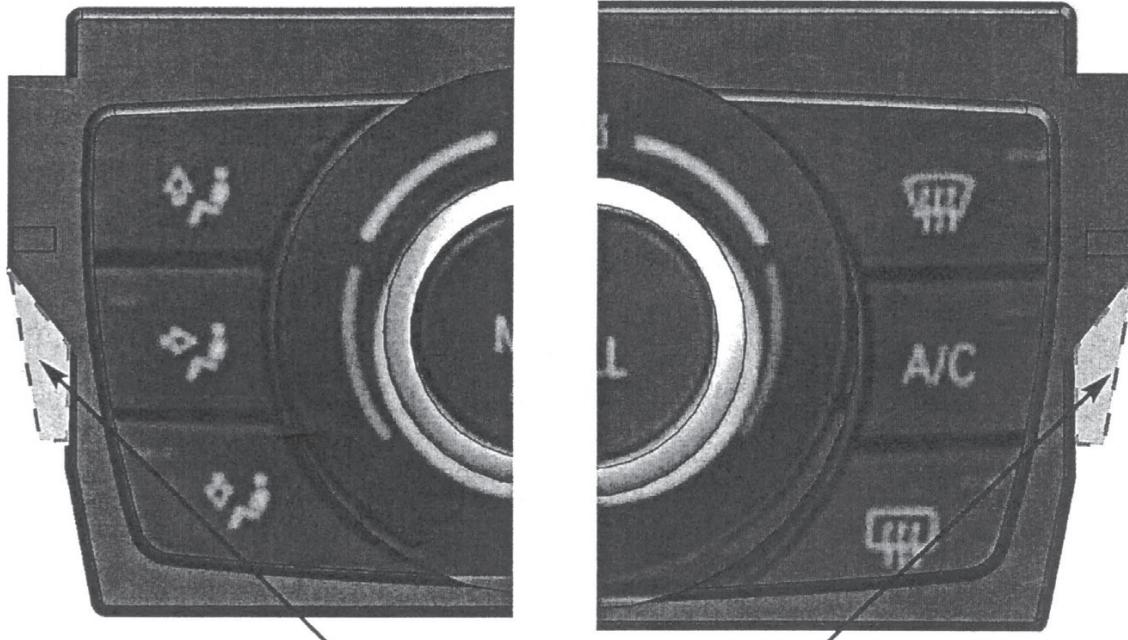


Cut and remove all areas shown in Gray from the
OEM CLIMATE CONTROL PANEL

DOUBLE DIN INSTALLATION INSTRUCTIONS

Double DIN Mount Applications

1. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible, or screws supplied with kit. Using the main frame of the BMWK320 as a guide, slide radio forward or backward for desired look and then tighten screws to the radio
2. Install (4) Metal trim clips supplied onto the 4 post located on the main frame.
3. Install climate control into the main frame, paying attention to the bottom center tab located on the main frame making sure it inserts into the OEM climate control correctly.

NOTE: When installing radio with brackets into the sub-dash, the Anchor bracket snaps need to anchor behind the lower sub-dash. Also Set radio as high as possible and use (2) of the OEM Torx screws removed previously to install the bracket.

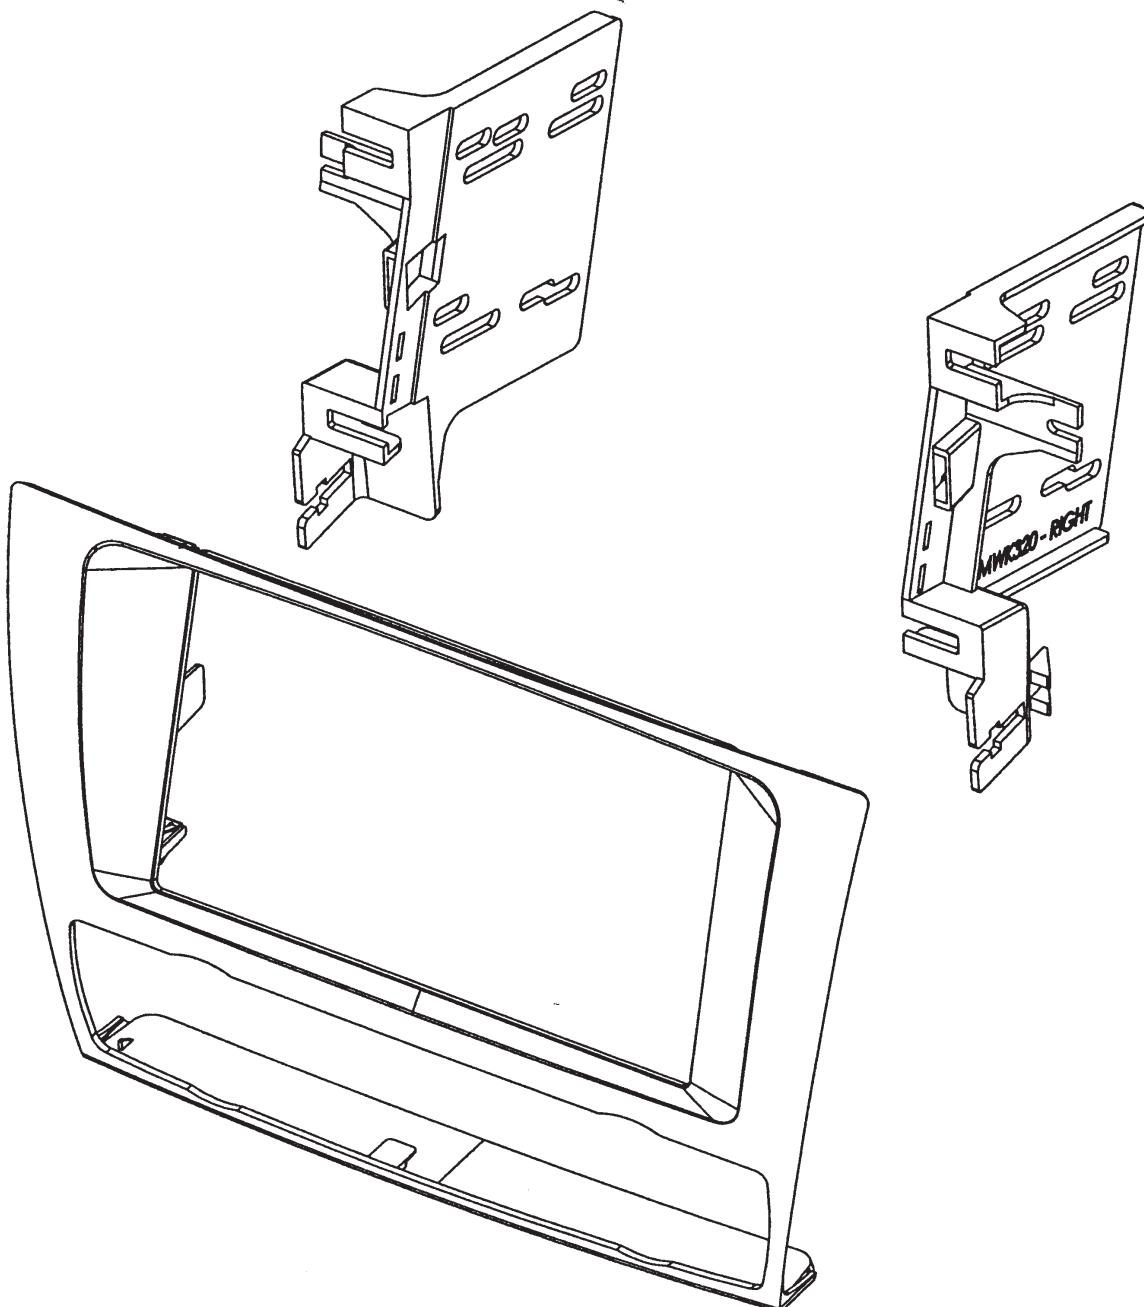



American International

WWW.AIUS.NET

2500 East Francis Street Ontario, CA 91761, U.S.A.
USA Sales (800) 336-6500

CUSTOMER HELP LINE
USA 800-323-4329

iBMW K320