


PANEL ASSEMBLY PREPARATION

1. Remove the (4) screws securing the Factory Climate Controls to the back side of the Factory Radio/Climate Control bezel, and remove Climate Controls.
2. Install the Factory Climate Controls into the back side of the FRB-5300 panel using the same screws you removed from the factory climate controls in step 1 above of panel assembly preparation.
3. Using a pair of pliers, twist off to remove the (2) metal panel fastener clips from the back side of the Factory Radio/Climate Control bezel and attach to the same locations on the FRB-5300 panel. (NOTE: The metal clips must rest all the way down on the posts or the panel will stick out when you install the panel into the dash).



**American
International**
Car Stereo Installation Kits & Accessories

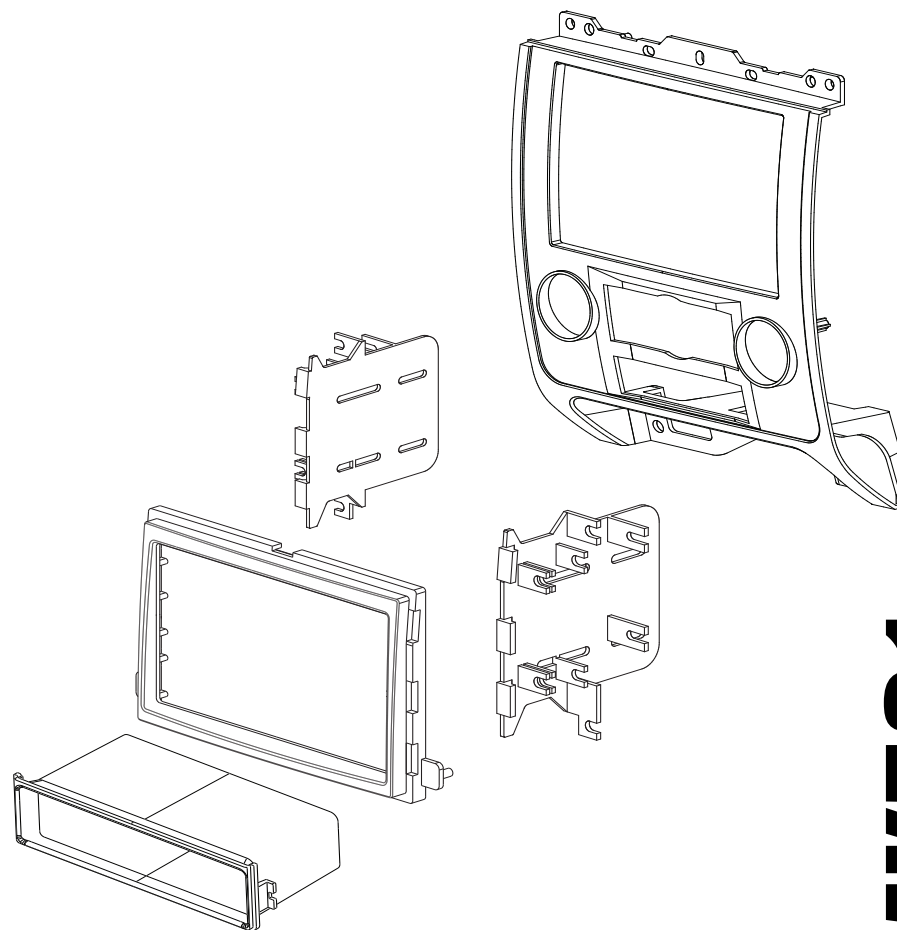

FMK531 Mounting Kit



American International

WWW.AIUS.NET

2500 East Francis Street Ontario, CA 91761, U.S.A.
USA Sales (800) 336-6500

CUSTOMER HELP LINE
USA 800-323-4329

iFMK531

VEHICLE APPLICATIONS


Ford	
2008-11	ESCAPE
Mazda	
2008-11	TRIBUTE
Mercury	
2008-11	MARINER

DASH DISASSEMBLY INSTRUCTIONS

1. Carefully pry the Vent assembly above the radio forward.
2. Remove the (2) 9/32 screws securing the top of the radio/Climate control assembly to the sub-dash.
3. Carefully pry the LOWER 12 Volt/ USB/ Auxiliary plug panel forward, disconnect all attached harnesses and remove panel.
4. Remove the (2) 9/32 screws securing the lower edge of the Radio/Climate control assembly.
5. Set the parking brake.
6. Remove the shift lock cover and press the shift lock button down using a small screwdriver or pen and depress the brake pedal and move the shift lever all the way to the rear.
7. Carefully pull the entire Radio/Climate control assembly forward (you will need a second person for the next step). Be careful not to scratch the sides of the dash, or the shift lever.
8. Remove the (1) 5/16 bolt securing the Ground strap to the right side of the assembly. Pliers may be necessary due to the short length of the strap.
9. Pull the entire assembly forward and remove all attached harnesses and antenna leads and remove assembly.
10. Remove the (4) 9/32 screws from the sub-dash to be able to mount the install kit into the dash location.

SINGLE ISO MOUNT INSTALLATION INSTRUCTIONS


1. Insert ISO brackets to rear of kit as shown in Figure A
2. Insert pocket into lower section of kit from rear & lock into slots of mounting brackets.
3. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or screws supplied with kit.
4. Slide radio forward or backward for desired look and tighten screws.
5. Attach a rear support bracket to the rear of the new radio and adjust as necessary to support the weight of the radio (Optional)

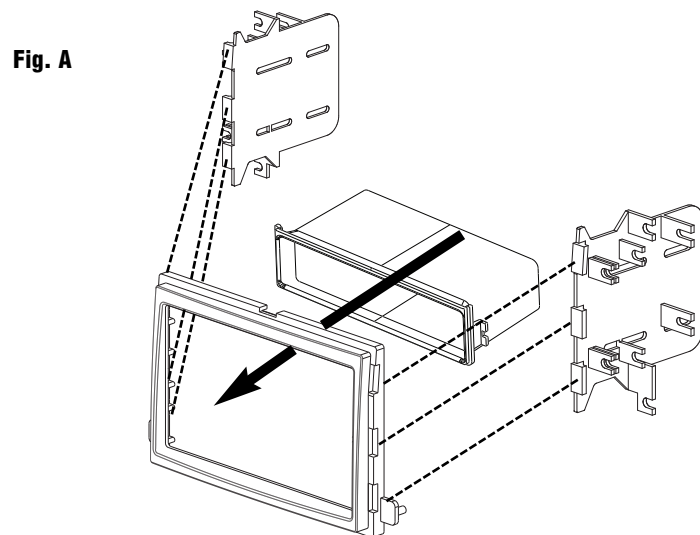

DOUBLE DIN MOUNT INSTALLATION INSTRUCTIONS


1. Attach left and right mounting brackets to the kit as shown in the figure below.
2. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or screws supplied with kit.
3. Slide radio forward or backward for desired look and tighten screws.
4. Support the rear of the radio component with back strap (optional).

Fig. B

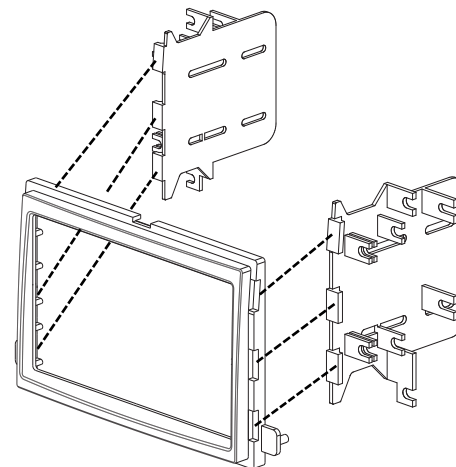

BRACKET PREPERATION

Fig. C

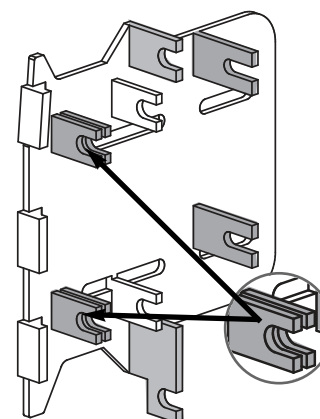

FOR FIGURE C
REMOVE **SHADED**
MOUNTING TABS ON
BOTH LEFT AND RIGHT
BRACKETS FOR:
FORD ESCAPE
MAZDA TRIBUTE
MERCURY MARINER