


For information about other American International automotive accessories visit our website at:
<http://www.aius.net>



GMK381 Mounting Kit

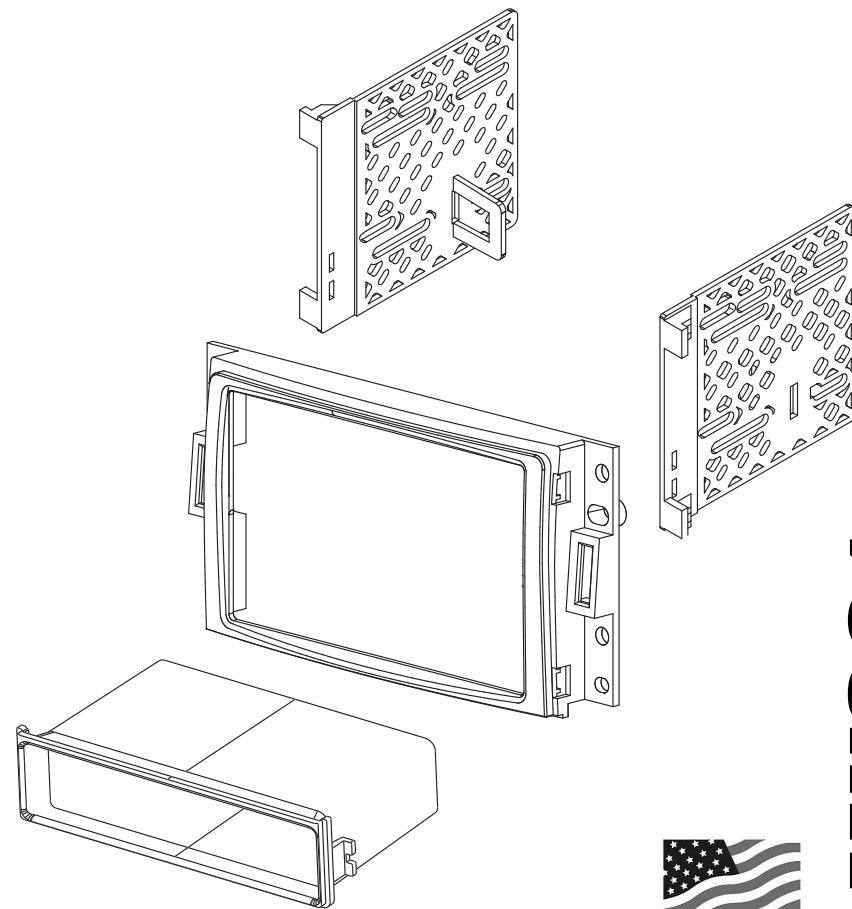

VEHICLE APPLICATIONS

Buick

2005-07 TERRAZA

Chevy

2005-13 CORVETTE

2005-08 UPLANDER

Hummer

2005-10 H3

2009-10 H3T

Pontiac

2005-06 MONTANA SV6

Saturn

2005-07 RELAY



American International

2500 East Francis Street Ontario, CA 91761, U.S.A.
USA Sales (800) 336-6500
Canada Sales (888) 922-3006

CUSTOMER HELP LINE

USA 800-323-4329 • Canada 800-245-8777

iGMK381

©2015 AMERICAN INTERNATIONAL INDUSTRIES, INC.

TECH Ver. 4/15 PRINT Ver. 4/15

2005-07 BUICK TERRAZA / 2005-08 CHEVY UPLANDER
2005-06 PONTIAC MONTANA SV6 / 2005-07 SATURN RELAY

DASH DISASSEMBLY INSTRUCTIONS

1. Carefully unclip the trim from around the radio/Climate controls and remove. (Use of a panel removal tool, or a right angle scribe tool is recommended).
2. Remove the (8) 9/32 or Phillips screws securing the Radio and Climate controls to the sub-dash.
3. Pull the Radio and Climate controls forward, lower and set the climate control out of the way, disconnect the wire harnesses and antenna lead from the rear of the factory radio and remove radio.

2005-10 HUMMER H3/ 2009-10 HUMMER H3T

DASH DISASSEMBLY

1. Carefully remove trim from around radio.
2. Remove (4) 9/32 screws securing factory radio and climate controls to the sub-dash
3. Lay climate controls out of the way.
4. Pull radio and climate controls forward, disconnect all harnesses from radio and remove radio.

2005-12 CHEVROLET CORVETTE

DASH DISASSEMBLY


1. Carefully lift up and remove the Ride Control switch/ cover plate located at the base of the center console, behind the Shifter.
2. Remove the (2) 9/32 screws located beneath the Ride Control/cover plate.
3. Carefully unfasten and remove the entire Radio/Climate Control trim bezel.
4. Remove the (4) 9/32 screws securing the radio to the sub-dash.
5. Pull the radio forward, disconnect all attached harnesses and antenna lead and remove radio.

SINGLE ISO MOUNT INSTALLATION INSTRUCTIONS

1. Insert ISO brackets to rear of kit as shown in Figure A (Pg 3).
2. Insert pocket into lower section of kit from rear & lock into slots of mounting brackets.
3. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or screws supplied with kit.
4. Slide radio forward or backward for desired look and tighten screws.
5. Attach a rear support bracket to the rear of the new radio and adjust as necessary to support the weight of the radio (Optional)

Continued on Next Page

Fig. A

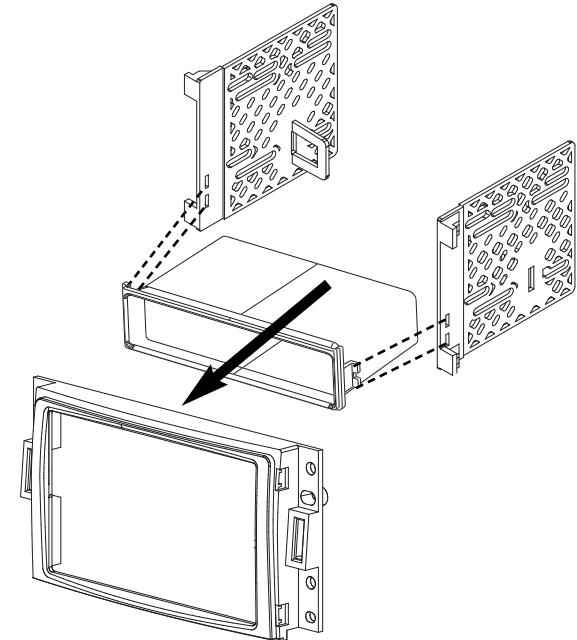

DOUBLE DIN MOUNT INSTALLATION INSTRUCTIONS

1. Remove center rib shown in Fig. B for double DIN radios only.
2. Attach left and right mounting brackets to the kit as shown in Figure C.
3. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or screws supplied with kit.
4. Slide radio forward or backward for desired look and tighten screws.
5. Support the rear of the radio component with back strap (optional).

Fig. B

