


For information about other American International automotive accessories visit our website at:

***<http://www.americaninternational.net>***



**American  
International**  
*Car Stereo Installation Kits & Accessories*

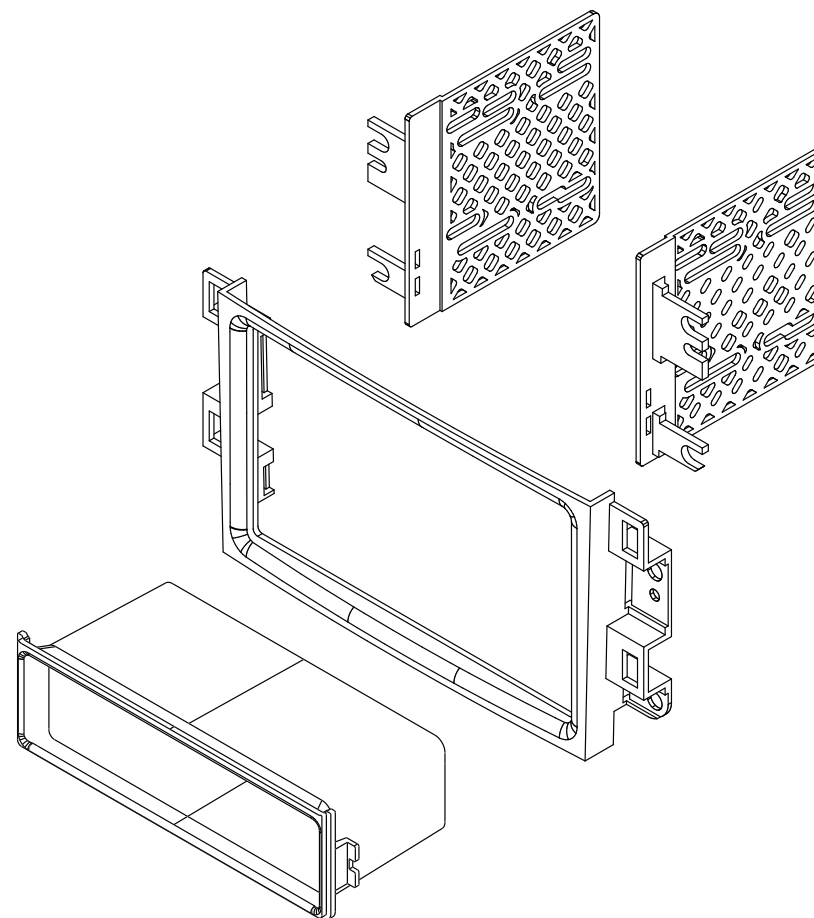

**GMK417 Mounting Kit**



**American International**

**Automotive Products Division**

1040 Avenida Acaso • Camarillo, CA 93012, U.S.A.

USA Sales (800) 336-6500

Canada Sales (888) 922-3006 • USA Fax (805) 388-7950

**VEHICLE APPLICATIONS**

**Chevrolet**

2009-11 AVEO

2009-11 AVEO 5

2007-08 AVEO LT

2007-08 AVEO LT SEDAN

**Pontiac**

2009 G3

**CUSTOMER HELP LINE**

**USA 800-323-4329 • Canada 800-245-8777**

IGMK417


## DASH DISASSEMBLY INSTRUCTIONS

1. Carefully unclip and remove the trim from around the radio and remove.
2. Remove the (4) phillips screws securing the radio to the sub-dash.
3. Pull the radio forward, disconnect all harnesses and antenna lead and remove radio.

## SINGLE ISO w/POCKET INSTALLATION INSTRUCTIONS

1. Insert ISO brackets to rear of kit as shown in Figure A
2. Insert pocket into lower section of kit from rear & lock into slots of mounting brackets.
3. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or screws supplied with kit.
4. Slide radio forward or backward for desired look and tighten screws.
5. Attach a rear support bracket to the rear of the new radio and adjust as necessary to support the weight of the radio (Optional)

Fig A

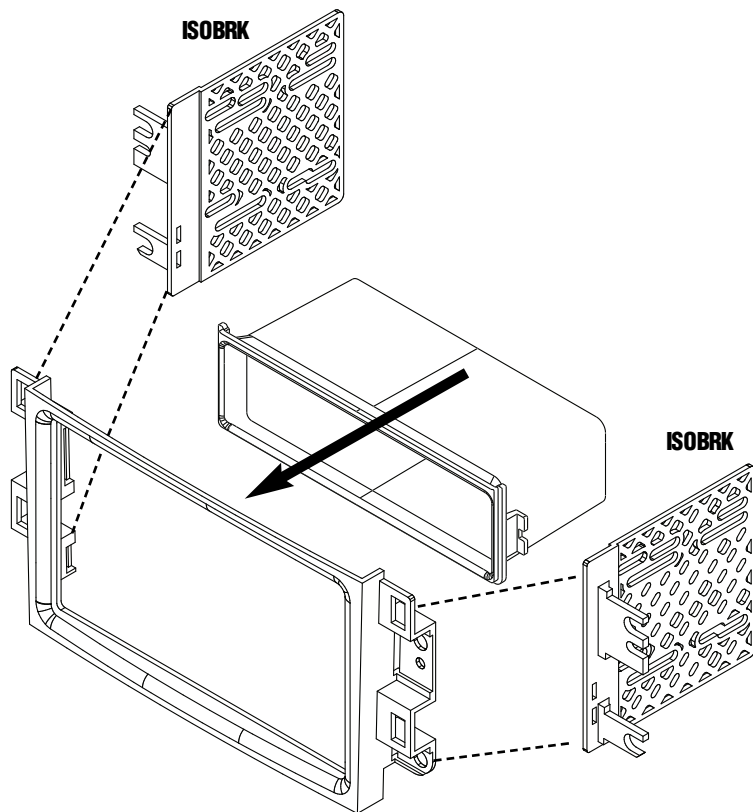

## DOUBLE DIN INSTALLATION INSTRUCTIONS

1. Attach ISO brackets to the rear of the main mounting kit.
2. Slide radio into kit from rear & attach to ISO mounting brackets using screws supplied with radio when possible or screws supplied with kit (do not tighten screws at this time).
3. Slide radio forward or backward for your desired look and then tighten the mounting screws.
4. Suggested...Attach rear support.

Fig B

