


KIT ASSEMBLY INSTRUCTIONS:

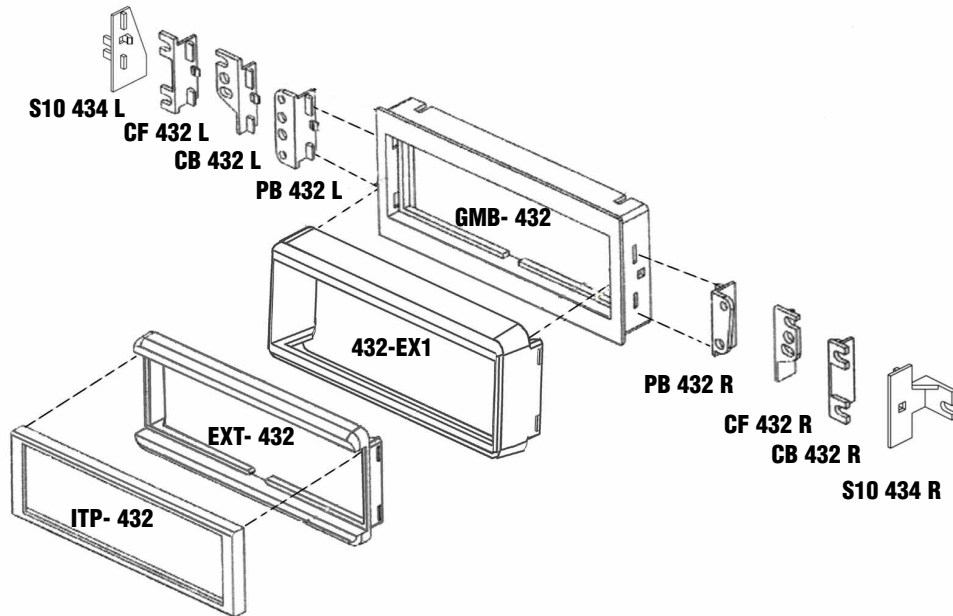

- 1. For installations on vehicles using (removable) factory mounting brackets:**
Unbolt and remove mounting brackets from factory radio, and attach to installation kit using mounting hardware (included) or factory hardware.
- 2. For installations on vehicles with (non-removable) mounting brackets:**
Select required mounting brackets included with kit and snap into locations. See below for applications

CB 432 L & R BRACKET SET WORKS FOR:
CHEVROLET APPLICATIONS
OLDSMOBILE APPLICATIONS
GMC APPLICATIONS
IZUSU HOMBRE APPLICATIONS
PONTIAC TRANS SPORT APPLICATIONS

CF 432 L & R BRACKET SET WORKS FOR:
PONTIAC FIREBIRD APPLICATIONS

PB 432 L & R BRACKET SET WORKS FOR:
PONTIAC APPLICATIONS EXCLUDING THE
FIREBIRD AND TRANS SPORT (VAN)

S10 434 L & R BRACKET SET WORKS FOR:
1986-1993 CHEVY S-10 P/U
1986-1993 GMC S-15 P/U / SONOMA
1986-1993 GMC S-15 / JIMMY
1986-1994 CHEVY S-10 BLAZER
 (Bracket set must be cut from 432-EX1 trim)

NOTE:

For vehicles with dash depth restrictions Part #432-EX1 may be required.
 American International manufactures OEM style radio Brackets. See catalog for full listing.

WWW.AIUS.NET

2500 East Francis Street Ontario, CA 91761, U.S.A.
 USA Sales (800) 336-6500
 Canada Sales (888) 922-3006


CUSTOMER HELP LINE

USA 800-323-4329 • Canada 800-245-8777

iGMK434



**American
International**
 Car Stereo Installation Kits & Accessories

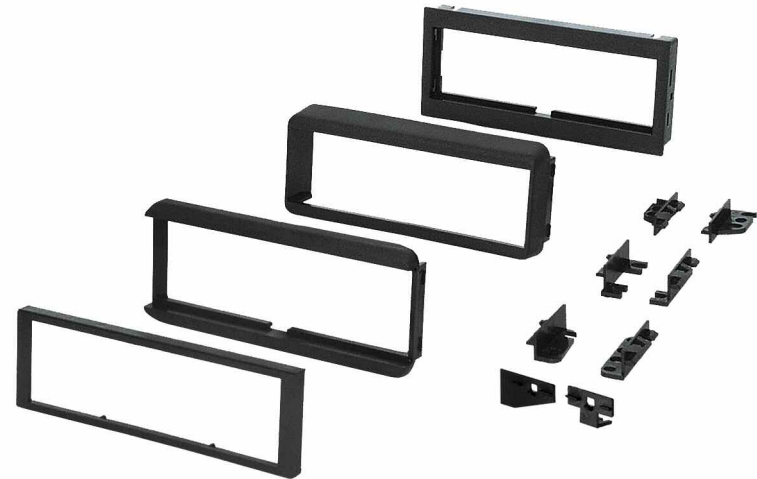

VEHICLE APPLICATIONS

Buick

1978-96 CENTURY
 1974-90 ELECTRA
 1980-94 LE SABRE
 1985-94 PARK AVENUE
 1990-91 REATA
 1978-87 REGAL
 1984-85 RIVIERA
 1992-95 RIVIERA
 1991-94 ROADMASTER
 1982-89 SKYHAWK
 1983-95 SKYLARK

Cadillac

1982-89 CIMARRON
 1985-93 DEVILLE/COUPE
 1984-91 EL DORADO
 1985-93 FLEETWOOD
 1984-91 SEVILLE

Chevrolet

1985-95 ASTRO VAN
 1991-96 BERETTA/CORSICA
 1989-91 BLAZER (FULL SIZE)
 1998-02 Blazer
 1982-92 CAMARO/Z-28
 1997-03 CAMARO
 1991-93 CAPRICE
 1994-96 CAPRICE
 1982-94 CAVALIER
 1995-99 CAVALIER
 1982-90 CELEBRITY
 1985 CITATION II
 1984-89 CORVETTE

Chevrolet Continued

1997-04 CORVETTE
 1978-88 EL CAMINO/CABALLERO
 1994-96 IMPALA SS
 1990-94 LUMINA
 1995-01 LUMINA SEDAN
 1990-96 LUMINA VAN
 1997-00 MALIBU
 1986-88 MONTE CARLO
 1995-99 MONTE CARLO
 1985-88 NOVA
 1982-85 S-10 BLAZER
 1986-94 S-10 BLAZER
 1998-02 S-10 P/U
 1982-85 S-10 TRUCK
 1986-93 S-10 TRUCK
 1988-91 SUBURBAN
 1988-95 VAN (FULL SIZE)
 1997-99 VENTURE VAN

GMC

1985-95 SAFARI VAN
 1998-02 JIMMY
 1982-85 S-15/S-10 TRUCK
 1986-93 S-15/S-10 TRUCK
 1998-02 SONOMA P/U

Isuzu

1998-01 HOMBRE

Oldsmobile

1992-95 ACHIEVA
 1991-94 BRAVADA
 1998-01 BRAVADA
 1985-91 CALAIS

Oldsmobile Continued

1982-96 CIERA
 1984-94 CUTLASS/SUPREME
 1986-93 DELTA 88
 1982-88 FIRENZA
 1984-93 NINETY-EIGHT
 1983-84 OMEGA
 1990-96 SILHOUETTE
 1997-99 SILHOUETTE
 1982-89 TORONADO

Pontiac

1982-91 A 6000
 1985-91 BONNEVILLE
 1992-99 BONNEVILLE
 1984-88 FIERO
 1982-92 FIREBIRD
 1993-03 FIREBIRD/TRANS AM
 1985-95 GRAND AM
 1996-00 GRAND AM
 1990-93 GRAND PRIX
 1994-03 GRAND PRIX
 1982-84 J 2000
 1985-88 PARISIENNE
 1982-88 SUNBIRD
 1995-96 SUNFIRE
 1995-99 SUNFIRE
 1990-96 TRANS SPORT VAN
 1997-99 TRANS SPORT VAN

Saturn

1991-94 SC COUPE, WAGON
 1991-94 SL, SL1, SL2, SEDAN

GMK434 Mounting Kit