


For information about other American International automotive accessories visit our website at:

<http://www.americaninternational.net>



**American
International**
Car Stereo Installation Kits & Accessories

HONK819 Mounting Kit

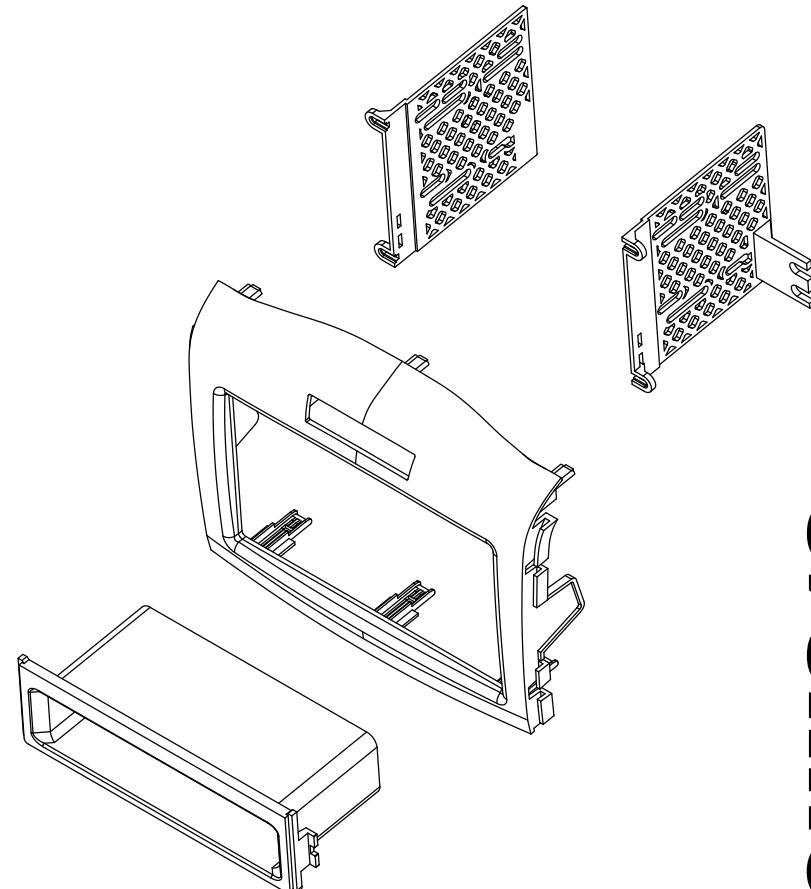

American International

Automotive Products Division

1040 Avenida Acaso • Camarillo, CA 93012, U.S.A.

USA Sales (800) 336-6500

Canada Sales (888) 922-3006 • USA Fax (805) 388-7950

CUSTOMER HELP LINE
USA 800-323-4329 • Canada 800-245-8777

iHONK819

VEHICLE APPLICATIONS

Honda
2012-14 CRV

DASH DISASSEMBLY AND RADIO REMOVAL

1. Using a soft tool, carefully unclip and remove the air vents to the left and right of the radio (See Photo).
2. Remove (2) bolts/Phillip screws from the bottom sides of the OEM Radio brackets.
3. Unclip the OEM radio and unplug all harness. Remove.
4. Remove the (3) plastic retaining clips from the bottom of the OEM radio, save for kit assembly.
5. Remove (2) Phillip screws for the hazard button, remove and save for kit assembly.




KIT ASSEMBLY INSTRUCTIONS

Single ISO Mount Applications

1. Reinstall the OEM hazard button using the (2) factory screws.
2. Install the (3) OEM plastic retaining clips to the bottom posts of the HONK819 mainframe.
3. Install the (3) supplied metal retaining clips to the top posts of the HONK819 mainframe.
4. Insert pocket into lower section of the mounting brackets, snap into slots.
5. Install brackets to rear of main frame using the (4) screws provided. (Do Not Over tighten).
6. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or screws supplied with kit.
7. Slide radio forward or backward for desired look and tighten screws.
8. Attach a rear support bracket to the rear of the new radio and adjust as necessary to support the weight of the radio (optional).

FIG.A

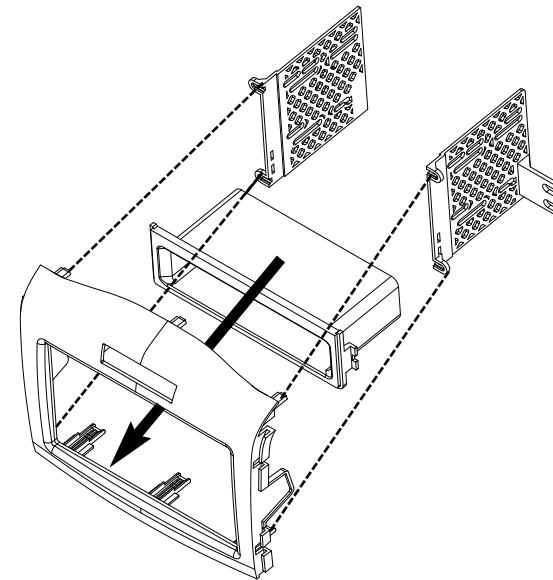

Double DIN Mount Applications

1. Reinstall the OEM hazard button using the (2) factory screws.
2. Install the (3) OEM plastic retaining clips to the bottom posts of the HONK819 mainframe.
3. Install the (3) supplied metal retaining clips to the top posts of the HONK819 mainframe.
4. Install brackets to rear of main frame using the (4) screws provided. (Do Not Over tighten).
5. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or screws supplied with kit.
6. Slide radio forward or backward for desired look and tighten screws.
7. Attach a rear support bracket to the rear of the new radio and adjust as necessary to support the weight of the radio (optional).

FIG.B

