


For information about other American International automotive accessories visit our website at:  
<http://www.aius.net>



# NDK729 Mounting Kit

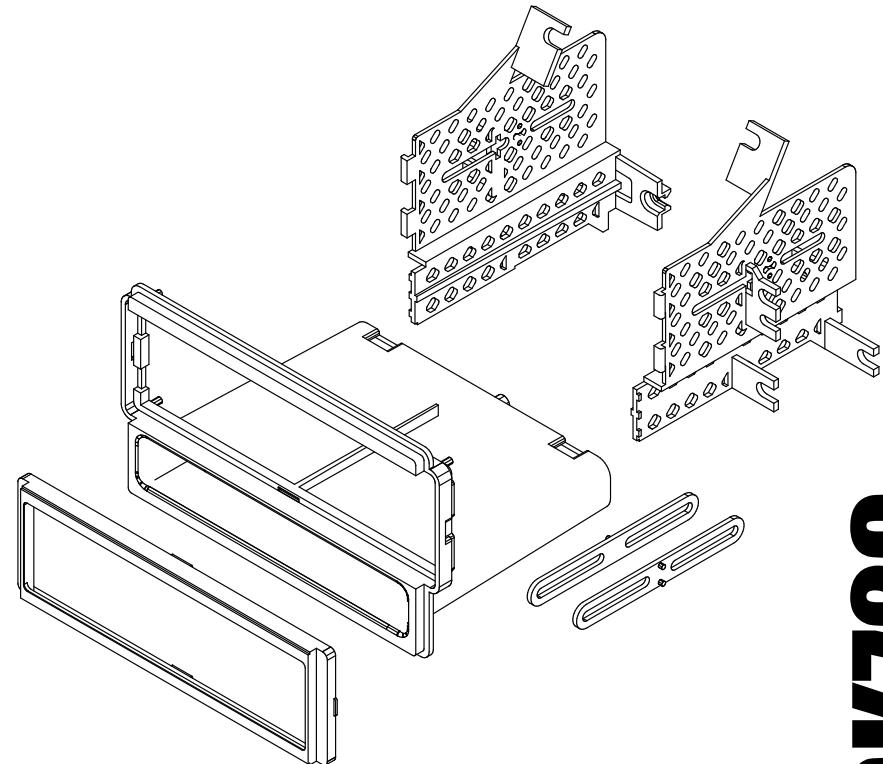

## American International

### WWW.AIUS.NET

2500 East Francis Street Ontario, CA 91761, U.S.A.  
USA Sales (800) 336-6500  
Canada Sales (888) 922-3006

### CUSTOMER HELP LINE

USA 800-323-4329 • Canada 800-245-8777

INDK729

### VEHICLE APPLICATIONS

#### Nissan

- 2005-08 FRONTIER
- 2009-13 FRONTIER (SELECT MODELS)
- 2005-07 PATHFINDER (NO FACTORY NAVIGATION)
- 2008-12 PATHFINDER S
- 2004-14 TITAN (BASE MODEL)
- 2005-08 XTERRA
- 2009-13 XTERRA (SELECT MODELS)

**Suzuki**

- 2009-12 EQUATOR EXT CAB

## DASH DISASSEMBLY INSTRUCTIONS


**NOTE:** FOR NISSAN PATHFINDER. YOU MUST REMOVE THE CUP HOLDER TRIM PANEL AND THE SHIFTER TRIM PANEL AND POCKET

1. Carefully remove the panel from the top of the radio.
2. Remove the (1) Phillips screw from the top of the Radio dash trim bezel.
3. Carefully lift upward from the bottom of the radio trim bezel, pull Radio trim bezel forward and remove.
4. Remove the (4) Phillips screws securing the factory radio to the sub-dash.
5. Pull Radio forward, disconnect all harnesses and antenna lead from radio and remove radio.

## DIN MOUNT INSTALLATION INSTRUCTIONS

**NOTE: REMOVE SHADED BRACKET TABS (Both L&R mounting brackets). SEE BELOW.**

1. Attach the left and right side brackets to the main bracket.
2. Attach left and right side brackets to the rear of the pocket using screws supplied.
3. Insert DIN sleeve from your new radio into the upper section of the installation kit. (This DIN sleeve comes with all new radios and slides off the back of the radio)
4. Depress the tabs from inside the sleeves opening upward, outward, and downward to secure sleeve to the installation kit.
5. Install radio into sleeve and lock into place.
6. Support rear of radio with back strap (Optional).

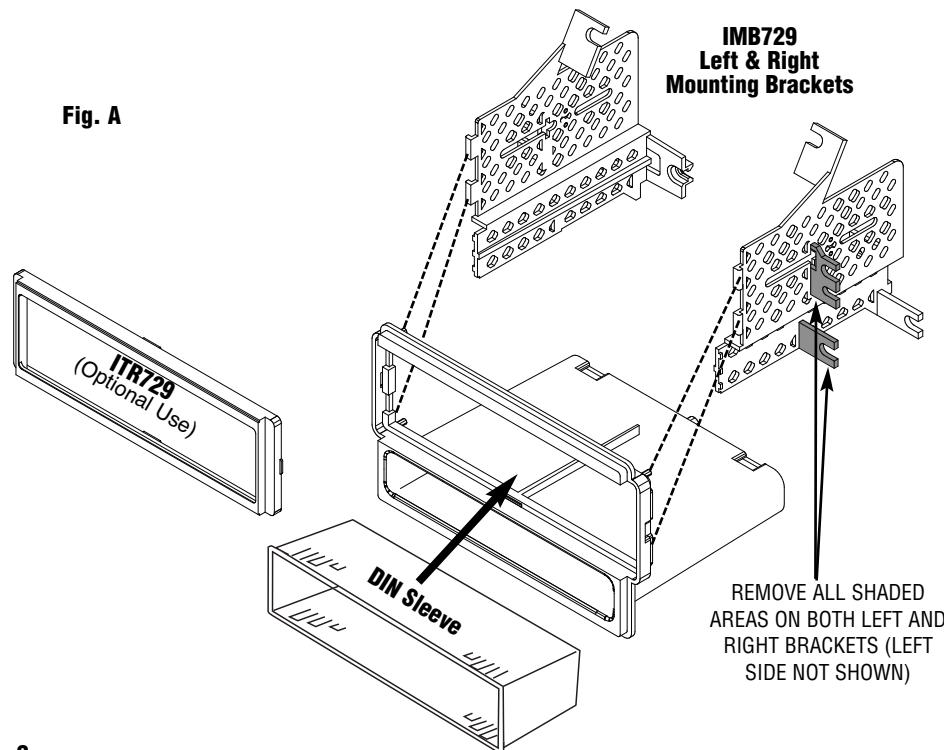

**NOTES:**

**DASH DISASSEMBLY INSTRUCTIONS**


1. Carefully remove the panel surrounding the radio and climate controls.
2. Remove the (4) Phillips screws securing the factory radio to the sub-dash.
3. Pull Radio forward, disconnect all harnesses and antenna lead from radio and remove radio.

**DIN MOUNT INSTALLATION INSTRUCTIONS**

**NOTE:** REMOVE SHADED BRACKET TABS (Both L&R mounting brackets). SEE BELOW.

1. Attach the left and right side brackets to the main bracket.
2. Attach left and right side brackets to the rear of the pocket using screws supplied.
3. Insert DIN sleeve from your new radio into the upper section of the installation kit. (This DIN sleeve comes with all new radios and slides off the back of the radio)
4. Depress the tabs from inside the sleeves opening upward, outward, and downward to secure sleeve to the installation kit.
5. Install radio into sleeve and lock into place.
6. Support rear of radio with back strap (Optional).

Fig. D

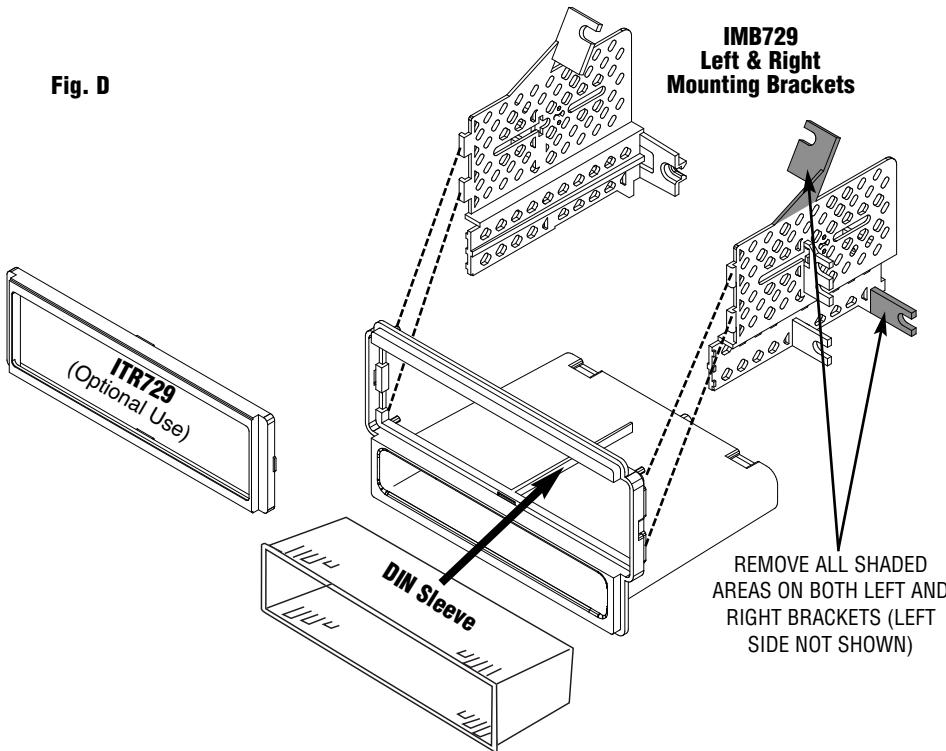**ISO MOUNT INSTALLATION INSTRUCTIONS**

**NOTE:** REMOVE SHADED BRACKET TABS (Both L&R mounting brackets). SEE BELOW.

1. Attach the left and right side brackets to the main bracket. See illustration below.
2. Attach left and right side brackets to the rear of the pocket using screws supplied w/kit.
3. Attach ISO Mount Spacers to the inside of upper section on both Left & Right mounting brackets as shown in Figure B below.
4. Slide radio into kit from rear & attach to ISO mounting brackets using screws supplied with radio when possible, or screws supplied with dash kit. (do not tighten screws at this time). (Be sure the length of the screws DO NOT touch any electrical parts inside radio, some screws may need to be shortened.)
5. Slide radio forward or backward for your desired look and then tighten the mounting screws. Use ISO trim ring when possible.
6. Attach rear support strap to rear of pocket and to rear of radio (Optional).

**NOTE:** Optional ISO trim ring (ITR729 included) may be used in place of after-market radio's trim ring. For ISO mount applications, mount after-market radio to side brackets using hardware included.

**For ISO mount:** Attach (1) ISO Spacer to the inside of upper section on both Left & Right mounting brackets as shown in Fig. B.


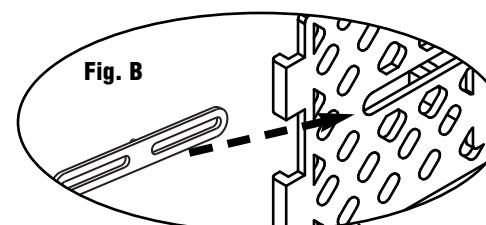


Fig. E

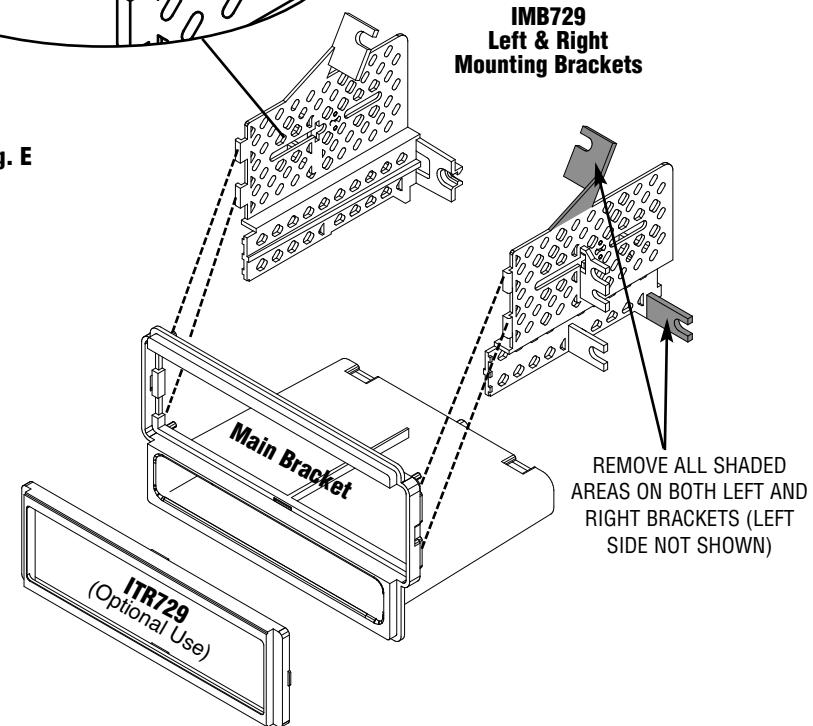


## NOTES:

## ISO MOUNT INSTALLATION INSTRUCTIONS


**NOTE:** REMOVE SHADED BRACKET TABS (Both L&R mounting brackets). SEE BELOW.

1. Attach the left and right side brackets to the main bracket. See illustration below.
2. Attach left and right side brackets to the rear of the pocket using screws supplied w/kit.
3. Attach ISO Mount Spacers to the inside of upper section on both Left & Right mounting brackets as shown in Figure B below.
4. Slide radio into kit from rear & attach to ISO mounting brackets using screws supplied with radio when possible, or screws supplied with dash kit.  
(do not tighten screws at this time). (Be sure the length of the screws DO NOT touch any electrical parts inside radio, some screws may need to be shortened.)
5. Slide radio forward or backward for your desired look and then tighten the mounting screws. Use ISO trim ring when possible.
6. Attach rear support strap to rear of pocket and to rear of radio. (OPTIONAL)

**NOTE:** Optional ISO trim ring (ITR729 included) may be used in place of after-market radio's trim ring.  
For ISO mount applications, mount after-market radio to side brackets using hardware included.

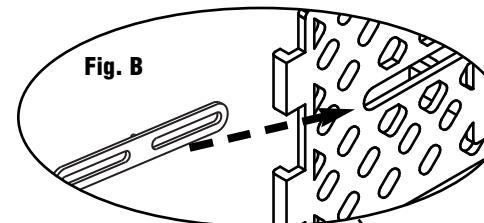

**For ISO mount:** Attach (1) ISO Spacer to the inside of upper section on both Left & Right mounting brackets as shown in Fig. B.

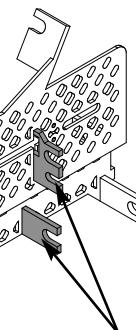

REMOVE ALL SHADED  
AREAS ON BOTH LEFT AND  
RIGHT BRACKETS (LEFT  
SIDE NOT SHOWN)