



SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030
www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

RG4-Q3V1

2018-Up Polaris Ranger XP1000
3 Speaker RGB LED Audio Kit
Phase 3 with JVC MR1



Ranger XP1000

pg 3

Panels and Dash
Disassembly

pg 5

Amp Tray
Installation

pg 7

JVC MR1
Installation

pg 10

LIT-CC RGB Controller
Installation

pg 11

Subwoofer
Installation

pg 14

RGB Kick Panel Speakers
Installation



WIRING DIAGRAM OF COMPLETE KIT

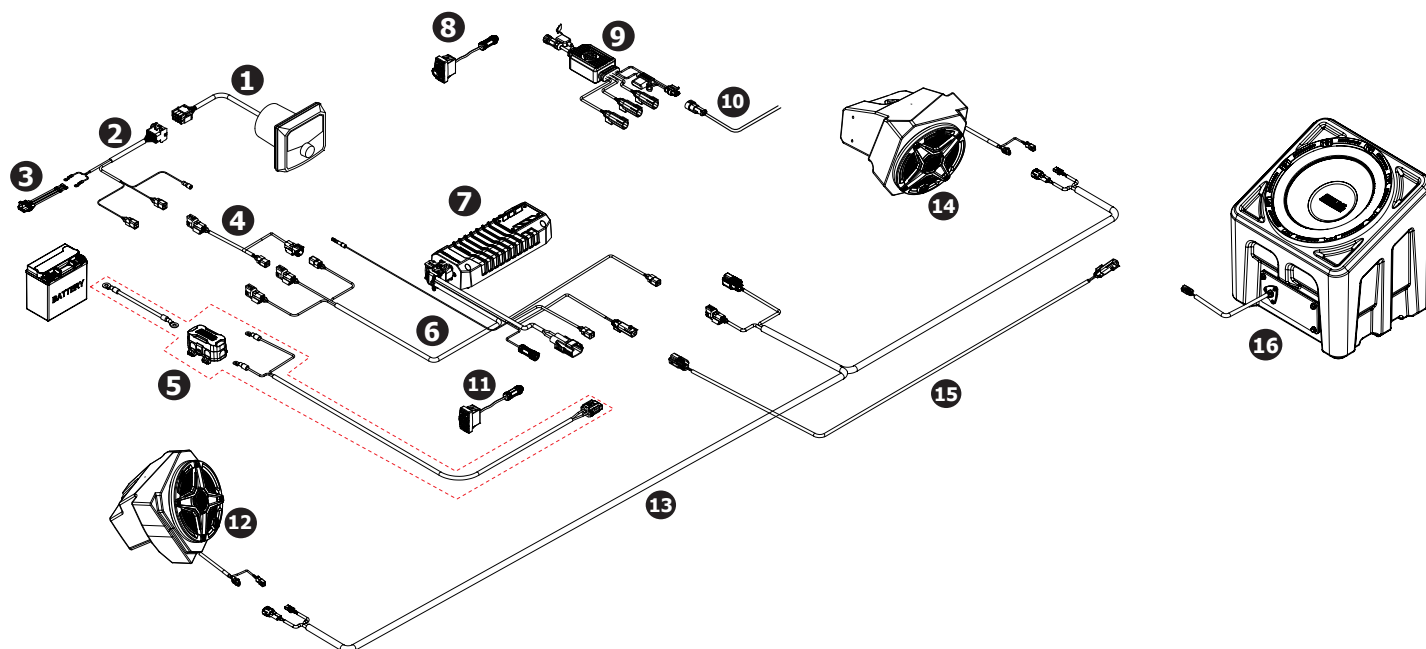


Figure 1

Figure 1 is designed to show the installer a reference overview of the complete 3 speaker RGB LED wiring diagram. Each installation section will have its own detailed wiring diagram.

	Description	Part #
1	Bluetooth Media Receiver w/ 2.7" color display	B-MR1
2	JVC to SSV Harness Adapter, 3 ft.	B-H2367
3	Pulse Connector Power/Ground Harness	B-H1752
4	4-Pin "Y" Audio Splitter	B-H1403
5	Amp Wiring Kit Assembly, 10 ft.	A-H1Q
6	800.5 Amplifier 32-Pin Universal Harness	B-H2605
7	800 Watt 5 Channel Amplifier	B-A8005
8	RGB LED Controller Rocker Switch for 230-LIT-CC	230-LIT-CC
9	SWITCH Works RGB LED Controller Command Center	
10	230-LIT-CC Power Harness	
11	Amplifier Rocker Switch for B-A8005	B-AMPRS
12	Front Kick Pod Enclosure, Left	220-RG4-F65V
13	RGB Front Speaker Harness, 4 ft.	B-H2935
14	Front Kick Pod Enclosure, Right	220-RG4-F65V
15	2-Pin Audio, Sub Extension Harness	B-H2702
16	X3 Loaded Subwoofer Enclosure, 10" 2 ohms	230-RG4-SB10V

PANELS AND DASH DISASSEMBLY

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.




Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

TOOLS NEEDED FOR INSTALLATION

- T-40/30/25 Torx Driver - Phillips Screwdriver - Drill - 3/32" Bit - 9/16" Bit



A. Remove hood by turning locking pins and lifting up.

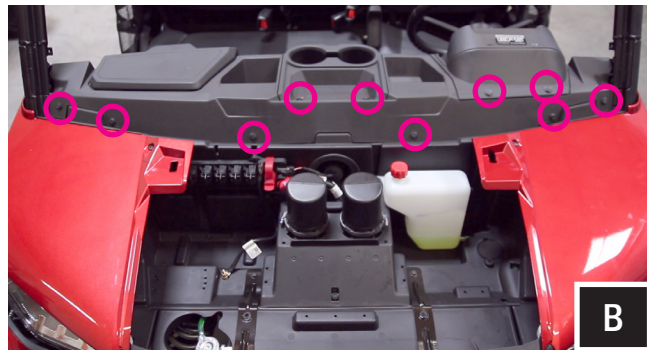

B. Use a panel tool to extract push pins circled in pink.



C. With push pins extracted, lift to remove the cup holder.



D. Lift and disconnect gauge cluster for removal.




E. Unscrew (4) torx screws located in upper glove box and remove box.



F. Extract push pins that are now exposed from removing the upper glove box.



G. Extract push pins exposed from cup holder removal.

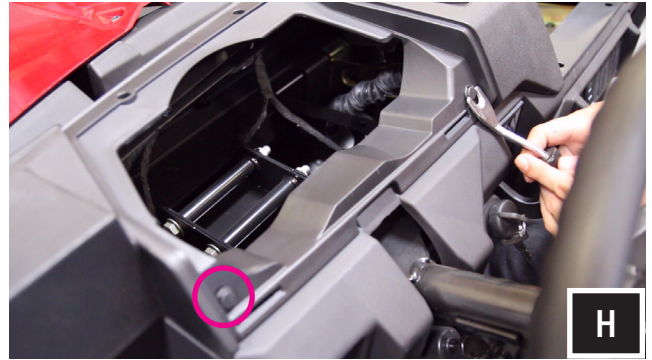


H. Extract push pins exposed from gauge cluster removal.



I. Extract push pins located above driver and passenger side cup holders.




J. Lift to remove the dash.

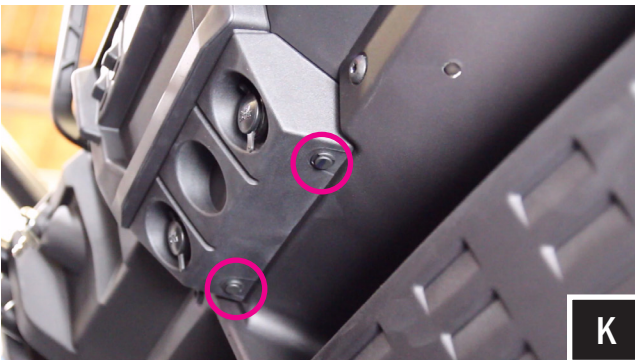

K. Extract push pins located beneath 12v sockets.



L. Remove front dash panel and disconnect the 12v socket harness.

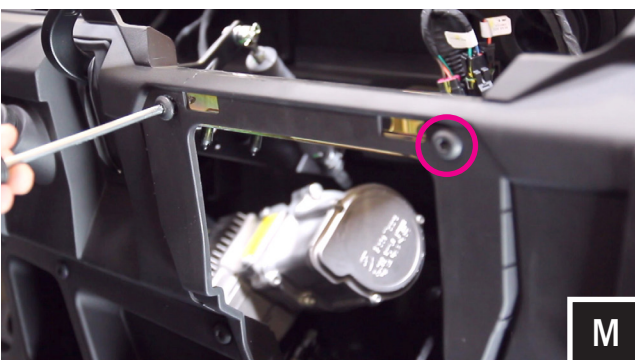

M. Unscrew (2) torx screws that were behind the front dash panel.

AMP PLATE INSTALLATION PARTS LIST

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. All SSV Works speakers are covered by a limited warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.


PARTS LIST IMAGES



1. Amp Tray (B-A2554)
pre-loaded with Phase EQ Amp



2. M6 x 1.0 Screw x4
(T-30 Torx) (B-S2187)

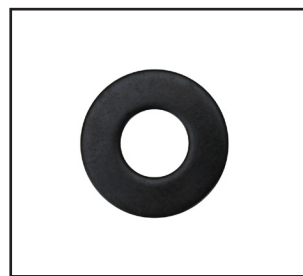


3. M6 Washer x4

AMP PLATE INSTALLATION


TOOLS NEEDED FOR INSTALLATION

- T25, T30 Torx Driver

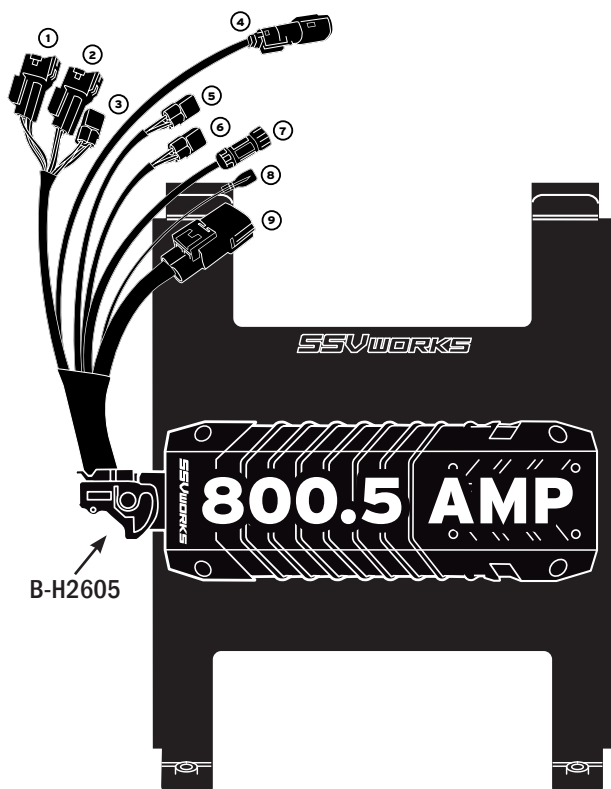


B-H2605 800.5 Amplifier Harness

1. INPUT (FRONT) - CONNECT TO JVC MR1 "FRONT SPEAKERS"
2. INPUT (REAR) - CONNECT TO B-H1403 AUDIO "Y" SPLITTER
3. INPUT (SUB) - CONNECT TO B-H1403 AUDIO "Y" SPLITTER
4. OUTPUT (SUB) - CONNECT TO B-H2702 2-PIN SUB EXTENSION
5. OUTPUT (FRONT) - CONNECT TO FRONT SPEAKER HARNESS
6. OUTPUT (REAR) -CONNECT TO REAR SPEAKER EXTENSION
7. EXT SWITCH - ROCK & RIDE
8. AMP TURN-ON
9. TO POWER INPUT

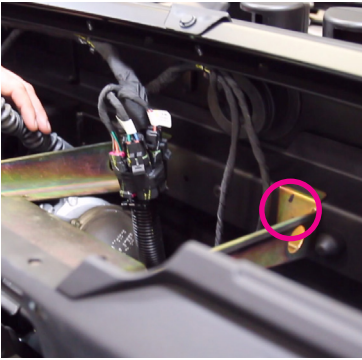


A. Unscrew the two (2) torx screws connecting the dash bracket at the rear of the dash cavity. Remove the under dash bracket.
NOTE: IT WILL NOT BE RE-INSTALLED.

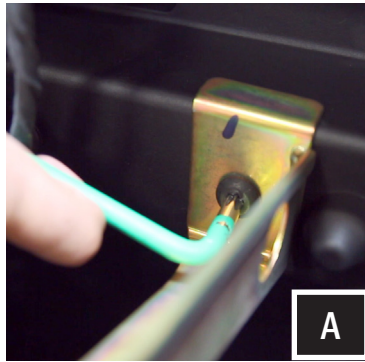


B. Move the factory wiring to the rear of the dash cavity. Place the RG4 Amp mounting plate in the former location of the factory bracket.



C. With the RG4 Amp mounting plate set in place, check for any pinched wiring.

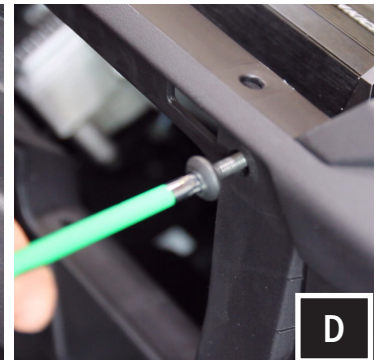

D. Fasten down the plate with the factory hardware.

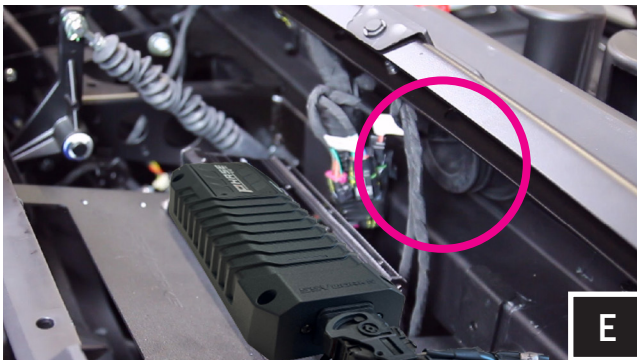

E. Run amp power, and speaker extension cables out through the grommet that is fixed into the firewall (circled in pink). Be sure to run the correct end of the cable out through the firewall to avoid the inability to connect to the speakers.

DASH KIT ASSEMBLY PARTS LIST

PARTS LIST IMAGES



1. DMR1 Dash Kit x1



2. JVC MR1 Headunit and Trim Ring




4. B-H1752 Pulse Power/Ground Harness



3. M6 x 1.0 Screws x2 (T-30 torx)



4. U-Clips x2

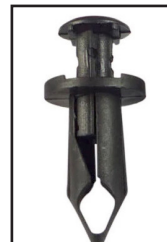

5. Push Pins x2

INSTALLATION NOTES

JVC MR1 Media Player, base mounting plate, trim ring and dash screws included with kit compatible head units not included with RG4-DMR1. For instructions regarding the headunit, refer to the JVC manual.

DASH KIT ASSEMBLY and WIRING




Always disconnect the battery before installing any electronics.






A. Use a panel tool to extract push pins on the top of the center cup holders.



B. With push pins extracted, lift to remove the cup holder.


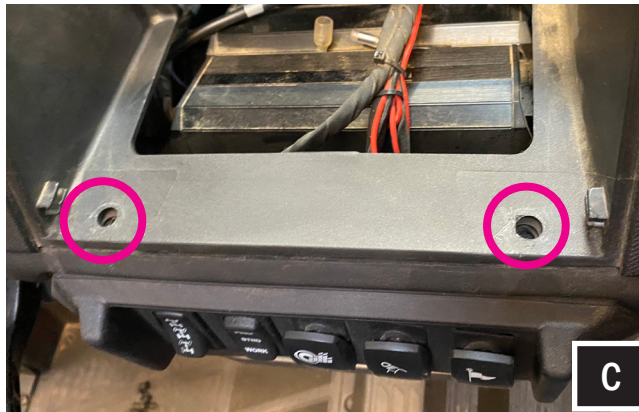


C. Using a panel removal tool gently lift the existing plastic panel on the center dash support. Install the two (2) supplied U-Nut clips by sliding them onto the bottom of the center dash panel support and align holes as needed.

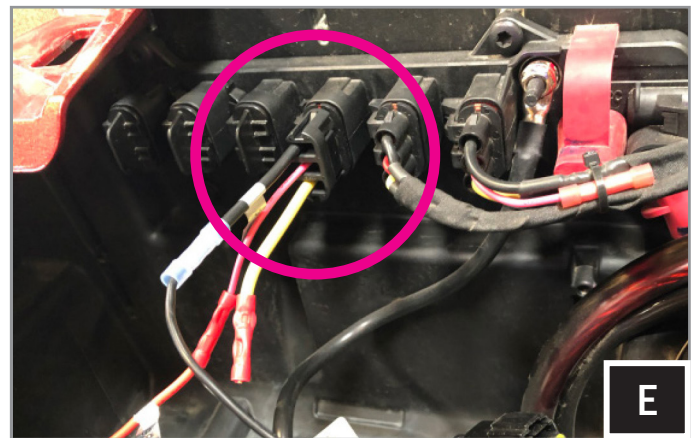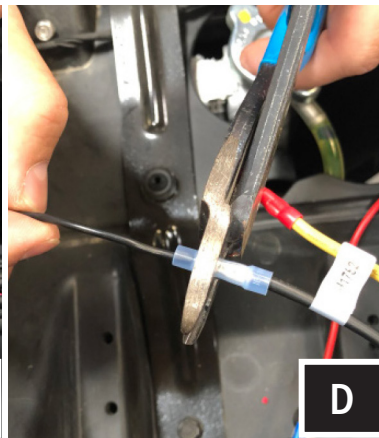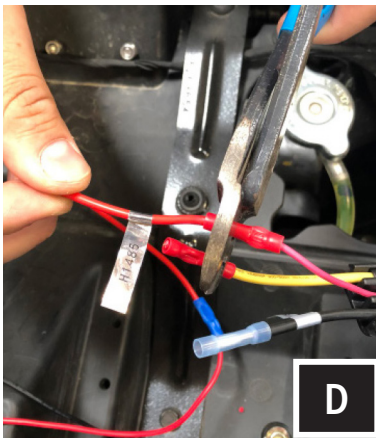

D. Cut and strip power and ground wires of B-H2367, JVC to SSV harness. Crimp the wires to the provided B-H2367 harness. Red for ACC power and black for ground.

E. Once crimped, remove Pulse port guard and connect to the factory busbar.

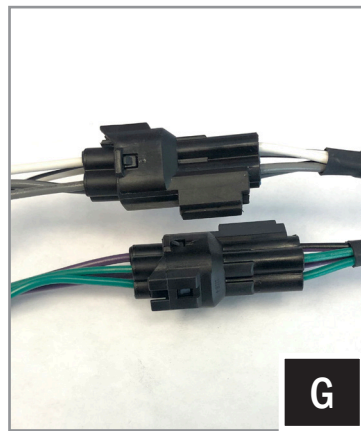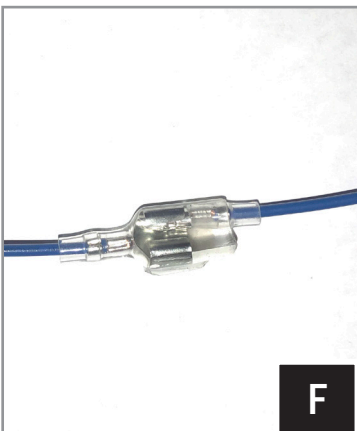


F. Connect the blue “AMP TURN-ON” from the MR1 power harness, to the blue, “AMP TURN-ON” on the B-H2605 amp harness.

G. Connect the front (white/gray) and rear (green/purple) outputs from the MR1 power harness to the inputs of the 8005 amp.

H. Slide on the MR1 trim ring from the back of the MR1. Connect the MR1 and all related accessories. Place the MR1 into the dash mount. When placing the MR1 into the dash mount, feed slack wiring back into the dash cavity cut out. This will allow for proper fitment of the MR1.




I. Secure the MR1 with the (4) M3.5 screws provided with the MR1.

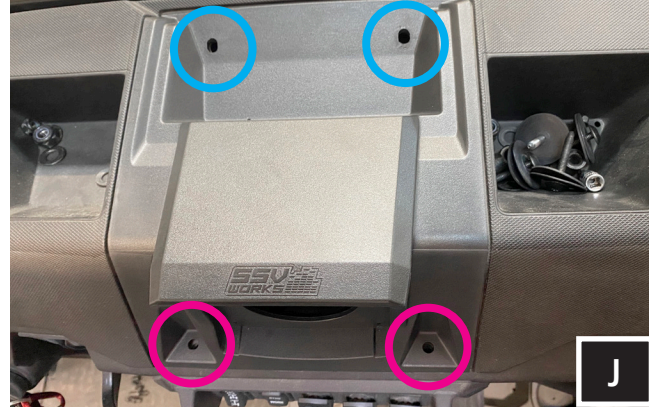

J. Secure the backside of the R1 with (2) push pins (circled in blue). Fasten (2) M6 T30 screws and washers into each front hole (circled in pink).




K. Re-install all factory dash panels.

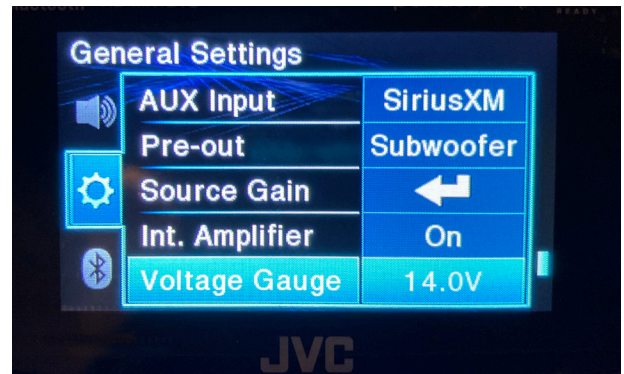

Once the MR1 is powered on, verify the following presets in the General Settings: Int. Amplifier = On

JVC MR1 WIRING DIAGRAM

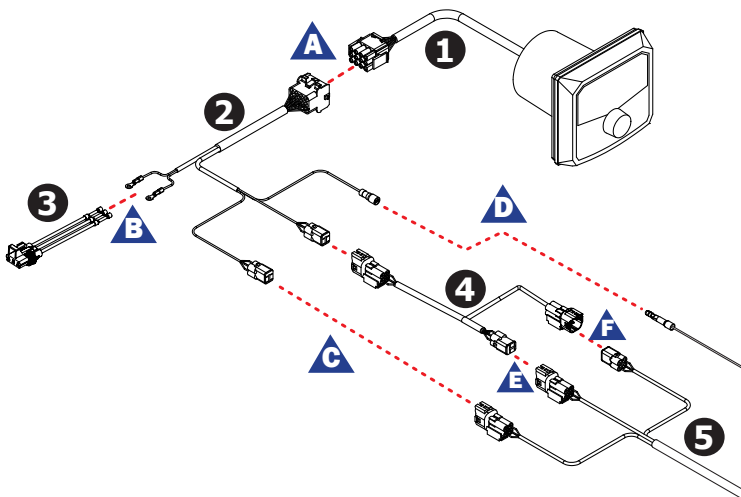

	Description	Part #
①	JVC MR1 Radio	
②	JVC Harness Adapter, JVC to SSV	B-H2367
③	Pulse Connector, Power/Ground Harness	B-H1752
④	4-Pin "Y" Audio Splitter	B-H1403
⑤	Amp Power/Ground Harness	B-H2605

Detail	Description
A	Connect JVC MR1 radio harness to B-H2367
B	Crimp B-H2367 Power/Ground wires to B-H1752
C	Connect B-H2367 Front Output to B-H2605 Front Input
D	Connect B-H2367 Amp Trigger to B-H2605
E	Connect B-H2367 Rear Output to B-H1403 "Y" Splitter
F	Connect B-H1403 to B-H2605 Rear & Sub Inputs

RGB LED CONTROLLER COMMAND CENTER PARTS LIST

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.


PARTS LIST IMAGES




1. LIT-CC, 3 Output, RGB LED Controller Command Center



2. LIT-CC RGB LED Controller Rocker Switch

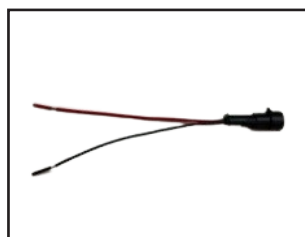


3. Power Pigtail

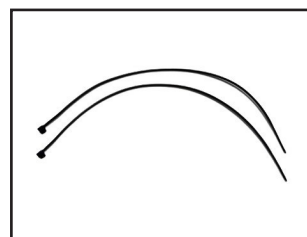

4. Zip Ties (x2)

NOTE:

Included Universal Controller Pigtails are NOT used in this installation.

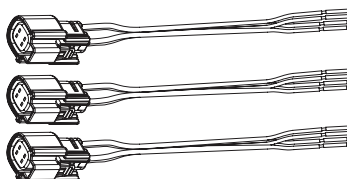


RGB LED CONTROLLER COMMAND CENTER INSTALLATION

TOOLS NEEDED FOR INSTALLATION

- Wire Cutter

- Wire Stripper

- Crimper

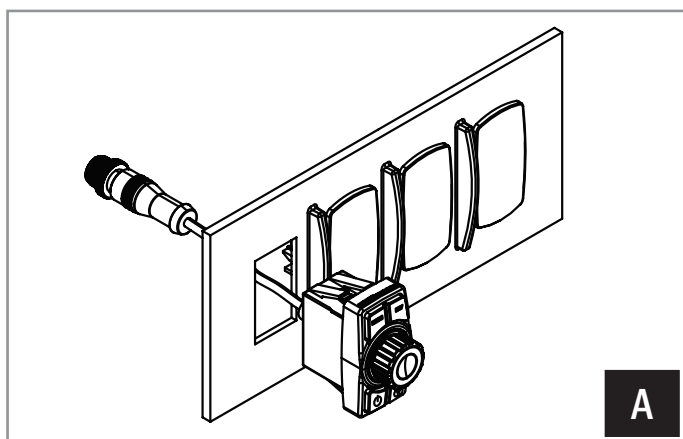

A

A. Install the LIT-CC RGB LED Controller Rocker Switch in an unoccupied rocker switch opening.




B

B. Mount the LIT-CC RGB LED Controller Command Center in the dash away from moving parts and secure with zip ties. Cut excess zip ties for a clean install.

NOTE: Refer to the 230-LIT-CC User Guide for detailed operation instructions.

RGB LED CONTROLLER COMMAND CENTER WIRING DIAGRAM

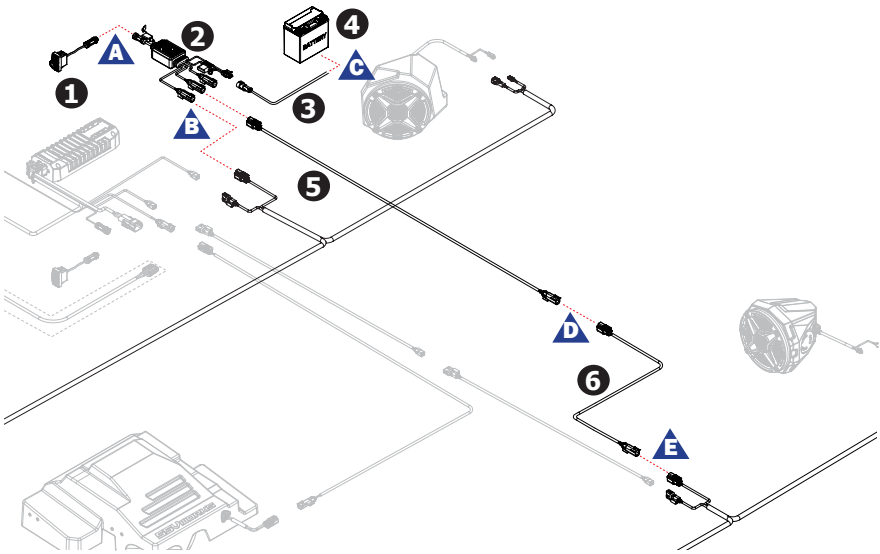

	Description	Part #
1	RGB LED Controller Rocker Switch for LIT-CC	B-H2367
2	LIT-CC RGB LED Controller Command Center	230-LIT-CC
3	LIT-CC Power Harness	
4	Battery	
5	RGB Extension, 8 ft.	B-H2933
6	RGB Extension, 2 ft.	B-H2934


Detail	Description
A	Connect RGB LED Rocker Switch to LIT-CC
B	Connect Outputs to Front Speaker and Rear Extension Harnesses
C	Connect LIT-CC Power Harness to Battery or ACC
D	Connect RGB Extension B-H2933 to B-H2934 (for 4 door models)
E	Connect RGB Extension B-H2934 to RGB Rear Speaker Harness

SUBWOOFER ENCLOSURE PARTS LIST

PARTS LIST IMAGES



1. RG4-US10 Enclosures

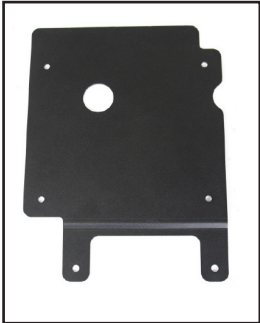

2. Enclosure Bracket A




2. Enclosure Bracket B



4. M6 Flathead 4mm Hex Screws x4



5. M6 Allen Torx Screws x2

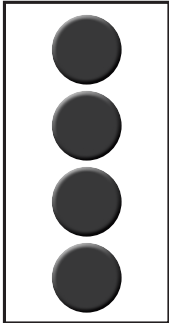


5. Foam Circles x4

NOTE: To avoid subwoofer damage, do not face the subwoofer down or rest the enclosure on the subwoofer when installing bracket to the bottom of the enclosure.

SUBWOOFER ENCLOSURE INSTALLATION

TOOLS NEEDED FOR INSTALLATION

- T-30 & T-40 Torx Driver - 4mm Allen Key - Panel Removal Tool - Drill - 13/64" Drill Bit

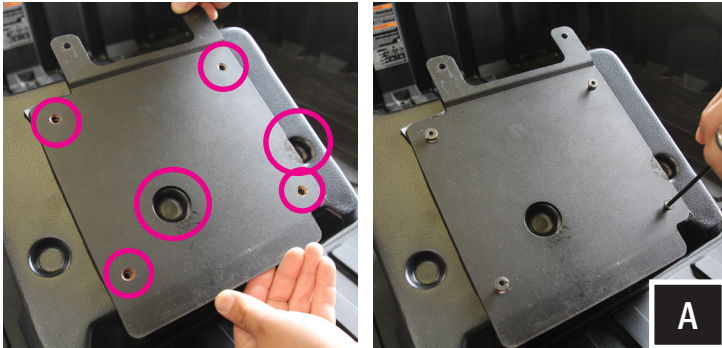


A. Align bracket A's holes with the dimples/recess' circled in pink on the bottom of the enclosure. Using four (4) flathead 4mm screws, mount the A bracket to the bottom of the enclosure. After the bracket is secure, cover the screw heads with the (4) foam circles.



B. Flip up passenger seat and remove center tray to access battery. Disconnect the negative battery cable from the battery.




C. Using a panel removal tool, extract the (8) push pins to remove the center driveline center column cover.

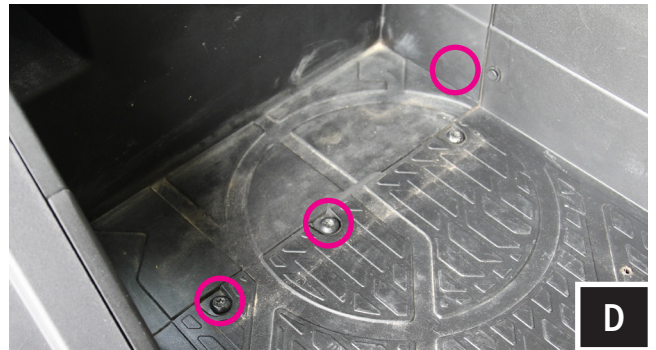

D. Located on the floorboard to the right of the battery compartment, remove the (3) T40 torx screws circled in pink.




E. Place SSV bracket B over the factory screw holes and refasten down with the (3) factory T40 torx screws removed in the previous step.

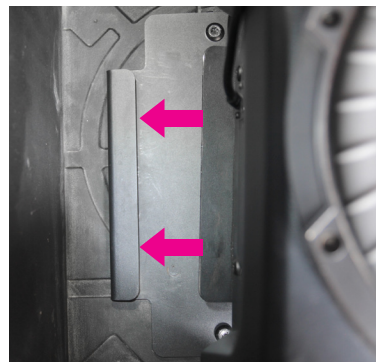

F. With the bracket secured to the floorboard, place the enclosure in front of the floorboard bracket. To allow proper engagement, tilt the enclosure back slightly and slide its bottom bracket into the floorboard bracket catch.



G. With the brackets seated into one another, use the front mounting tabs as a template to mark with a scribe or punch the needed placement to drill pilot holes.

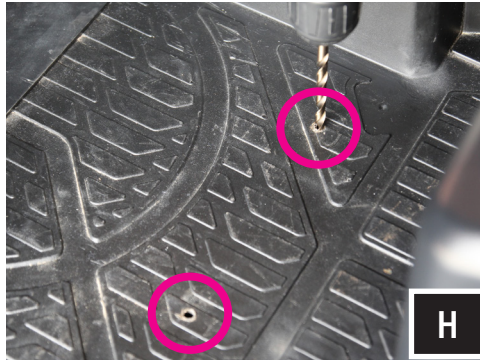

H. Once marked, remove the enclosure. Using a 13/64" drill bit, drill pilot holes at your marked points. Be sure to penetrate through the chassis lying beneath the floorboard.




I. Re-install the sub-enclosure. Secure the front mounting tabs with the kit provide T30 torx self-tapping screws.



J. Connect sub to harness B-H2702.

SUBWOOFER WIRING DIAGRAM

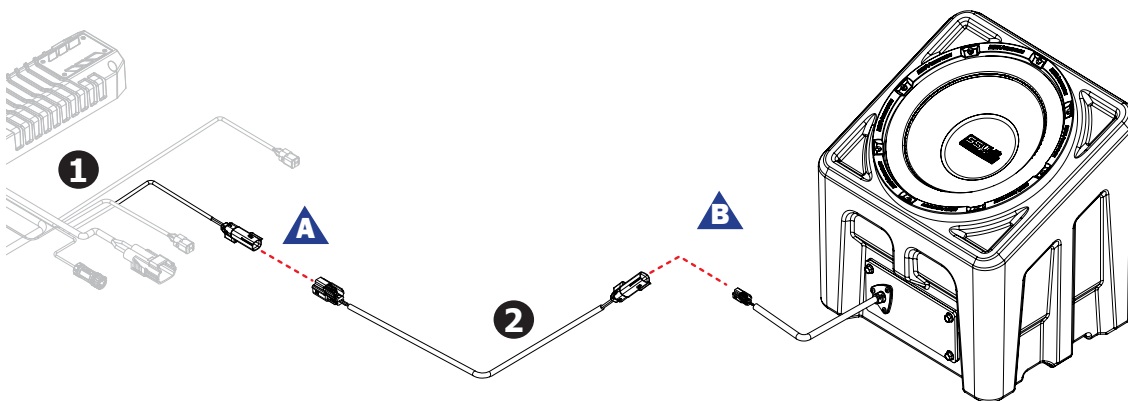

	Description	Part #
1	800.5 Amplifier 32-Pin Universal Harness	B-H2605
2	2-Pin Audio, Sub Extension Harness	B-H2702


Detail	Description
A	Connect Subwoofer Output from B-H2605 to B-H2702
B	Connect B-H2702 directly to the Subwoofer

FRONT RGB LED KICK PODS PARTS LIST

PARTS LIST IMAGES




1. RG4-F65V Enclosures
(1 pair)

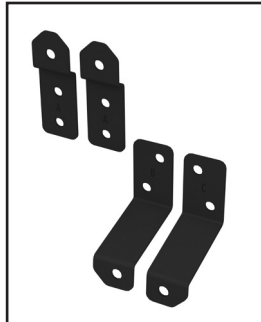

2. Enclosure Brackets x 4



3. M6 x 16mm Screws
x 10

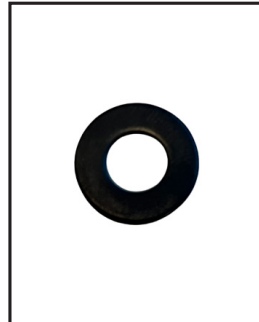

4. M6 Washers x 8 (small)



4. M6 Washers x 2 (large)

RGB LED FRONT KICK PODS ASSEMBLY

TOOLS NEEDED FOR INSTALLATION

- T-30 Torx Driver

- Panel Removal Tool

- Phillips Screwdriver



A. Using the supplied M6 screws and small washers, install the brackets to kick pods.



B. Remove factory T40 torx screws located from the front of the dash next to the cup holders.






C. Remove factory T25 torx screws located underneath the dash.



D. Located on the inside top of the pocket you will have two holes, route speaker wire through the larger hole. The smaller hole will be used to mount the pod in Step P.




E. Place the speaker pod in location and resecure the factory screws through the pod brackets on the front and underneath the dash.

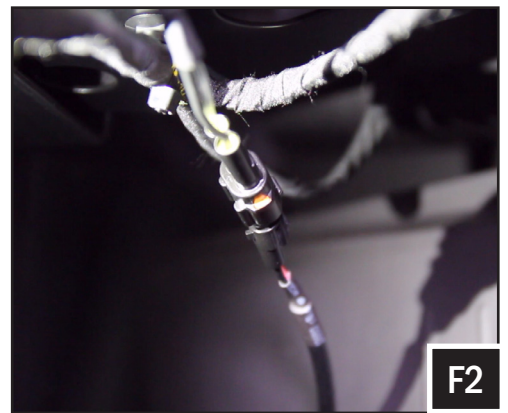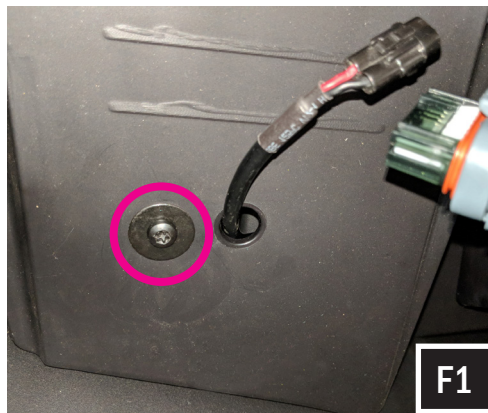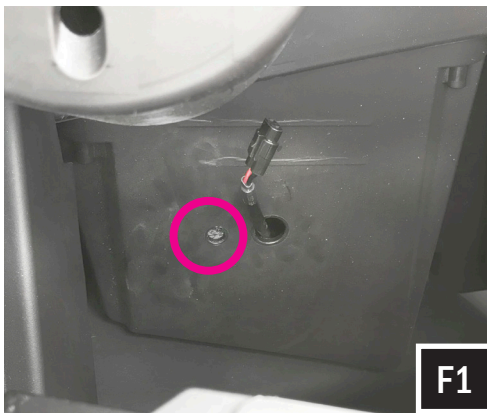

P. From the inside-top of the dash, secure the top mounting M6 screw and large washer to the pod through the smaller hole next to the routed speaker wire (figure F1). Then connect the B-H2935 Front Speaker "Y" harness to the speaker cable coming out of the speaker pods (figure F2).


RGB LED FRONT KICK PODS WIRING DIAGRAM

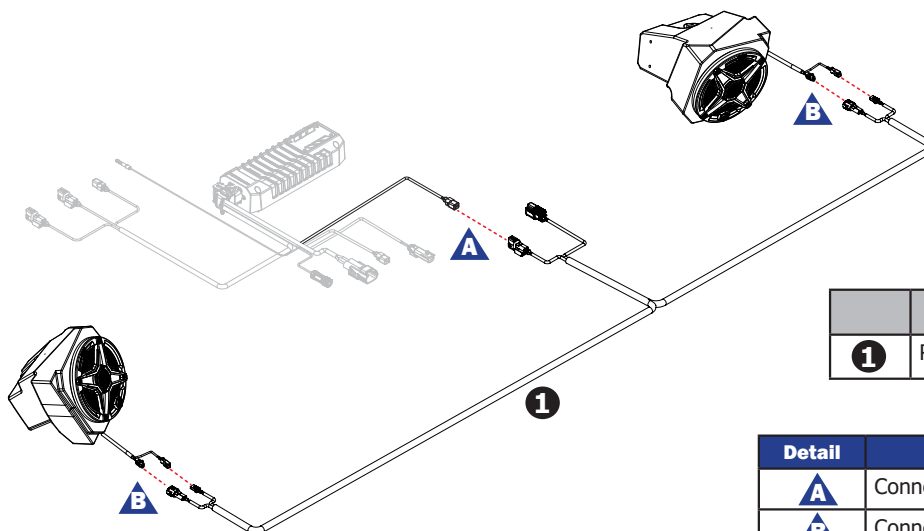


	Description	Part #
1	RGB Front Speaker Harness, 4 ft.	B-H2935

Detail	Description
A	Connect Front Output from B-H2605 to B-H1909
B	Connect Speaker Pods connectors to B-H2935


CONNECTING POWER & GROUND CABLE TO BATTERY

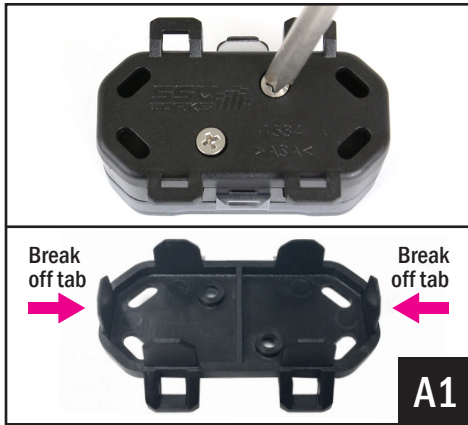


A1. Remove the bottom cover of the fuse holder by extracting the 2 screws. Break off the right and left side tabs on the bottom cover.

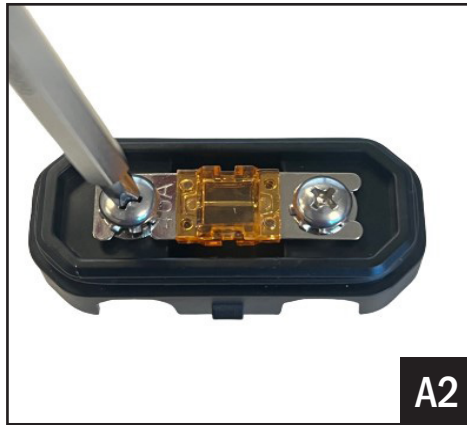


A2. Extract both fuse holder screws and fasten the fuse.

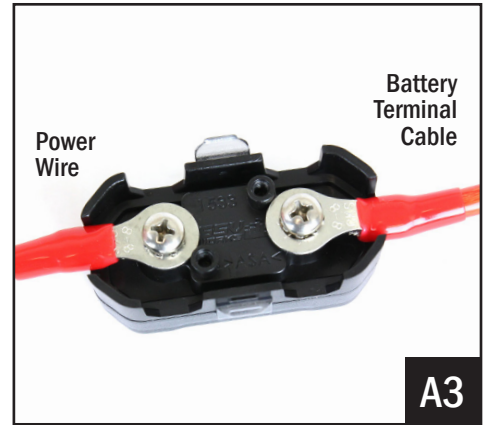

A3. Attach both the Power Wire and Battery Terminal Cable to the fuse holder. Reattach the bottom cover.

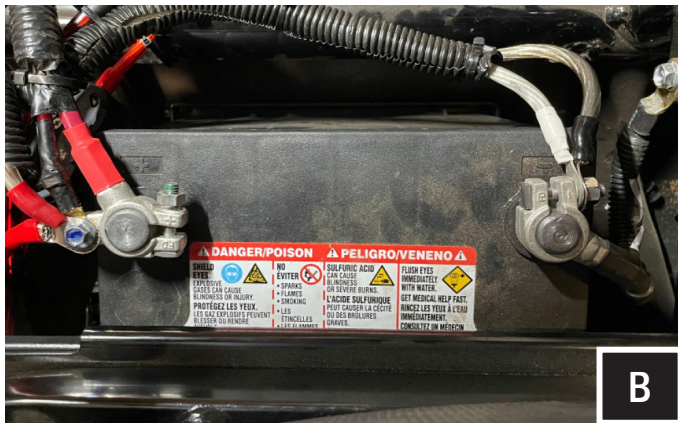


B. Connect the power and ground wires to the battery.

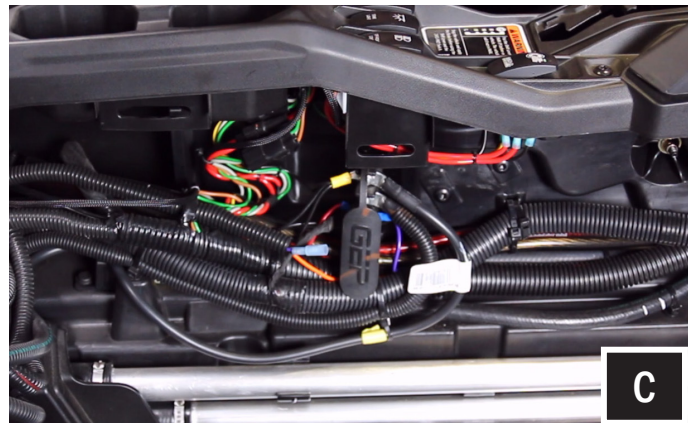

C. Zip tie all of the electrical cabling (factory and audio) along the center column away from the drive shaft.

AMP WIRING DIAGRAM

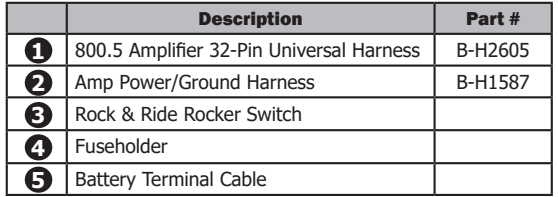

Detail	Description
	Connect B-H2605 (power/ground) to B-H1587
	Connect Rock & Ride rocker switch to "Ext. Switch"
	Install fuseholder between B-H1587 & battery terminal cable. Connect ground ring terminal to chassis ground.

**THIS CONCLUDES THE INSTALLATION PROCESS. REPLACE THE FACTORY PANELS AND SEATS.
QUESTIONS? PLEASE CONTACT SSV WORKS AT 818-991-1778 OR EMAIL SUPPORT@SSVWORKS.COM**

