



SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030
www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

JJK-08A

Jeep JK

2007-2017 Jeep JK 8"

Overhead Soundbar

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. All SSV Works Speakers are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

TOOLS FOR INSTALLATION

- 10mm Deep Socket - #2 Phillips Screwdriver - Flat Screwdriver or Panel Removal Tool


PARTS LIST IMAGES



1. Soundbar with 8" Speakers



2. #2 Phillips Screw

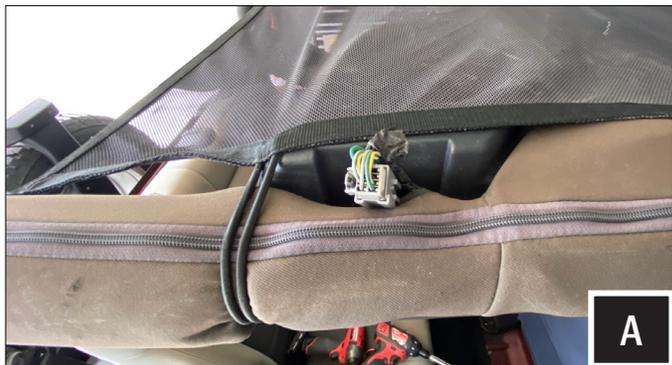


A. From the passenger side of the vehicle locate the connector at the top of the soundbar and disconnect.

Always disconnect the battery when installing electronic devices.



B. Extract the x6 Bolts securing the enclosure to the vehicle roll cage and set aside for use on the last step. If your vehicle is equipped with a top remove the two hand threaded cups along each side of the dome light. Remove the soundbar from the vehicle.

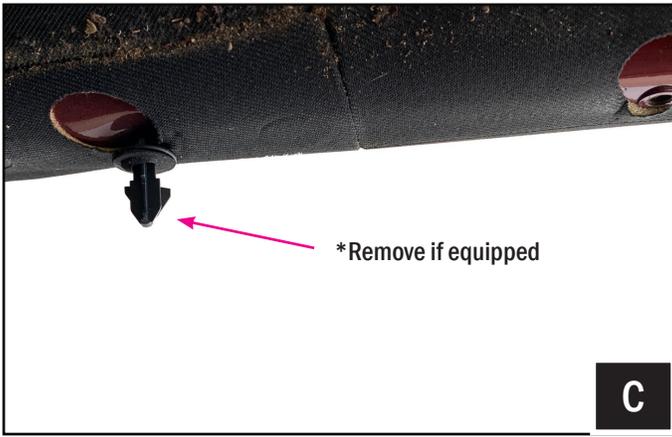

C. Once the factory soundbar has been removed use a panel removal tool and extract the plastic locating pin. These will not be needed for the new soundbar.



E. Using a panel removal tool or flat head screwdriver, unsnap the plastic dome light lens.



E. Extract the screw securing the dome light to the sound bar.



F. Connect the factory dome light into the SSV soundbar.



G. The SSV soundbar is made thicker than the factory soundbar to support the 8" speakers. The dome light will fit tight because of this. Angle in the dome light so both plastic tabs hook onto the material first then push in and lay flat.



H. Hold down the domelight while fastening the provided SSV Works #2 Phillips screw to secure the dome light down to soundbar.



I. Hold the SSV soundbar up to the vehicle roll cage and connect to the factory plug.



J. Using the factory x6 Bolts secure the new soundbar to the vehicle roll cage.

THIS CONCLUDES THE INSTALLATION PROCESS.

A photograph of two off-road vehicles, likely SSVs, parked in a desert landscape with sand dunes. The vehicles are white and red with 'SSV WORKS' branding. One vehicle has a spare tire mounted on the back. The scene is framed by a red border.

THANK YOU!

We are committed to your satisfaction and we know you will enjoy our products. If you need to return or have any questions, please let us know.

  [SSVWORKS.COM](https://www.ssvworks.com)
 1-818-991-1778 EXT 2
 [SUPPORT@SSVWORKS.COM](mailto:support@ssvworks.com)

Returns must be made within 30 days of purchase date. Claims for missing items or items damaged in transit must be received within five business days of receipt of merchandise. All returns must be in original packaging and in re-sellable condition. Shipping fees are not refundable.