



SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030
www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

KX-F65

Kawasaki Teryx KRX 1000 Kick Panel Speaker Pods

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. All SSV Works Speakers are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

TOOLS NEEDED FOR INSTALLATION

- T-30 Torx Driver - 10mm Wrench - Drill - 1/4" Drill Bit - Punch Tool


PARTS LIST IMAGES



1. KX-F65 Enclosures x2



2. Bracket "A"

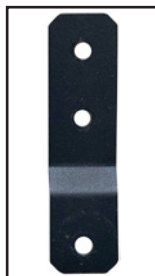

3. Bracket "B"




4. Bracket "C"



5. Threaded Backing Plates x2



6. Bracket "D"

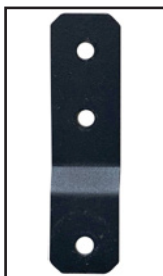

7. Bracket "E"



8. Bracket "F"



10. M6 x 16mm Screws
and Washers x14



11. M6 x 25mm Screw
and Locking Nut x2



A

A. Attach Bracket "A" to the driver side pod and Bracket "E" to the passenger side pod as shown using two (2) M6 screws and washers.



B

B. Attach Bracket "B" to the driver side pod and Bracket "F" to the passenger side pod as shown using two (2) M6 screws and washers.




C. Attach Bracket "C" to the driver side pod and Bracket "G" to the passenger side pod as shown using two (2) M6 screws and washers.



D. Starting on the drivers side, Remove the factory screw at the top of the footrest. Place the speaker pod in position and use the same factory screw to attach the bottom bracket.




E. Place Bracket "D" through the door jam hole (as shown above) and use a M6 screw and washer to attach Bracket "A"

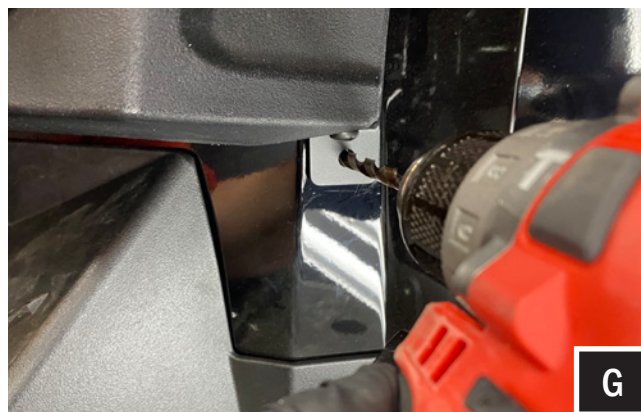

G. Using the guide left by the punch tool, drill a hole using a 1/4" drill bit




I. Repeat for Passenger side

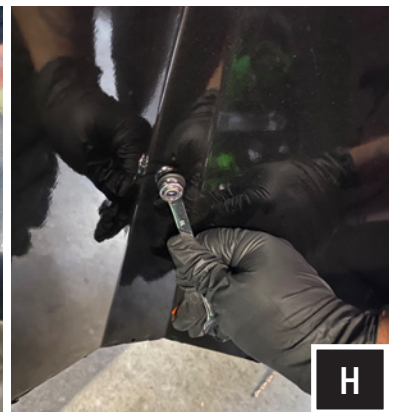

H. Connect Bracket "C" by pushing the 25mm M6 screw through the drilled hole and hand tighten the locking nut from the other side of the floorboard. It is recommended to have 2 people complete this step, one person on each end of the screw as it is tightened.

WIRING INSTRUCTIONS

For proper sound, ensure the speaker polarity is correct connect the "+" to the "+" and the "-" to the "-" from the speaker wire to the amplifier. If using with an SSV Works complete system refer to the amplifier wiring instructions for more detailed wiring information.

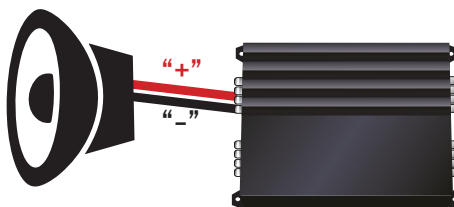

Connecting the KX-F65 using the pre-installed, four-pin connector will require an optional SSV Works plug-&-play harness (WP-H1151 - sold separately). If you are not using the WP-H1151 harness, simply cut off the four-pin connector and follow the wiring instruction below.