

SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030 www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

Under Seat Subwoofer Enclosure

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. All Kicker Speakers are covered by a limited 1 year warranty against defects in material or workmanship. All Kicker Amplifiers are covered by a limited 2 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

TOOLS NEEDED FOR INSTALLATION

- 18mm Wrench

- T-30 Torx Driver

- 9/32" or 17/64" Drill Bit

- Drill

PARTS LIST IMAGES



1. KX-PS10U Enclosure



2. M6 x 16mm Screws & Washers x 12



3. Bottom Bracket



4. Top Bracket



5. Side Bracket



6. B-H1389





7. 5/16" x 2



8. M6 x 25mm Screw Washer & Spacer


SUBWOOFER ENCLOSURE

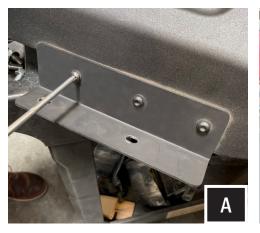

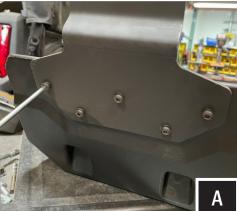




A. Mount plates to sub enclosure using the torx screws provided.

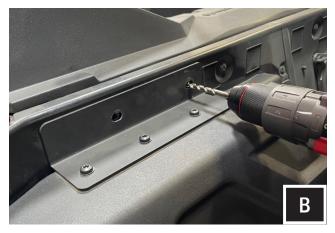

B. Place sub enclosure in its designed location behind passenger seat and using 9/32" or 17/64" drill bit, drill pilot holes where needed.

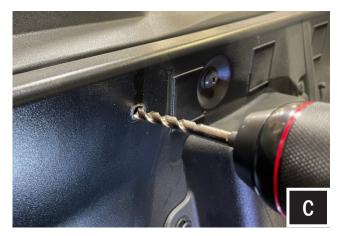

C. Pull enclosure away and finish drilling.



D. Place sub enclosure back in its designed location, place plastic spacer between sidewall of machine and side bracket. Tighten bolt down.



E. Tighten bolts on back wall.



F. Run sub wires to amp, avoiding moving parts.

THIS CONCLUDES THE INSTALLATION PROCESS.



© 2023 SSV Works, Oxnard, CA 93030 KX-PS10 1-9-22

3