



RZ5-BS10

Polaris RZR XP Pro & XP4 Pro
Under Rear Seat Subwoofer Enclosure 10"

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. All SSV Works Speakers are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.



UNDER REAR SEAT SUBWOOFER ENCLOSURE PARTS LIST

PARTS LIST IMAGES



RZ5-BS10 Enclosure



Bracket Pack (B-MBP3009)



2-PIN Subwoofer Extension
Harness (8FT) [B-H2702]



M6x16, Flanged Reduced
Head Screws and Washers, 4
pack (x2) [B-HPM616HH-4]

UNDER REAR SEAT SUBWOOFER ENCLOSURE ASSEMBLY

TOOLS NEEDED FOR INSTALLATION

- 8mm Wrench

- Phillips Screw Driver



Attach the 4 brackets to the subwoofer enclosure using the (8) M6x16 flanged screws and washers. **Do not fully tighten the screws yet.**

UNDER REAR SEAT SUBWOOFER ENCLOSURE INSTALLATION

TOOLS NEEDED FOR INSTALLATION

- T40 Torx Driver

- 13mm & 15mm Socket Wrench



A. Depress the lever behind the headrest to release the backrest.



B. Detach seat belts to gain access to the bottom seat tray.



C. Twist the spring clips on the firewall to remove the top and bottom firewall panels.



D. Remove the screws holding the bottom seat tray using a T40 Torx driver.





E. Remove the (2) seat bolts using a 13mm socket and box wrench. Remove the seat bottom. Repeat the process on the other seat bottom.


UNDER REAR SEAT SUBWOOFER ENCLOSURE INSTALLATION




F. Remove the H bracket using a 15mm socket and box wrench.

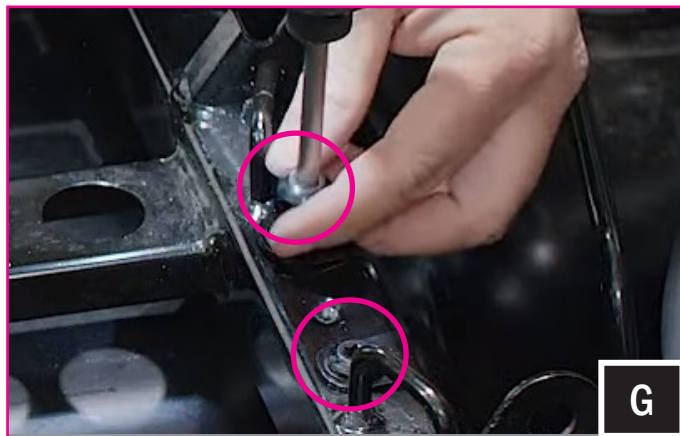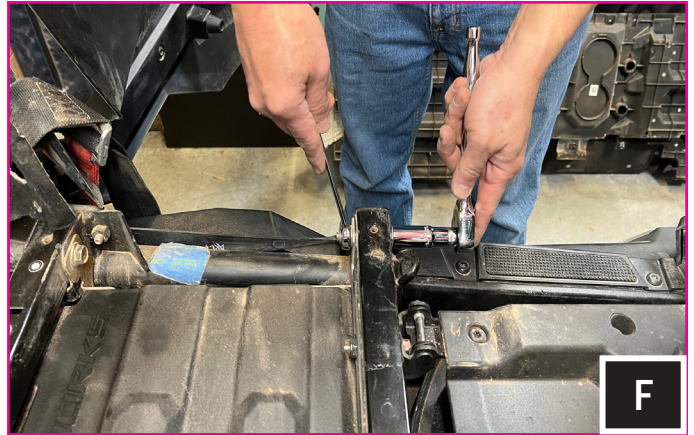

G. There is a heat shield bolted to the H bracket. Some models use (2) T40 Torx screws [G] and some use (2) 10mm hex head screws [G1] to secure the heat shield. Remove these screws to release the H bracket.

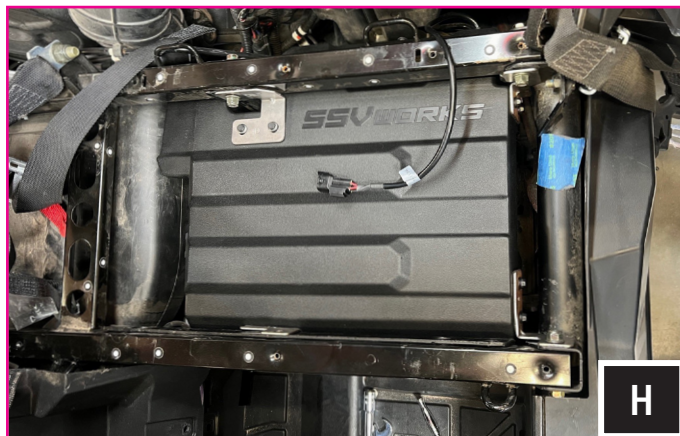


H. Once the H bracket has been removed, slide the enclosure under the front seat bracket first then the back will drop into place. Slightly wiggle the enclosure until the brackets line up with the factory bracket holes. Secure using the factory bolts. Do not tighten yet.

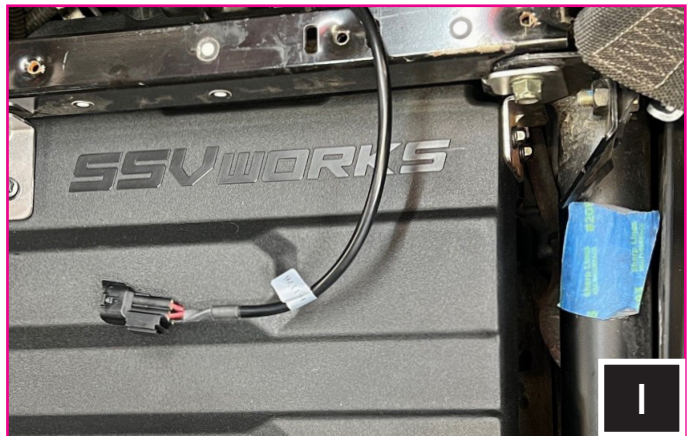

I. Keep the subwoofer enclosure cable visible for easy access during wiring connection.

UNDER REAR SEAT SUBWOOFER ENCLOSURE INSTALLATION

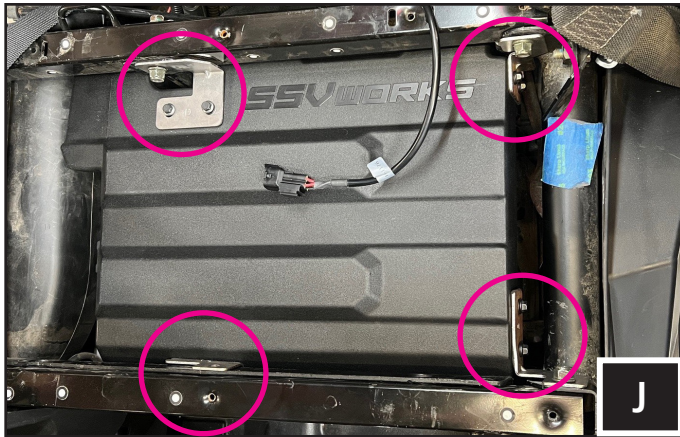

J. Secure the enclosure brackets using the M6x16mm screws. Only hand tighten each one until all the screws are aligned to the inserts.




K. Once all bracket screws are installed, tighten the screws using a 15mm and 8mm socket and/or box wrench.



Re-install the H bracket, heat shield, bottom seat tray, seats and seat belts by reversing the installation process. Plug in the RZ5-BS10U to the B-H3704 2-pin audio, sub extension harness. Run the extension harness to the amplifier location.

UNDER REAR SEAT SUBWOOFER WIRING DIAGRAM

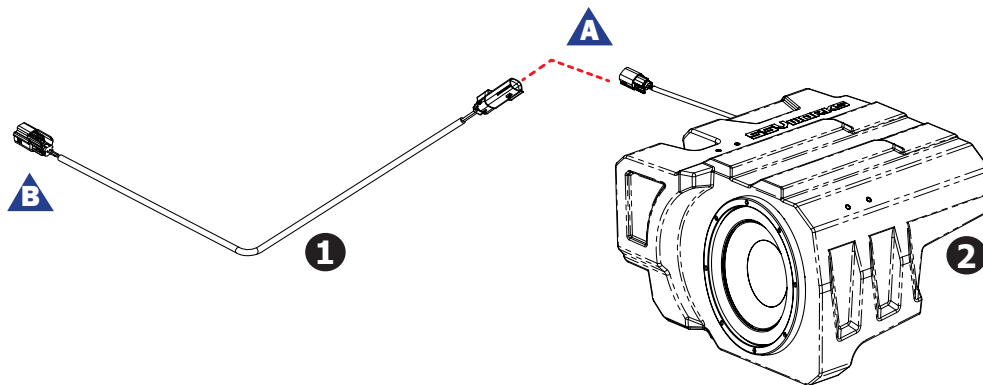

	Description	Part #
1	2-Pin Audio, Sub Extension Harness, 8 ft.	B-H2702
2	RZR Under seat Subwoofer Enclosure	RZ5-BS10U

Detail	Description
A	Connect B-H2702 to the Subwoofer
B	Connect B-H2702 to the SSV Amp Sub Output. Cut off connector and strip wires if not using a SSV Amp.



We are committed to your satisfaction and we know you will enjoy our products. If you have questions or need any assistance, please let us know.



[SSVWORKS.COM](https://www.ssvworks.com)



1-818-991-1778 EXT 2



SUPPORT@SSVWORKS.COM

Returns must be made within 30 days of purchase date. Claims for missing items or items damaged in transit must be received within five business days of receipt of merchandise. All returns must be in original packaging and in re-sellable condition. Shipping fees are not refundable.