



INSTALLATION INSTRUCTIONS FOR PART 99-7406

APPLICATIONS

Nissan 2004-2007 99-7406




KIT FEATURES

- DIN head unit provision with pocket
- ISO DIN head unit provision with pocket


KIT COMPONENTS

- A) Radio housing • B) Radio housing trim panel • C) ISO brackets
- D) Trim plate • E) (6) Panel clips • F) (6) PPH-38 screws • G) Two sided tape (not shown)


A

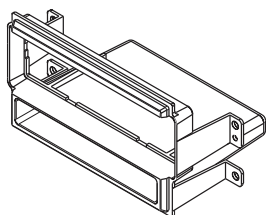


B

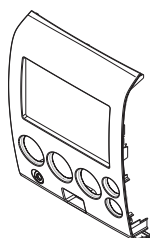


C

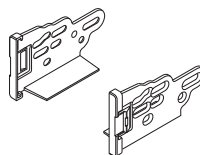

D

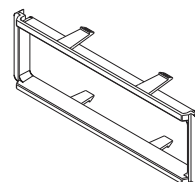

E

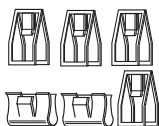

F



WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness:

- 70-7550 - Nissan harness 1995-up
- 70-7551 - Nissan amplified harness 1995-up

Antenna Adapter:

- Not required

TOOLS REQUIRED

- Torx T-10 driver • Small flat blade screwdriver/Panel removal tool • Phillips screwdriver



INST99-7406

REV. 8/3/2012

METRA. THE WORLD'S BEST KITS.™



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION



99-7406

Table of Contents

Dash Disassembly

- Nissan Pathfinder Armada 2004-20053-4
- Nissan Titan 2004-20073-4

Kit Preparation

- Nissan Pathfinder Armada 2004-2005 5
- Nissan Titan 2004-2007 5

Kit Assembly

- DIN head unit provision with pocket..... 6
- ISO DIN head unit provision with pocket 7

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

Note: Refer to the instructions included with the aftermarket radio.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.




**Metra recommends MECP
certified technicians**

Nissan Titan 2004-2007 Nissan Pathfinder Armada 2004-2005


1. Unclip and remove entire panel including the radio and climate controls. (Figure A)
2. Remove (4) Phillips screws to remove radio from sub-dash. (Figure B)
3. Unsnap and remove the outer trim rings around A/C control knobs. (Figure C)

Note: The small round airbag sticker also needs to be removed from the factory panel and placed onto the 99-7406 radio housing panel (a round piece of double-sided tape is provided in case the factory sticker is not strong enough). (Figure C)


Continued on next page

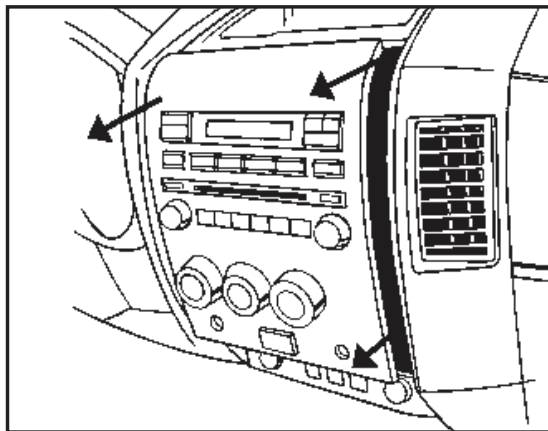

(Figure A)

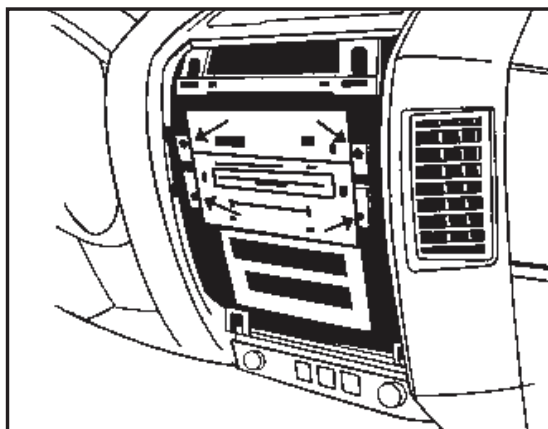

(Figure B)

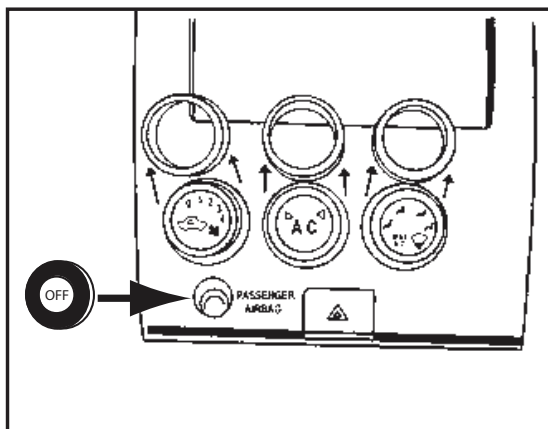

(Figure C)




Dash Disassembly 99-7406

Nissan Titan 2004-2007 Nissan Pathfinder Armada 2004-2005

4. Remove (4) T-10 Torx screws from the A/C controls to remove from the factory radio trim panel. (Figure D)
5. Unclip and remove the hazard light switch assembly.
6. Remove (2) T10 Torx screws from the passenger air bag off light assembly and remove. (Figure D)

Note: The small round sticker also needs to be removed from the factory panel and placed onto the 99-7406 radio housing trim panel.

Continue to kit preparation

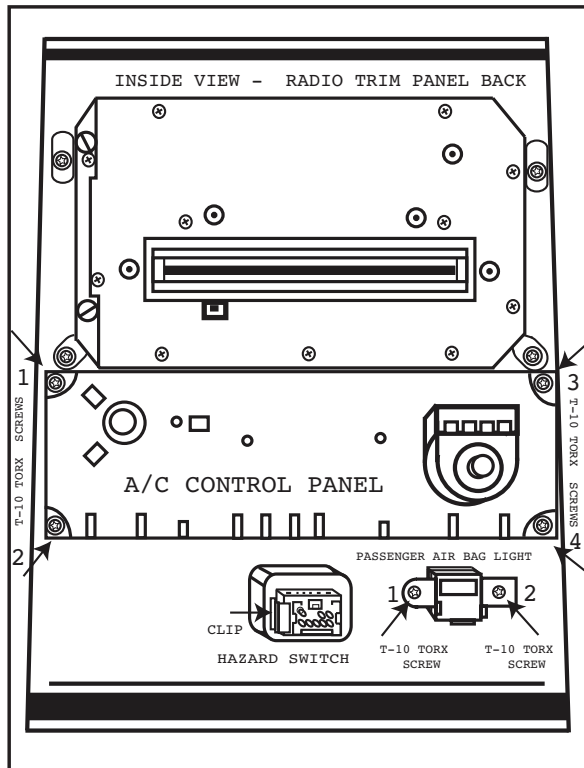

(Figure D)



Kit Preparation 99-7406


Nissan Titan 2004-2007 Nissan Pathfinder Armada 2004-2005

1. Attach the A/C control to the 99-7406 radio housing trim panel using the supplied (4) Phillips PPH-38 screws. (Figure A)
2. Snap the outer trim rings onto the A/C control knobs. (Figure B)
3. Attach the passenger air bag off light assembly to the 99-7406 radio housing trim Panel using the supplied (2) Phillips PPH-38 screws. (Figure C)


*Also, apply to air bag button
the small round airbag sticker
previously removed.*

4. Snap the hazard light switch into the 99-7406 radio housing trim panel. (Figure D)
5. Attach the (6) panel clips to the 99-7406 radio housing panel using the factory radio panel as a reference for clip positioning.


Continued to kit assembly

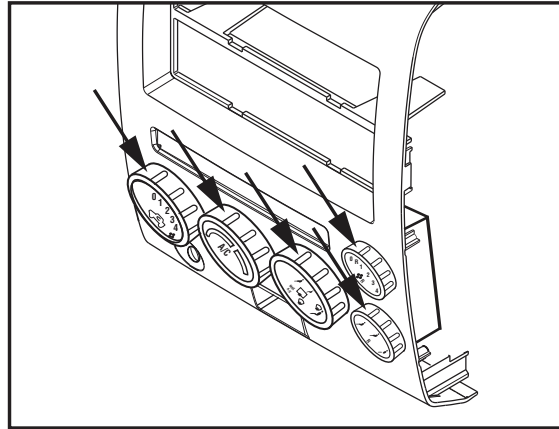


(Figure B)

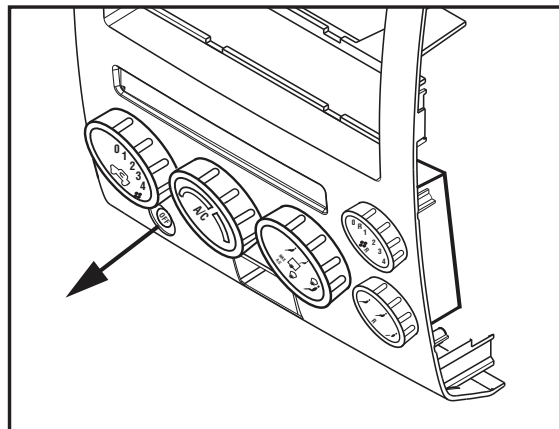

(Figure C)

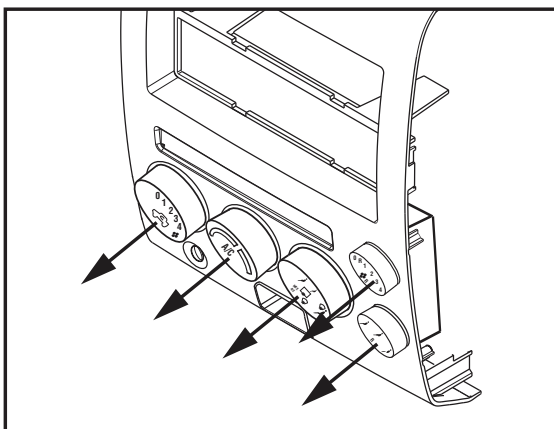

(Figure A)

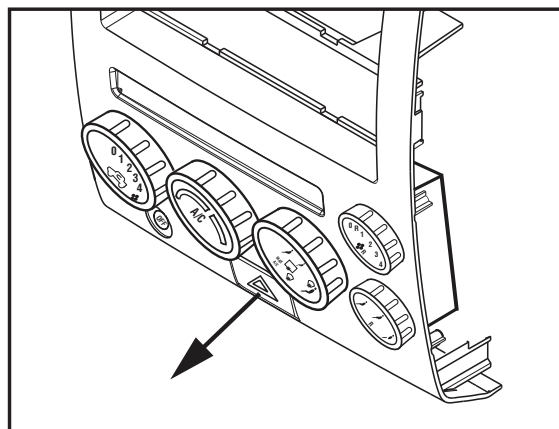


(Figure D)




Kit Assembly 99-7406

DIN head unit provision with pocket

1. Slide the DIN cage into the radio housing and secure by bending the metal locking tabs down. (Figure A)
2. Slide the aftermarket head unit into the cage and secure. (Figure B)
3. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
4. Reassemble dash in reverse order of disassembly.

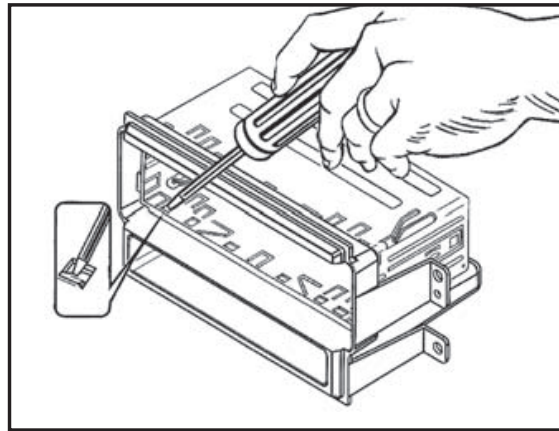

(Figure A)

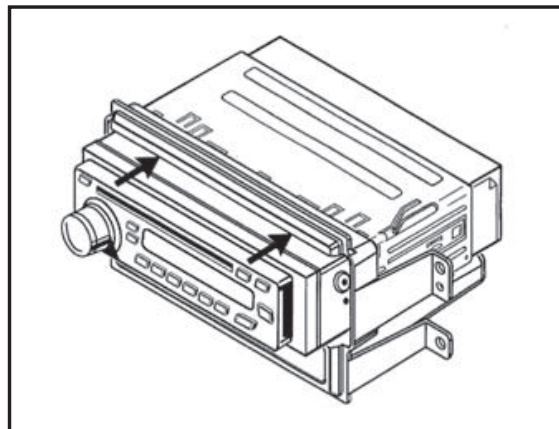


(Figure B)




Kit Assembly 99-7406

ISO DIN head unit provision with pocket

1. Mount the ISO brackets to the head unit with the screws supplied with the unit. (Figure A)
2. Slide the head unit into the radio opening until the side clips engage. (Figure B)
3. Snap the trim plate into the radio housing. (Figure B)
4. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
5. Reassemble dash in reverse order of disassembly.

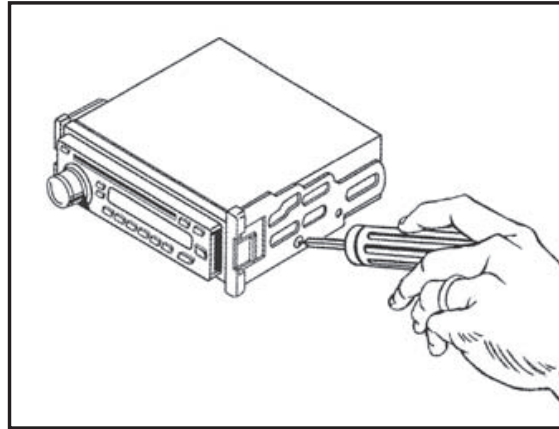

(Figure A)

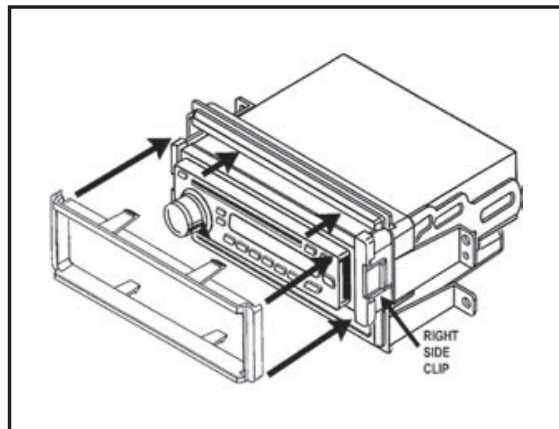

(Figure B)



INSTALLATION INSTRUCTIONS FOR PART 99-7406

INST99-7406

REV. 8/3/2012



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION

METRA. THE WORLD'S BEST KITS.™