

Installation Kit

IMPORTANT

Before starting, compare items on your invoice with items received. If any parts are missing, first carefully check through packaging material. If an item is missing, please call:

Crutchfield at 1-888-955-6000

120 99-7412

Nissan

Revision 07/15/99

Page 1 of 2

DIN Assembly

1. Using a utility knife, cut out **shaft supports** to create the DIN opening as shown (Figure 1).
2. Remove **DIN sleeve** and **trim ring** from receiver.
3. Slide DIN sleeve into receiver mounting bracket and secure by bending **securing tabs** (Figure 2, lower right).
4. Slide receiver fully into sleeve and install trim ring.
5. Install assembly following instructions in the *Mastersheet* for your particular vehicle.

Receiver Mounting Bracket

FIGURE 1

DIN Sleeve

Securing Tabs


FIGURE 2

Bend tabs after sleeve is inside mounting bracket.

Trim Ring

Tools Required


Flat Blade
Screwdriver



Utility Knife



**Parts
Supplied:**

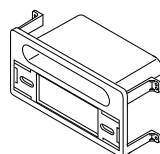

Mounting
Bracket

CRUTCHFIELD®

Copyright 1999 Crutchfield Corporation

Installation Kit



120 99-7412

Nissan

Page 2 of 2

Shaft Assembly

1. Choose the proper **spacers** (supplied with your order) to allow receiver nosepiece to extend 1/8" to 1/4" beyond face of **receiver mounting bracket** (see inset).
2. Secure receiver and **faceplate** to mounting bracket with spacers and **shaftnuts** as shown.
3. Attach receiver **control knobs**.
4. Install assembly following instructions in the *Mastersheet* for your particular vehicle.

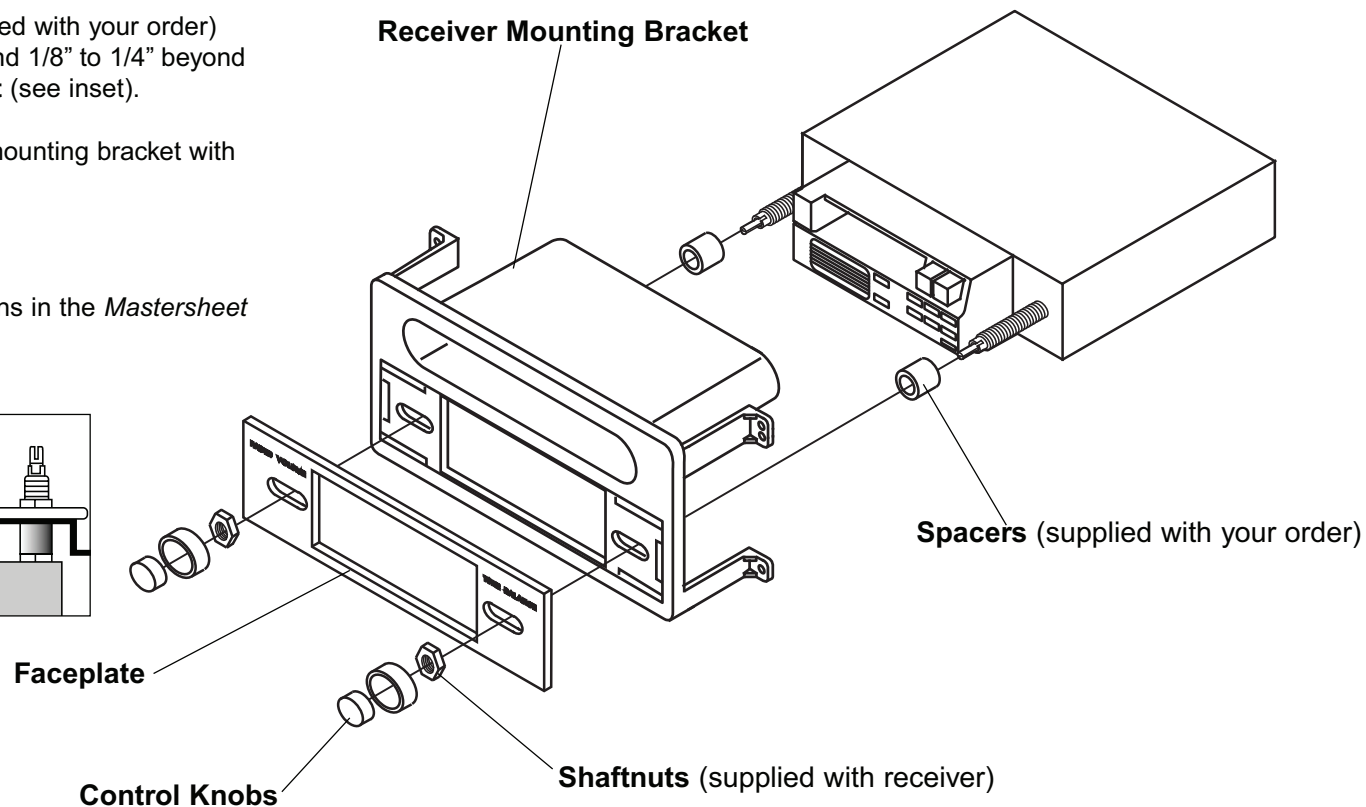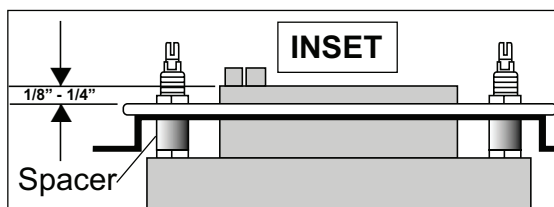

Tools Required



Deep Socket
(size depends
upon receiver)



* 1 2 0 9 9 7 4 1 2 *

CRUTCHFIELD®

Copyright 1999 Crutchfield Corporation