



Installation instructions for part 99-7414

Nissan Sentra 2000-2006 99-7414 & 99-7414G


KIT FEATURES

- ISO DIN radio provision
- **99-7414 = Black**
- **99-7414G = Gray**

KIT COMPONENTS

- A) Radio trim panel

A

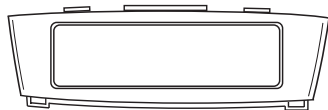

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-7550 • 70-7551

Antenna Adapter: • Not required

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver • Small flat blade screwdriver


Table of Contents

Dash Disassembly	2
Kit Assembly	
– ISO DIN radio provision.....	3


CAUTION! Metra recommends disconnecting the negative battery terminal before beginning any installation, unless the vehicle manufacturer recommends against so. Please check with your local Dealership for more information. All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before reconnecting the battery or cycling the ignition. Also, do not remove the factory radio with the key in the on position, or the vehicle running. It would be best to remove the key from the ignition and then wait a few seconds before removing the factory radio.

Dash Disassembly


1. Open the storage compartment above the radio, and pull out on the lip of the compartment to remove the compartment/AC vent assembly. (Figure A)
2. Below the climate control, unclip and remove the trim panel around the pocket. (Figure B)
3. Remove (4) screws securing the radio/climate-control/pocket assembly (2 on top, 2 on bottom), then unplug and remove the entire assembly. (Figure C)

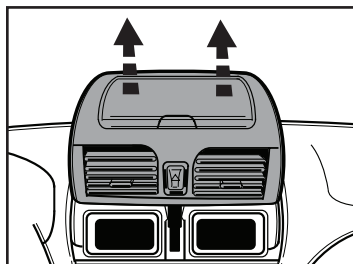

(Figure A)

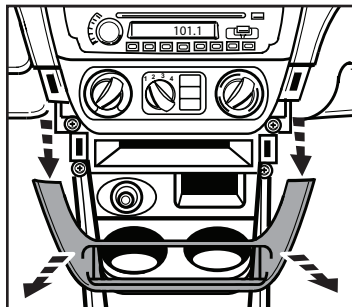


(Figure B)

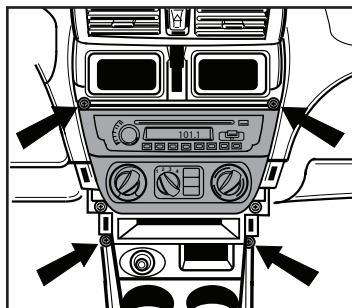


(Figure C)

4. Remove (2) screws securing the climate control trim panel to the factory brackets. (Figure D)
 5. Remove (4) screws securing the radio to the factory brackets. (Figure E)
 6. Remove the radio and climate control trim panel from the pocket/climate-control assembly. (Figure E)
- Note:** Retain the pocket/climate-control assembly to be reused during kit assembly.
7. Unsnap and remove the climate control trim panel from the radio. (Figure F)


Note: Retain the climate control trim panel to be reused during kit assembly. Continued to kit assembly

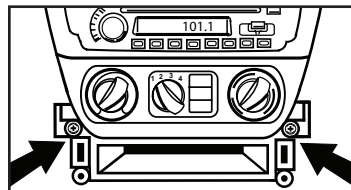

(Figure D)

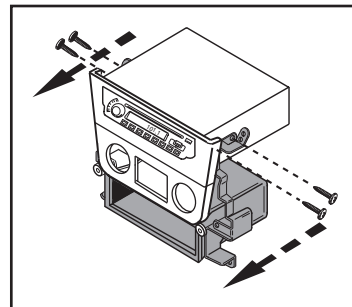

(Figure E)

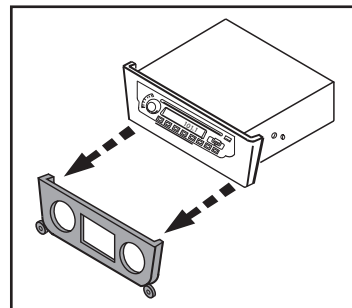


(Figure F)


Kit Assembly

ISO DIN radio provision


1. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
2. Slide the radio between the factory pocket/climate-control assembly removed in disassembly, and then attach the radio to the assembly using the screws supplied with the radio. (Figure A)
3. Snap the factory climate control trim panel removed in disassembly and *radio trim panel* together. (Figure B)
4. Place the completed assembly on the front of the radio/climate-control/pocket assembly, and then attach the two assemblies together using the screws removed during disassembly. (Figure C)
5. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio and climate controls. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the radio for proper operation.
6. Reassemble the dash in reverse order of disassembly.

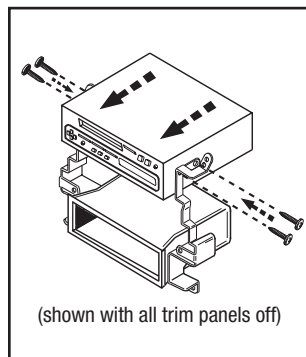

(Figure A)

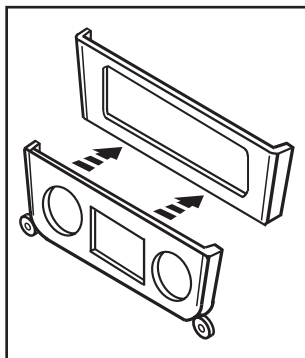

(Figure B)

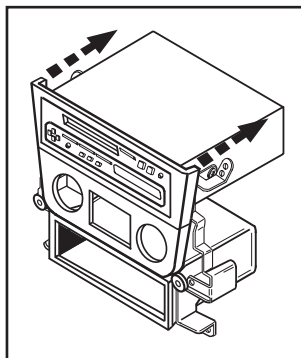

(Figure C)



Installation instructions for part 99-7414



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at **1-800-253-TECH**. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**