



Nissan Murano (without Bose audio) * 2009-2014

* For models with climate controls located above the radio

Visit MetraOnline.com for more detailed information about the product and up-to-date vehicle specific applications

KIT FEATURES

- DIN radio provision with pocket
- ISO DIN radio provision with pocket
- ISO DDIN radio provision
- Painted charcoal to match the factory finish

KIT COMPONENTS

- A) Radio housing • B) ISO DIN brackets • C) ISO DIN trim plate • D) ISO DDIN brackets • E) ISO DDIN trimplate • F) Pocket

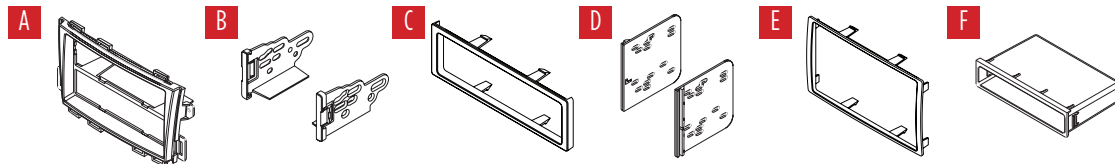


TABLE OF CONTENTS

Dash Disassembly	2
Kit Assembly	
–DIN radio provision with pocket	3
–ISO DIN radio provision with pocket	3
–ISO DDIN radio provision.....	4

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: 70-7552

Antenna Adapter: 40-N112


TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver
- Cutting tool


Attention! Let the vehicle sit with the key out of the ignition for a few minutes before removing the factory radio. When testing the aftermarket equipment, ensure that all factory equipment is connected before cycling the key to ignition.

DASH DISASSEMBLY


1. Unclip and remove the trim panel at the bottom center of the dash. (Figure A)
2. Remove (1) Phillips screw from the bottom of each side trim panel, then unclip and remove the panels. (Figure B)
3. Remove (3) Phillips screws securing the climate control panel, then unclip, unplug, and remove the panel. (Figure C)

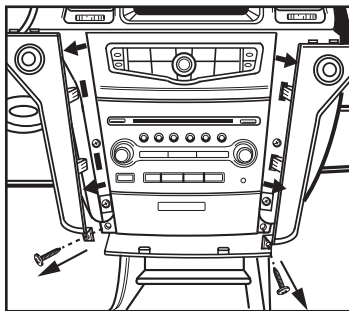

(Figure B)

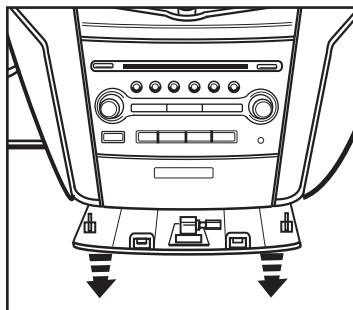


(Figure A)

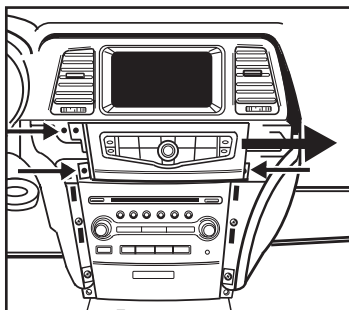


(Figure C)

4. Remove (2) Phillips screws from the panel below the radio (containing the passenger air bag light), then unclip, unplug, and remove the panel. (Figure D)
5. Remove (6) Phillips screws securing the radio. Slide the radio out, then unplug and remove radio. (Figure E)

Continue to Kit Assembly

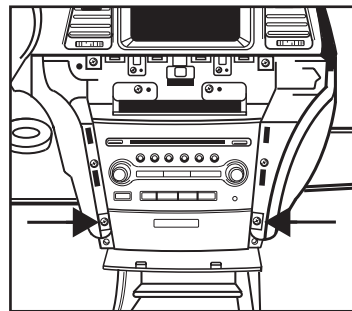

(Figure D)

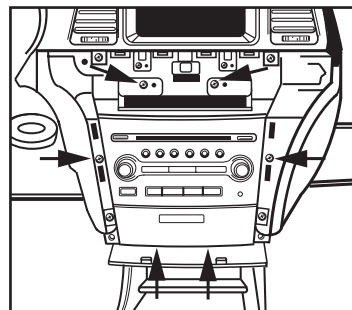


(Figure E)


KIT ASSEMBLY

DIN radio provision with pocket


1. Remove the metal DIN sleeve from the aftermarket radio.
2. Slide the sleeve into the **radio housing** and secure by bending the metal locking tabs down. (Figure A)
3. Slide the radio into the sleeve until it snaps into place. (Figure B)
4. Snap the **pocket** into the **radio housing**. (Figure C)
5. Locate the factory wiring harness and antenna connector in the dash. Metra recommends using the proper mating adapter from Metra or AXCESS. Test the radio and vehicle for proper operation.
6. Reassemble the dash in reverse order of disassembly to complete the installation.

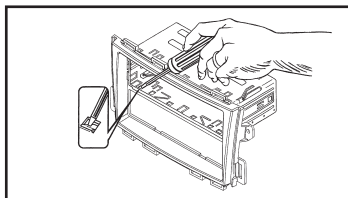

(Figure A)

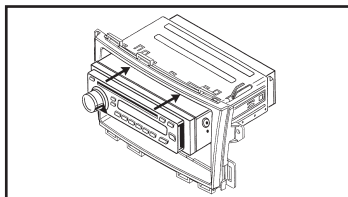


(Figure B)

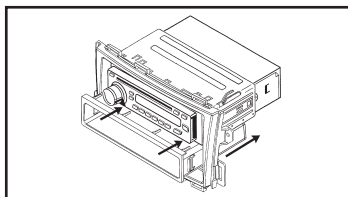


(Figure C)

ISO DIN radio provision with pocket


1. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
2. Secure the **ISO DIN brackets** to the radio using the screws supplied with the radio. (Figure A)
3. Slide the radio into the **radio housing** until it snaps into place. (Figure B)
4. Snap the **ISO DIN trim plate** onto the front of the **radio housing**. (Figure B)
5. Snap the **pocket** into the **radio housing**. (Figure C)
6. Locate the factory wiring harness and antenna connector in the dash. Metra recommends using the proper mating adapter from Metra or AXCESS. Test the radio and vehicle for proper operation.
7. Reassemble the dash in reverse order of disassembly to complete the installation.

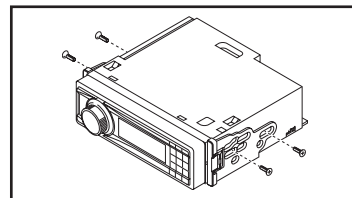

(Figure A)

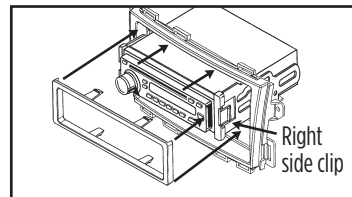

(Figure B)

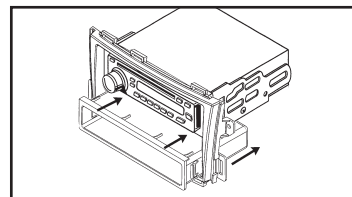


(Figure C)




KIT ASSEMBLY

ISO DDIN radio provision


1. Cut and remove the center bar from the **radio housing**. (Figure A)
2. Snap the **ISO DDIN brackets** to the inside edge of the **radio housing**. (Figure B)
3. Slide the radio into the bracket/radio housing assembly, then secure using the screws supplied with the radio. (Figure C)
4. Snap the **ISO DDIN trim plate** onto the front of the radio/housing. (Figure C)
5. Locate the factory wiring harness and antenna connector in the dash. Metra recommends using the proper mating adapter from Metra or AXCESS. Test the radio and vehicle for proper operation.
6. Reassemble the dash in reverse order of disassembly to complete the installation.

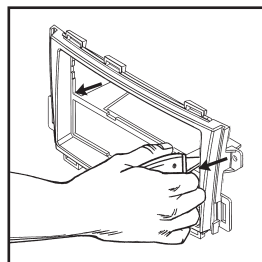

(Figure A)

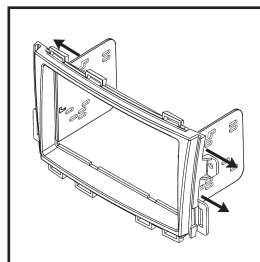

(Figure B)

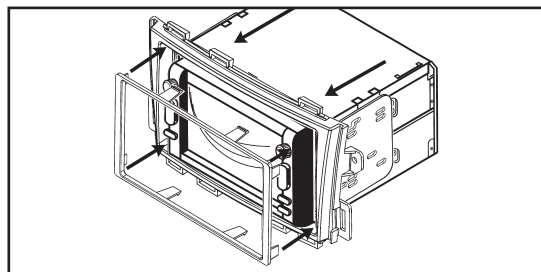

(Figure C)

If you are having difficulties with the installation of this product, contact our Tech Support line either by phone at **386-257-1186 ext. 8300**, or email at techsupport@metra-autosound.com. Before doing so, look over the instruction booklet a second time and ensure that the installation was performed exactly as the instruction booklet is stated. Have the vehicle apart and ready to perform troubleshooting steps before contacting Metra/Axxess Tech Support.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**