



Installation instructions for part 99-7505


Mazda 626 2001-2002, MX-5 Miata 1999-2005, Millennia 1995-2002, MPV 1996-1999, Protege 2001-2004, Protege 5 2001-2004, Tribute 2001-2006 99-7505

KIT FEATURES

- DIN radio provision with pocket
- ISO DDIN radio provision

KIT COMPONENTS

A) Radio housing • B) ISO DDIN trim plate • C) ISO DDIN brackets • D) Rear support

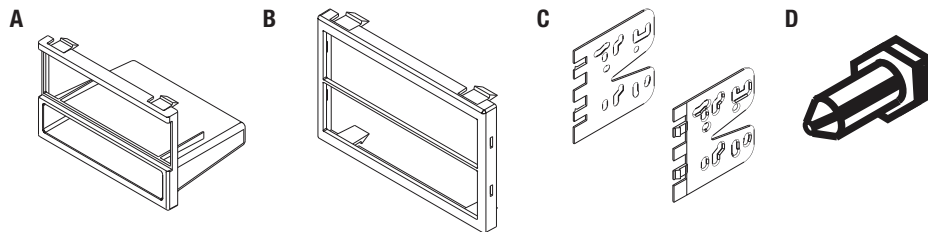

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-7901 • 70-7903

Antenna Adapter: • Not required

TOOLS REQUIRED

• Ford radio removal keys (2 sets) 86-5618 • Cutting tool • Panel removal tool • Phillips screwdriver • Adjustable wrench



Table of Contents

Dash Disassembly	2
Kit Assembly	
– DIN radio provision with pocket.....	3
– ISO DDIN radio provision	4

CAUTION! Metra recommends disconnecting the negative battery terminal before beginning any installation, unless the vehicle manufacturer recommends against so. Please check with your local Dealership for more information. All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before reconnecting the battery or cycling the ignition. Also, do not remove the factory radio with the key in the on position, or the vehicle running. It would be best to remove the key from the ignition and then wait a few seconds before removing the factory radio.




99-7505


Dash Disassembly

1. Using a panel removal tool, carefully remove the trim covers from both sides of the radio. (Figure A)
2. Insert (2) sets of Ford radio removal keys (Metra 86-5618), into the sides of the radio until they snap in. (Figure B)
3. Gripping both sets of removal keys, pull them outward away from the radio, then slide the radio out of the radio cavity. (Figure C)


Continue to kit assembly

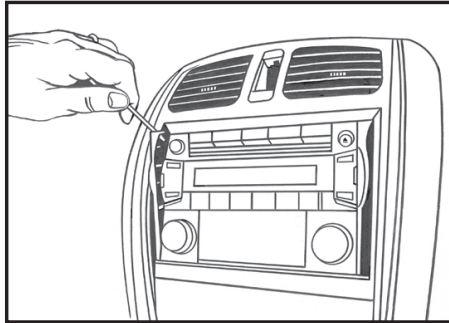

(Figure A)

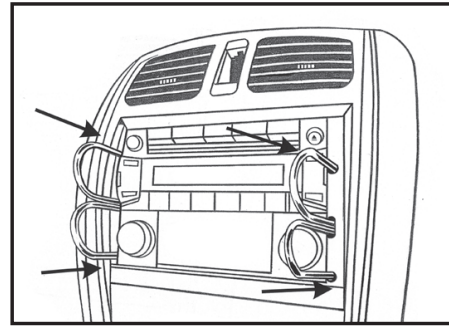

(Figure B)

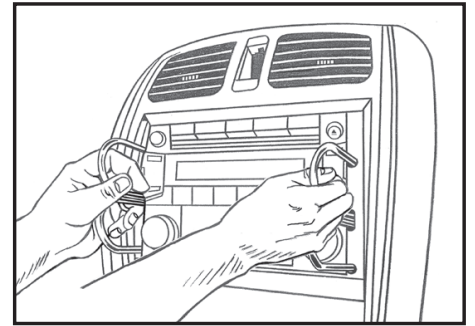

(Figure C)




99-7505


Kit Assembly

DIN radio provision with pocket


1. Remove the metal DIN sleeve from the aftermarket radio.
2. Slide the sleeve into the *radio housing* and secure by bending the metal locking tabs down. (Figure A)
3. Slide the radio back into the sleeve until it clicks in. (Figure B)
4. Using the hardware that came with the radio, secure the *rear support* to the back of the radio. (Figure C)
5. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Re-connect the negative battery terminal and test the radio for proper operation.
6. Snap the completed assembly into the radio cavity until it clicks in..

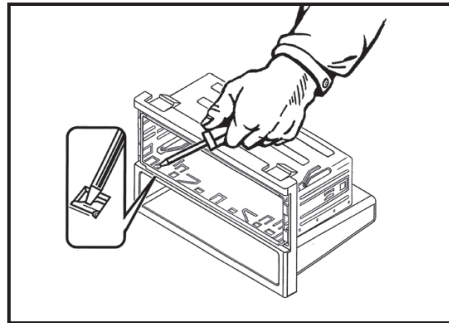

(Figure A)

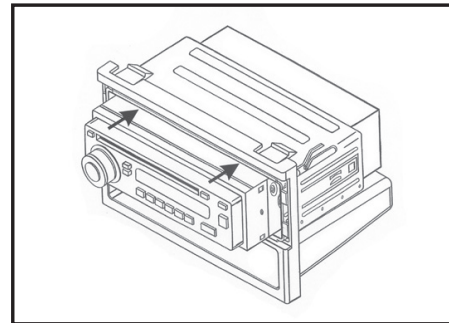

(Figure B)

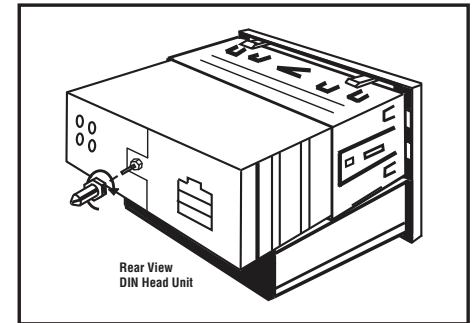

(Figure C)




Installation instructions for part 99-7505




Kit Assembly

ISO DDIN radio provision


1. Using a utility knife, carefully cut the center bar out of the *ISO DDIN trim panel*. (Figure A)
2. Attach the *ISO DDIN brackets* onto the *ISO DDIN trim plate*, aligning the holes in the trim plate to the clips on the bracket. (Figure B)
3. Slide the radio into the trim plate/bracket assembly, and then secure the it to the assembly using the screws supplied with the radio. (Figure C)
4. Using the hardware that came with the radio, secure the *rear support* to the back of the radio. (Figure D)
5. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Re-connect the negative battery terminal and test the radio for proper operation.
6. Snap the completed assembly into the radio cavity until it clicks in.

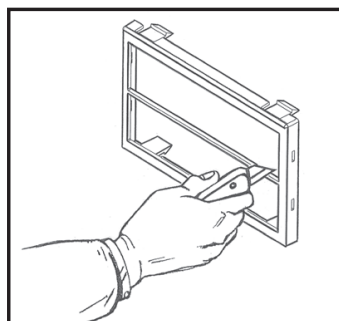


(Figure A)

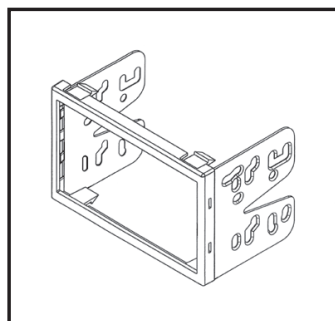

(Figure B)

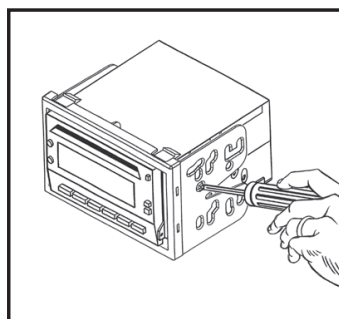

(Figure C)

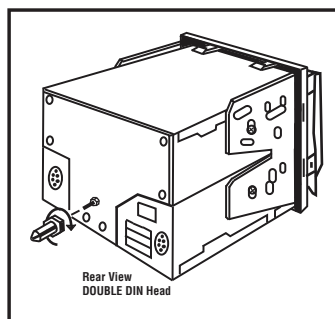

(Figure D)

Note: Once the radio clicks in, it may not be able to be removed without dashboard disassembly. Ensure all connections are completed before doing so.

IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at **1-800-253-TECH**. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians