

Installation Kit

IMPORTANT

Before starting, compare items on your invoice with items received. If any parts are missing, first carefully check through packaging material. If an item is missing, please call:

Crutchfield at 1-888-955-6000

120 99-7579

Nissan


Revision 07/13/99

Page 1 of 2

DIN Assembly


(See next page for shaft assembly.)

1. Remove **DIN sleeve** from receiver.
2. Slide DIN sleeve into **receiver mounting bracket** and secure by bending **securing tabs** (See Inset).
3. Slide receiver fully into sleeve.
4. If not installing an equalizer, snap in **EQ cover plate**.

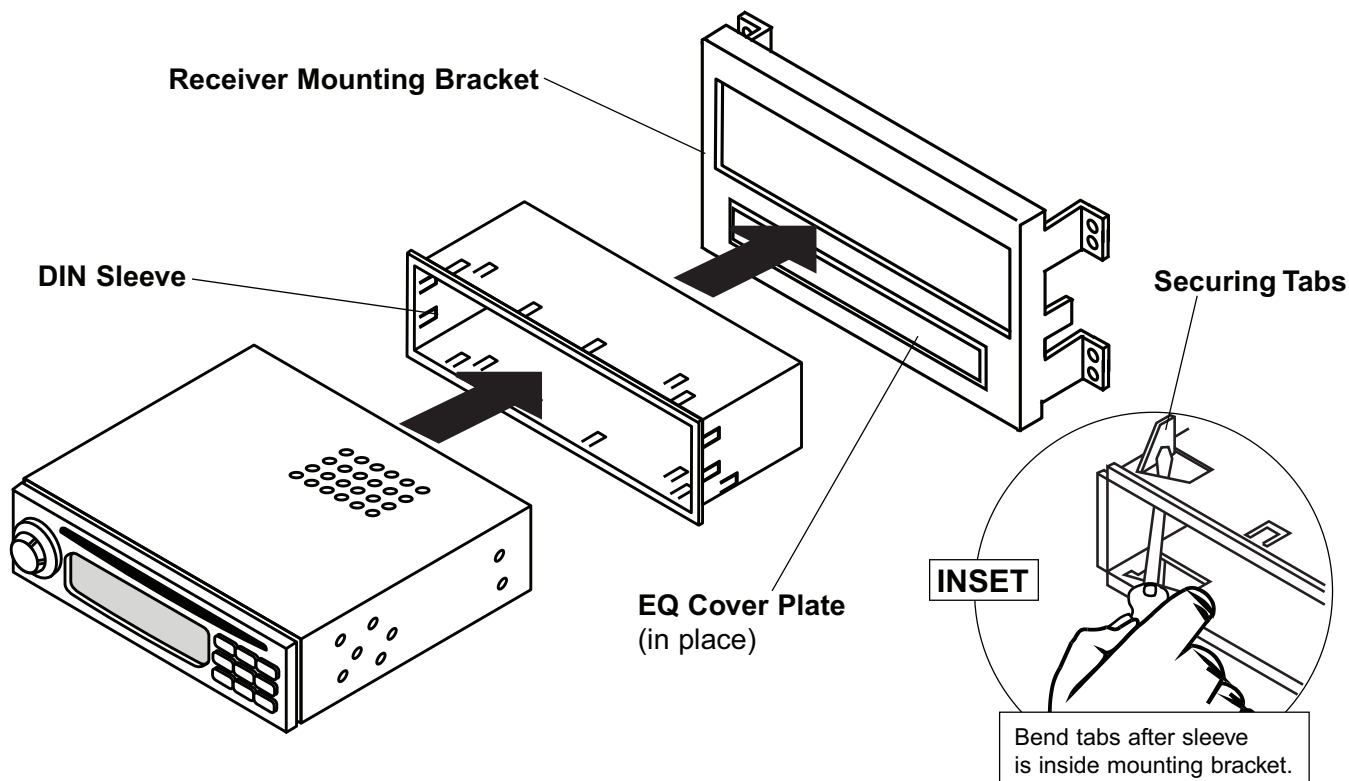


Tools Required


Flat Blade
Screwdriver



Parts Supplied:

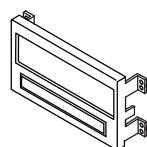

Mounting
Bracket

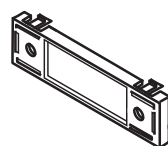

Shaft Insert



(4) Screws



EQ Cover
Plate



* 1 2 0 9 9 7 5 7 9 *

CRUTCHFIELD™

Copyright 1997 Crutchfield Corporation

Installation Kit



120 99-7579

Nissan

Page 2 of 2

Shaft Assembly

1. Snap **shaft insert** into opening in **receiver mounting bracket** (Figure 1).
2. Choose the proper **spacers** (supplied with your order) to allow receiver nosepiece to extend 1/8" to 1/4" beyond face of **receiver mounting bracket** (Figure 2).
3. Secure receiver and **faceplate** to mounting bracket with spacers and **shaftnuts** as shown.
4. Attach receiver **control knobs**.
5. If not installing an equalizer, snap in **EQ cover plate**.

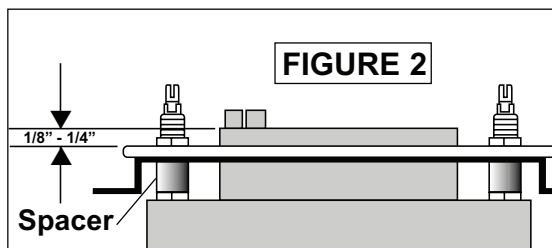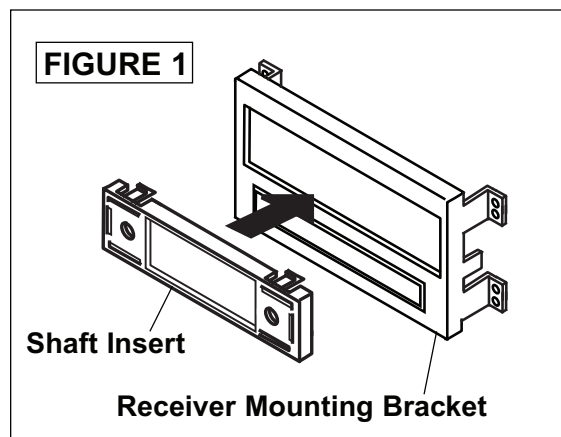

Tools Required



Deep
Socket

