



INSTALLATION INSTRUCTIONS FOR PART 99-7617GHG

APPLICATIONS

Nissan Altima (Sedan) 2013-up 99-7617GHG


KIT FEATURES

- ISO DIN radio provision with pocket
- **Painted Grey High Gloss**



KIT COMPONENTS

- A) Radio Trim Panel • B) Radio Brackets • C) Pocket • D) (4) #8 x 3/8" Phillips Pan Head Screws

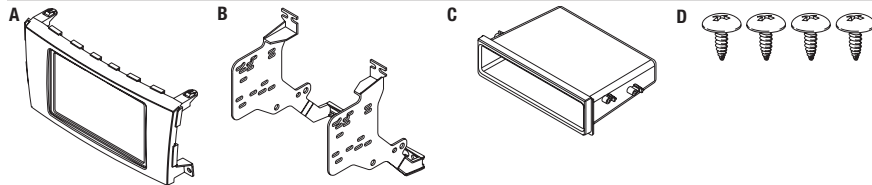

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-7552 2010-Up Nissan Wire Harness • 70-7554 2010-Up Nissan Wire Harness

Antenna Adapter: • 40-NI12 2010-Up Nissan Antenna Adapter

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver • Socket Wrench

Table of Contents

Dash Disassembly

- Nissan Altima 2013-up..... 2

Kit Assembly

- ISO DIN radio provision with pocket..... 3

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.


NOTE: Refer to the instructions included with the aftermarket radio.




99-76176HG

Dash Disassembly


1. Unclip the right side of the driver's knee bolster panel next to the center console and let hang. **Note: There is no need to completely remove the panel.** (Figure A)
2. Unclip and remove the (2) silver side trim panels from each side of the factory radio. (Figure B)
3. Unclip and remove trim panel below the a/c control panel. (Figure C)

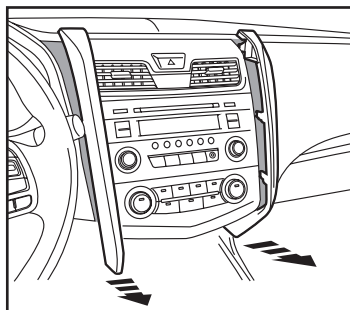

(Figure B)

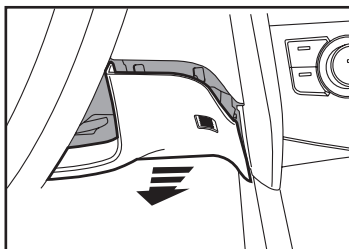


(Figure A)

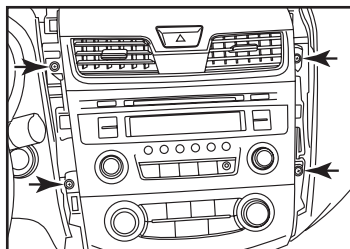


(Figure C)

4. Remove (4) Phillips screws securing the factory radio, a/c control and a/c vents. (Figure D)
5. Remove the a/c controls. (Figure D)
6. Remove the a/c vent panel. (Figure E)
7. Remove the factory radio. (Figure F)
8. If equipped there may be an a/c amp present attached under the radio remove (2) Phillips screws securing the a/c amp.


Continue to kit assembly

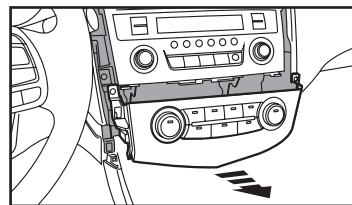

(Figure D)

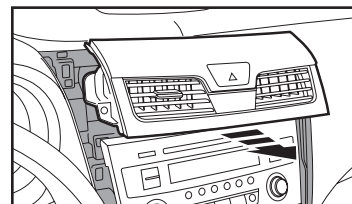

(Figure E)

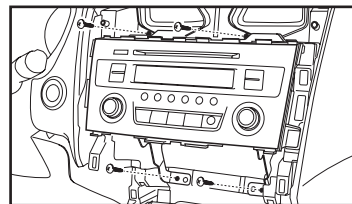

(Figure F)




99-7617GHG


Kit Assembly

ISO DIN radio provisions with pocket

1. If equipped attach the a/c amp to the radio brackets with the factory hardware. (Figure A)
2. Mount the pocket to the radio brackets with the (4) #8 X 3/8" Phillips pan head screws supplied. (Figure A)
3. Slide the head unit into radio brackets and secure with screws supplied with the unit. (Figure B)
4. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
5. Reassemble dash in reverse order of disassembly.

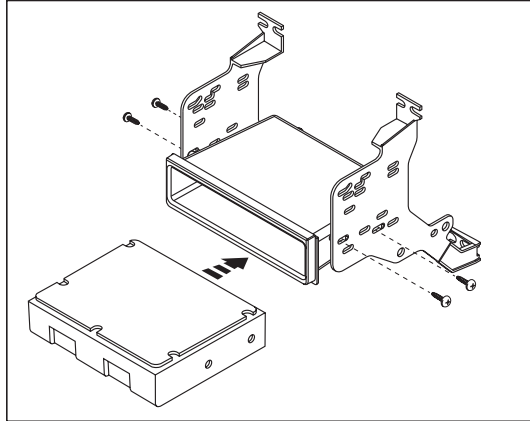

(Figure A)

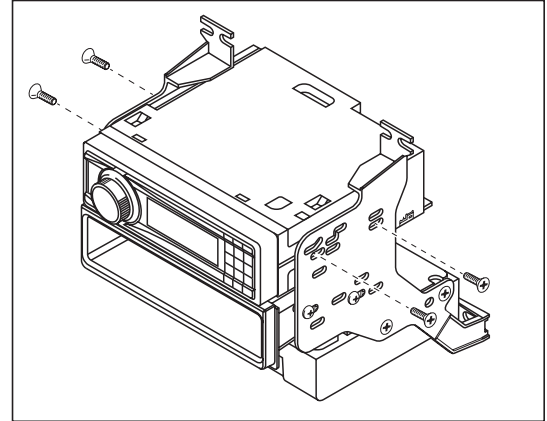

(Figure B)



INSTALLATION INSTRUCTIONS FOR PART 99-7617GHG

REV. 4/3/2013 INST99-7617GHG



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**