



INSTALLATION INSTRUCTIONS FOR PART 99-7619

APPLICATIONS

Nissan Frontier (all SL models and SV or SE models with Comfort and Convenience package)

Titan (excluding S models) **Xterra 2013-up** (excluding X models)

99-7619




KIT FEATURES

- ISO DIN radio provision with pocket
- **Textured ABS**

KIT COMPONENTS

- A) Trim Panel Brackets • B) Radio Trim Panel • C) Pocket • D) (4) #8 x 3/8" Phillips Screws

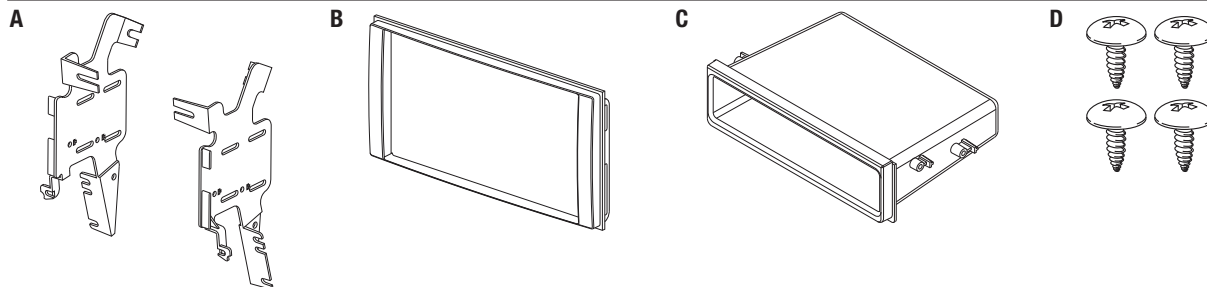

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-7552 2010-Up Nissan Harness

Antenna Adapter: • 40-NI12 2010-Up Nissan Antenna Adapter

Table of Contents

Dash Disassembly

- Nissan Titan 2013-up..... 2
- Nissan Frontier, Xterra 2013-up..... 2

Kit Assembly

- ISO DIN radio provision..... 3

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver
- Socket Wrench


CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

NOTE: Refer to the instructions included with the aftermarket radio.


Dash Disassembly

2013-Up Nissan Titan

1. Unclip the entire dash panel including the climate controls. Unplug and remove the panel. (Figure A)
2. Remove (4) Phillips screws securing the radio. Unplug and remove the chassis. (Figure B)

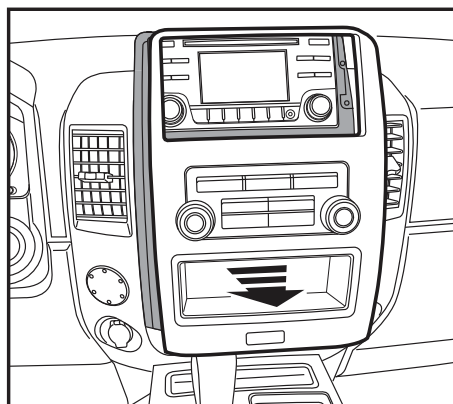

(Figure A)

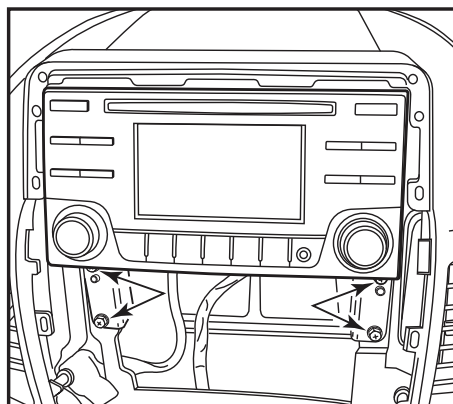


(Figure B)


2013-Up Nissan Frontier, 2013-Up Nissan Xterra

1. Unclip and remove the trim panel above the radio and climate controls. (Figure A)
2. Remove the (1) Phillips screw under panel and the (2) Phillips screws securing the radio brackets to the sub dash. (Figure B)
3. Unclip and remove the entire panel including the climate controls and factory radio.
4. Remove (4) Torx screws securing the radio to the trim panel. (Figure C, D)


Continue to kit assembly

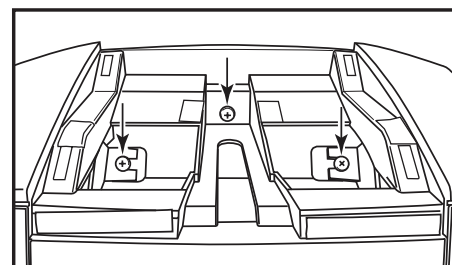


(Figure B)

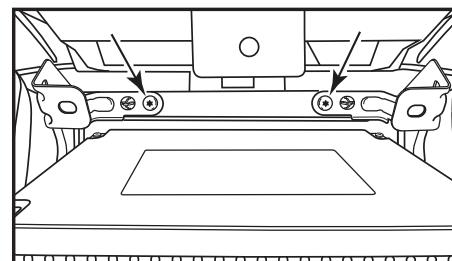

(Figure C)

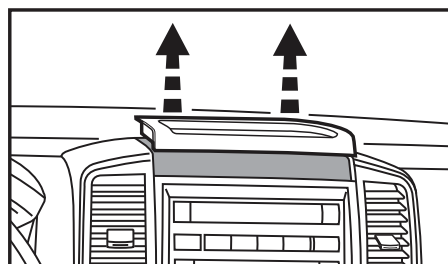

(Figure A)

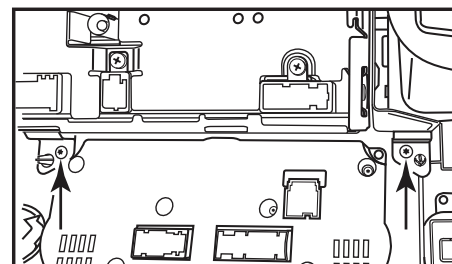

(Figure D)




99-7619

Kit Assembly


1. Cut and remove the shaded area of the brackets for the 2013-Up Frontier and Xterra. (Figure A)
2. Cut and remove the shaded area of the brackets for the 2013-up Titan. (Figure A)

ISO DIN radio provision

1. Clip the brackets into the radio trim panel. (Figure B)
2. Mount the pocket to the radio brackets with the (4) #8 x 3/8" Phillips screws supplied. (Figure C)
3. Slide the radio into radio brackets/pocket assembly and secure with screws supplied with the radio. (Figure D)

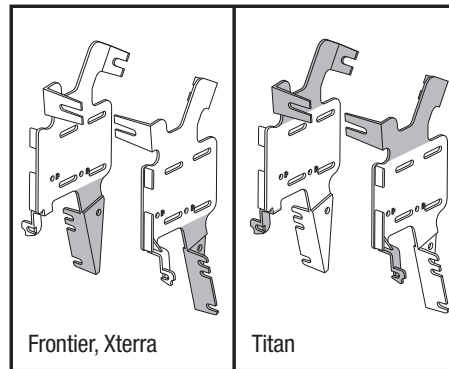


(Figure A)

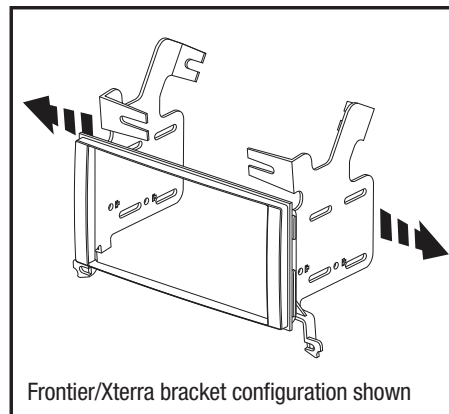


(Figure B)

4. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
5. **For the Titan**, mount the new radio assembly into the dash; **for the Frontier and Xterra**, mount the new radio assembly to the factory dash panel. Reassemble dash in reverse order of disassembly.

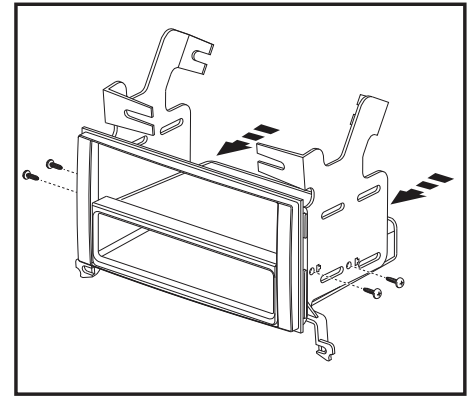

(Figure C)

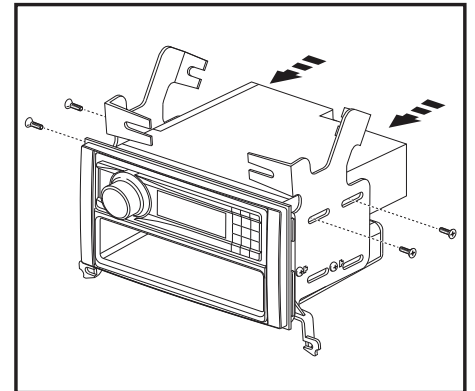

(Figure D)



INSTALLATION INSTRUCTIONS FOR PART 99-7619



REV. 11/7/2013 INST99-7619



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**

METRA. The World's best kits.™

1-800-221-0932

metraonline.com

© COPYRIGHT 2004-2013 METRA ELECTRONICS CORPORATION