



INSTALLATION INSTRUCTIONS FOR PART 99-7622HG

APPLICATIONS


Nissan Rogue 2014-up 99-7622HG

KIT FEATURES

- ISO DIN radio provision with pocket
- **Painted High Gloss Black Metallic**

KIT COMPONENTS

- A) Radio housing • B) Brackets • C) Pocket • E) (4) #8 x 3/8" Phillips screws

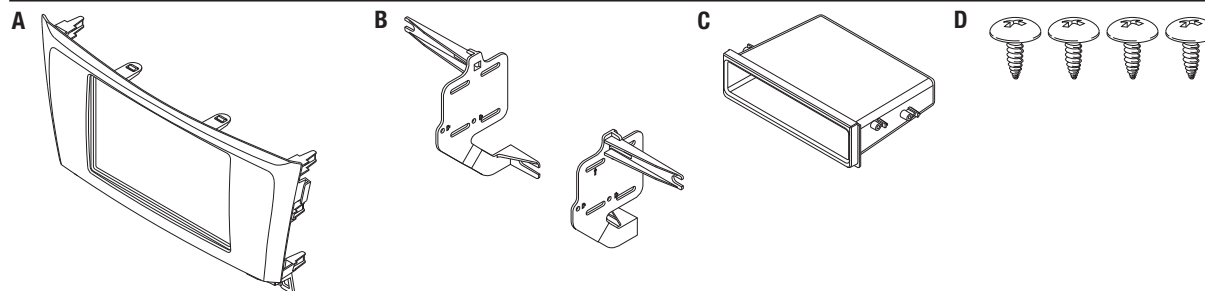

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-7552 Nissan Harness

Antenna Adapter: • 40-NI12 Nissan Antenna Adapter



Table of Contents

Dash Disassembly

- Nissan Rogue 2014-up 2

Kit Assembly

- ISO DIN radio provision with pocket 3

TOOLS REQUIRED


- Panel removal tool • Phillips screwdriver

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.


NOTE: Refer to the instructions included with the aftermarket radio.

Dash Disassembly


1. Unclip and remove the trim panel on the end of the passenger side of the dash. (Figure A)
2. Remove (1) Phillips screw securing the A/C vent then unclip and remove the vent. (Figure B)
3. Unclip and remove the trim panel above the glove box starting at the vent and working your way over to the radio. **Note: There is a hook on the radio side of this panel so make sure you start from the vent on the passenger side.** (Figure C)

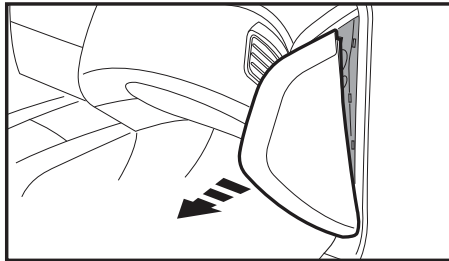

(Figure A)

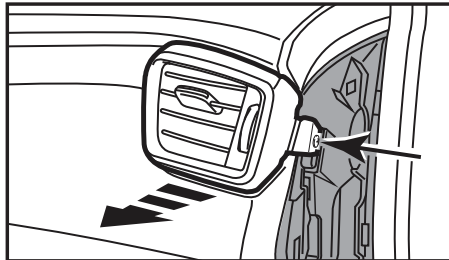


(Figure B)

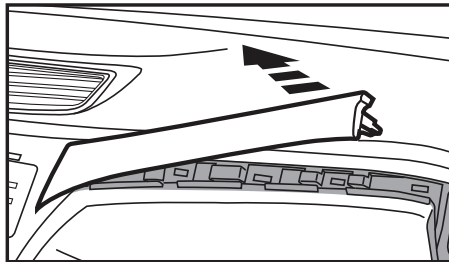


(Figure C)

4. Unclip and remove the A/C control. (Figure D)
5. Unclip and remove the trim panel to the left of the factory radio. **Note: On push to start models this panel will have the start button on it.** (Figure E)
6. Remove (4) Phillips screws securing the factory radio then unclip and remove the radio. (Figure F)


Continue to kit assembly

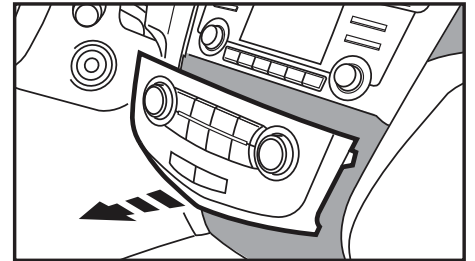

(Figure D)

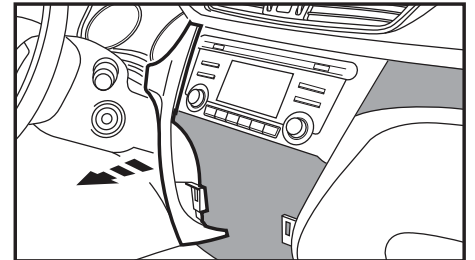

(Figure E)

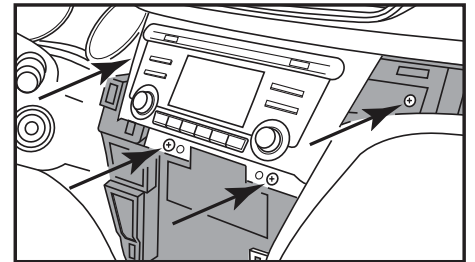

(Figure F)




99-7622HG


Kit Assembly

ISO DIN radio provision with pocket

1. Attach the pocket to the brackets with the provided (4) #8 x 3/8" Phillips screws. (Figure A)
2. Attach the aftermarket radio to the pocket/bracket assembly with the screws supplied with the radio. (Figure B)
3. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
4. Mount the new radio/pocket assembly into the dash then snap the radio housing over the radio assembly.
5. Reassemble dash in reverse order of disassembly.

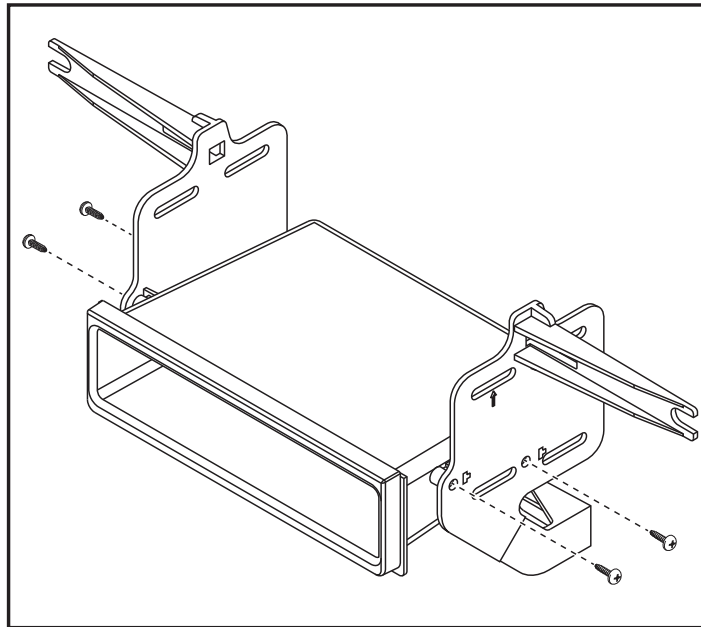

(Figure A)

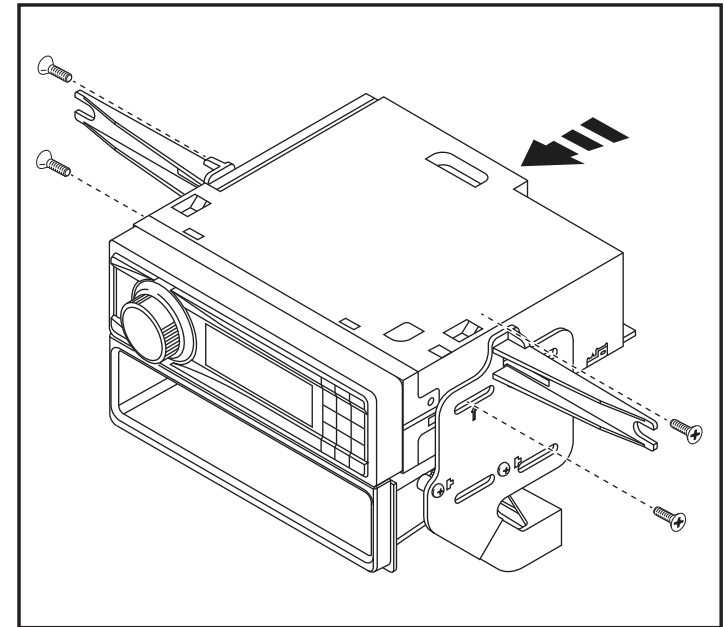

(Figure B)



INSTALLATION INSTRUCTIONS FOR PART 99-7622HG



RREV. 9/12/2014 INST99-7622HG



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**

METRA. The World's best kits.™

1-800-221-0932

metraonline.com

© COPYRIGHT 2014 METRA ELECTRONICS CORPORATION