



Installation instructions for part 99-7626HG

Nissan Pathfinder 2013-up

(Without NAV and with the factory climate controls above the radio controls)





99-7626HG

KIT FEATURES

- ISO DIN radio provision with pocket
- DDIN radio provision
- **Built and painted in multiple colors to match the factory color and appearance**

KIT COMPONENTS

- A) Radio housing trim panel
- B) Radio brackets
- C) ISO Pocket
- D) (4) #8 x 3/8" Phillips screws
- E) (2) White panel clips

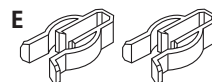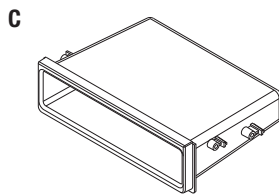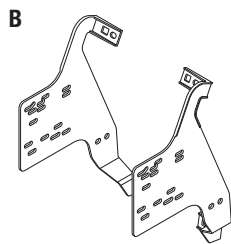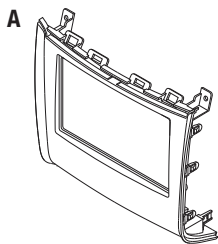

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-7552 Antenna Adapter: • 40-NI12

Table of Contents

Dash Disassembly 2

Kit Assembly

– ISO DIN radio provision with pocket..... 3

– DDIN radio provision 3


TOOLS REQUIRED

- Panel removal tool
- Phillips screwdriver or drill with long Phillips bit
- T-20 Torx screwdriver


CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation, unless the vehicle manufacturer recommends against so. Please check with your local Dealership for more information. All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before reconnecting the battery or cycling the ignition. Also, do not remove the factory radio with the key in the on position, or the vehicle running. It would be best to remove the key from the ignition and then wait a few seconds before removing the factory radio.

Dash Disassembly


1. Remove top trim above climate control panel and remove the exposed Phillips screw holding the climate control panel. (Figure A)
2. Unclip and remove climate control panel. (Figure B)
3. Remove (2) Phillips screws at the top of the radio trim bezel. (Figure C)
4. Remove trim panel under the radio and remove the (2) exposed Phillips screws securing the radio. (Figure D, E)

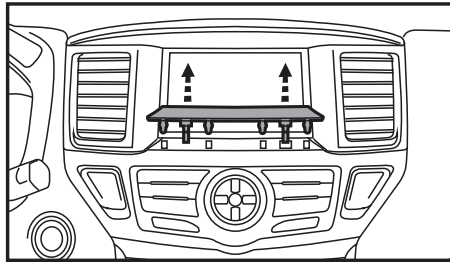

(Figure A)

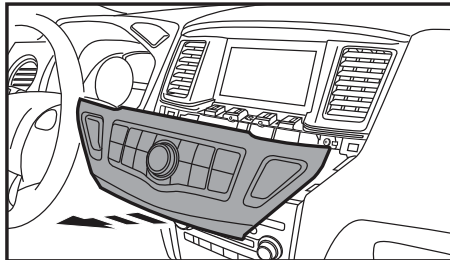


(Figure B)

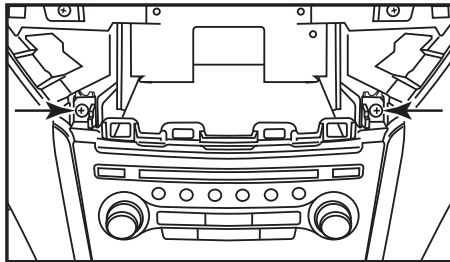


(Figure C)

5. Remove (4) Phillips screws securing the metal brace above the radio. (Figure F)
6. Unclip, unplug and remove the radio.
7. Remove the (2) T-20 Torx screws holding the climate control module to the factory radio bracket assembly, and set aside for kit assembly.


Continue to kit assembly

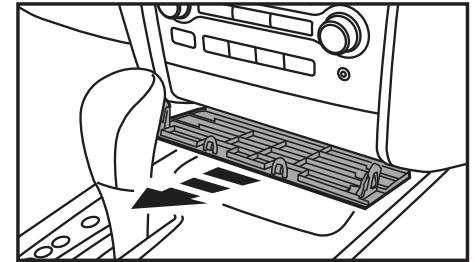

(Figure D)

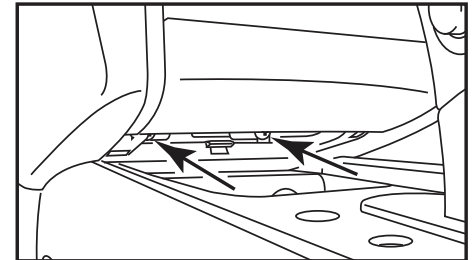

(Figure E)

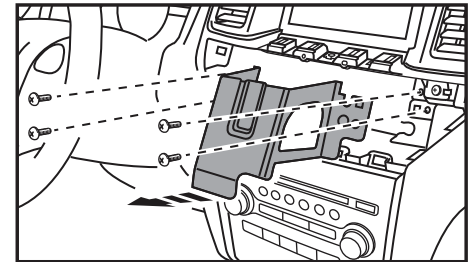


(Figure F)


Kit Assembly

ISO DIN radio provision

1. Attach the supplied (2) *white panel clips* to the *radio housing trim panel*
2. Remove the metal "DIN" sleeve and trim ring from the aftermarket radio.
3. Secure the included *radio brackets* to the radio using the screws supplied with the radio. (Figure A)
4. Mount the *pocket* to the bracket assembly with the (4) #8 x 3/8" Phillips screws supplied. (Figure A)
5. Mount the climate control module to the bracket assembly below the radio and pocket, using the hardware removed during disassembly. (Figure B)
6. Locate the factory wiring harness and antenna plug in the dash and make all necessary connections to the radio and climate control module. Metra recommends using the proper mating adapters from Metra and/or AXCESS.
7. Mount the new radio assembly into the dash using the factory hardware and reassemble the dash in the reverse order of disassembly.

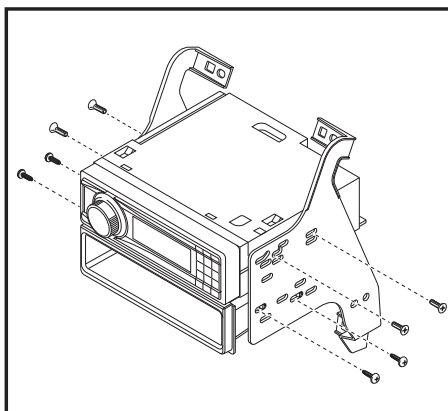


(Figure A)

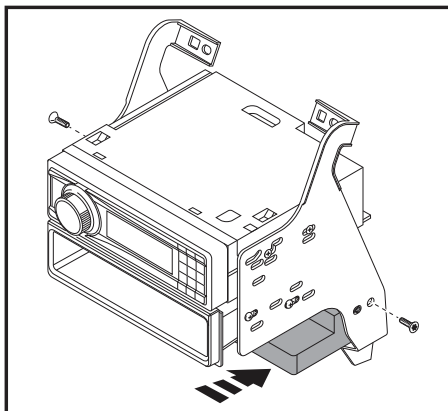


(Figure B)

DDIN radio provision

1. Attach the supplied (2) *white panel clips* to the *radio housing trim panel*
2. Secure the included *radio brackets* to the radio using the screws supplied with the radio. (Figure A)
3. Mount the climate control module to the bracket assembly below the radio, using the hardware removed during disassembly. (Figure B)
4. Locate the factory wiring harness and antenna plug in the dash and make all necessary connections to the radio and climate control module. Metra recommends using the proper mating adapters from Metra and/or AXCESS.
5. Mount the new radio assembly into the dash using the factory hardware and reassemble the dash in reverse order of disassembly.

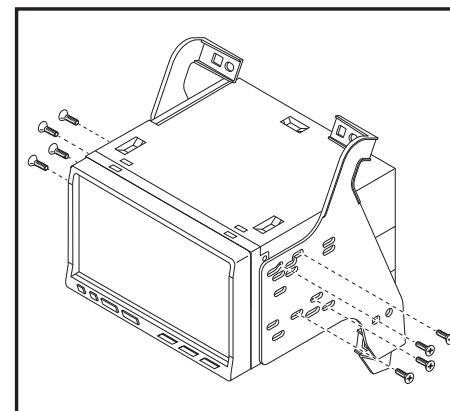

(Figure A)

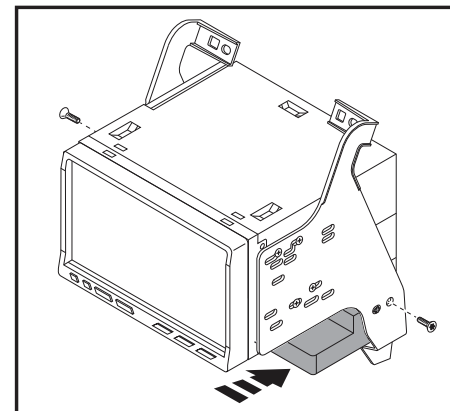

(Figure B)



Installation instructions for part 99-7626HG



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at 1-800-253-TECH. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**