



INSTALLATION INSTRUCTIONS FOR PART 99-7630


Nissan Maxima 2016-up 99-7630

KIT FEATURES

- ISO DIN radio provision with pocket
- ISO DDIN radio provision
- ***Painted to match the factory color and finish***

KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (8) #8 x 3/8" Phillips screws
- E) (8) #4 x 1/2" Phillips screws • F) (6) Panel clips

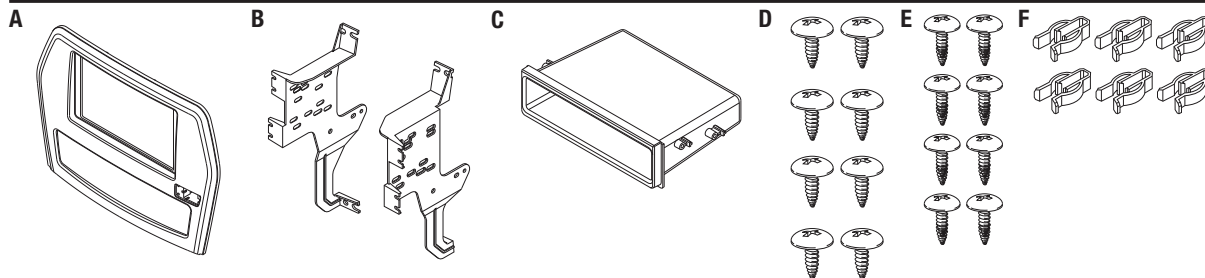

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-7552 (non-amplified models only)

Antenna Adapter: • 40-NI12



Table of Contents

Dash Disassembly	2
Kit Preparation	2-3
Kit Assembly	
– ISO DIN radio provision with pocket.....	4
– ISO DDIN radio provision	5

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver
- Torx screwdriver

CAUTION! All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before cycling the ignition. Also, do not remove the factory radio with the key in the on position, or while the vehicle is running.



99-7630

Dash Disassembly

1. Pull down on the shift collar, remove the clip holding the shift knob, and then remove the knob.
2. Open the center console compartment. Using a panel removal tool, pry up on the rear of the center console trim panel, and then unplug and remove the panel.
3. Unclip and remove the vent/hazard-switch trim panel above the radio.
4. Remove (4) Phillips screws securing the radio/climate-control panel, then unplug and remove the panel.

Continue to kit preparation.

Refer to metraoline.com for dash disassembly images.

Kit Preparation

From the factory radio/climate-control panel:

1. Remove the (4) Phillips screws securing the climate-controls and then remove.
2. Unclip and remove the passenger airbag light.
3. Unscrew (4) Phillips screws and remove the radio/climate-control side trim panels from the radio panel (save for kit assembly).
4. Remove the (2) Torx screws securing the climate-control module below the radio and then remove.

Continued on the next page.

Refer to metraoline.com for kit preparation images.




99-7630


Kit Preparation

From the 99-7630 radio trim panel

5. Attach the (6) *panel clips* provided. (Figure A)
6. Secure the climate controls to the panel using the (4) #4 x 1/2" Phillips screws provided. (Figure B)
7. Snap the passenger airbag light through the front of the panel. (Figure B)

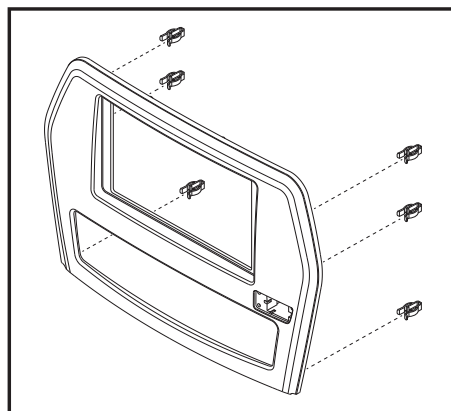


(Figure A)

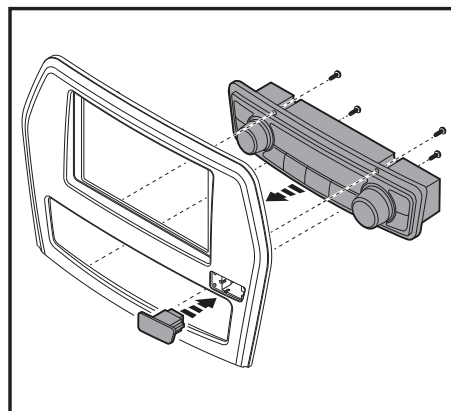


(Figure B)

8. Using the (4) #4 x 1/2" screws provided, secure the radio/climate-control side trim panels. (Figure C)
9. Secure the *radio brackets* to the panel using the (4) #8 x 3/8" Phillips screws provided. (Figure C)
10. Using the factory hardware, secure the climate-control module to the lower portion of *bracket/panel* assembly. (Figure D)

Continue to kit assembly.

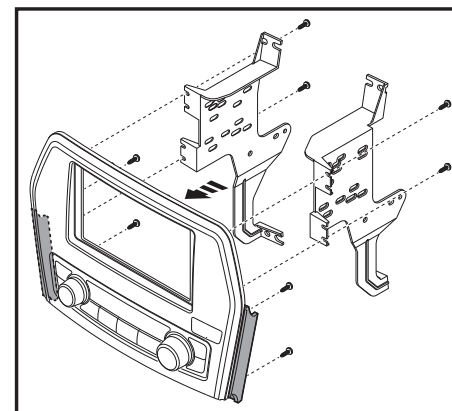

(Figure C)

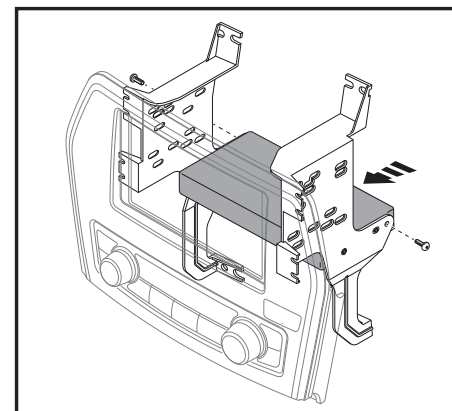


(Figure D)


Kit Assembly

ISO DIN radio provision with pocket

1. Attach the *pocket* to the *bracket/panel* assembly using the (4) #8 x 3/8" Phillips screws provided. (Figure A)
2. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
3. Slide the radio into the completed assembly, and then secure it using the screws supplied with the radio. (Figure B)
4. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio, climate control module, and climate controls. Metra recommends using the proper mating adapter from Metra and/or AXXESS. Test the radio for proper operation.
5. Reassemble the dash in reverse order of disassembly.

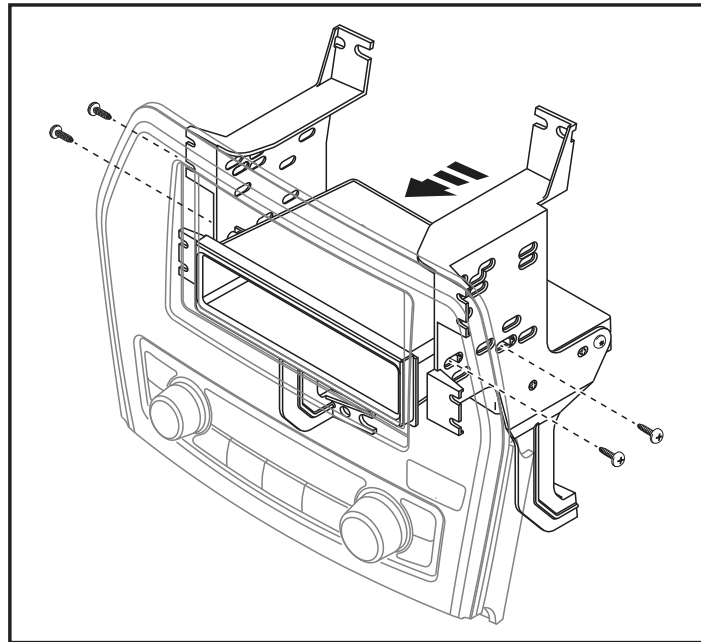

(Figure A)

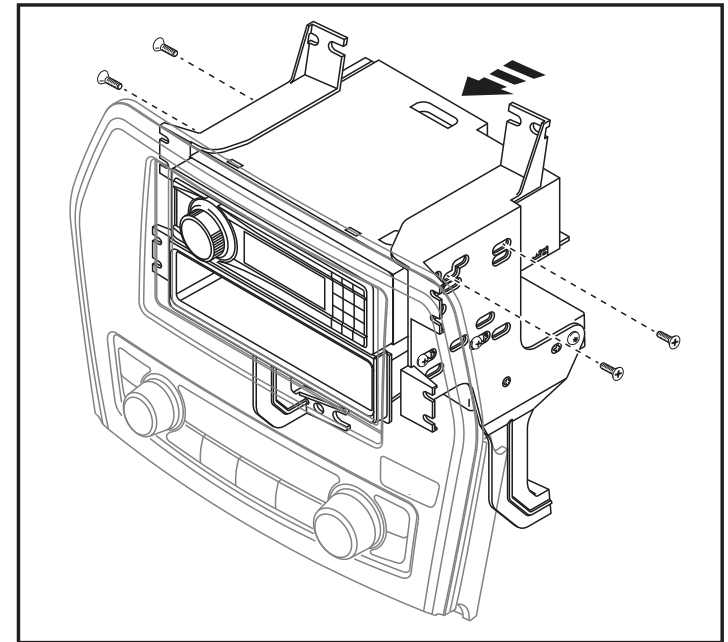

(Figure B)




99-7630

Kit Assembly

ISO DDIN radio provision

1. Slide the radio into the completed assembly, and then secure it using the screws supplied with the radio. (Figure A)
2. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio, climate control module, and climate controls. Metra recommends using the proper mating adapter from Metra and/or AXXESS. Test the radio for proper operation.
3. Reassemble the dash in reverse order of disassembly.

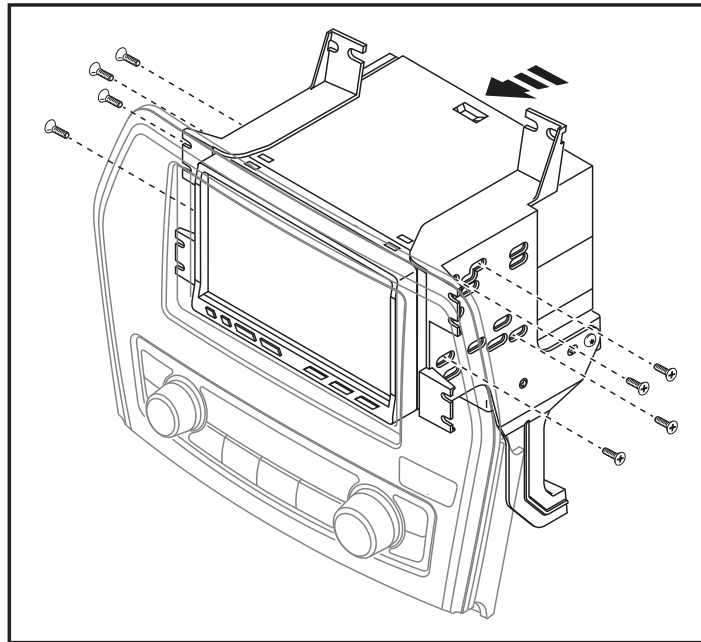

(Figure A)



INSTALLATION INSTRUCTIONS FOR PART 99-7630



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at 1-800-253-TECH. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians