



Installation instructions for part 99-7877

Honda Fit 2009-2013 99-7877


KIT FEATURES

- DIN radio provision with pocket
- ISO DIN radio provision with pocket
- ISO DDIN radio provision
- **Painted to match factory dash**
99-7877S = Silver, 99-7877B = Matte Black



KIT COMPONENTS

• A) Radio housing • B) ISO brackets • C) ISO trim plate • D) ISO DDIN brackets • E) ISO DDIN trim plate • F) Pocket

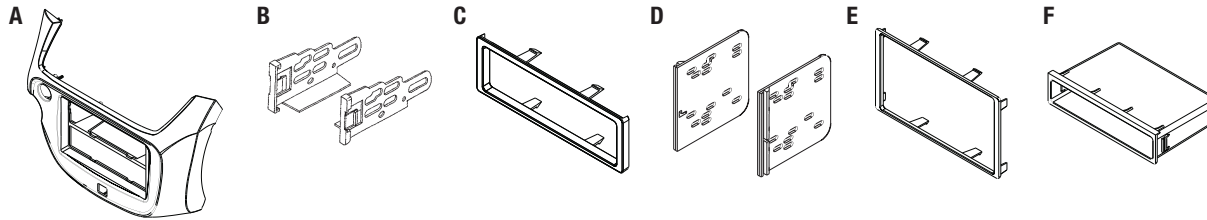

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-1729

Antenna Adapter: • 40-HD10 • 40-HD11 (with NAV)

TOOLS REQUIRED

• Panel removal tool • Phillips screwdriver • 8mm Socket wrench

Table of Contents

Dash Disassembly	2
Kit Preparation	3
Kit Assembly	
– DIN radio provision with pocket.....	4
– ISO DIN radio provision with pocket.....	5
– ISO DDIN radio provision	6


CAUTION! All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before cycling the ignition. Also, do not remove the factory radio with the key in the on position, or while the vehicle is running.

Dash Disassembly


1. Unclip and remove the lower center panel below radio. (Figure A)
2. Remove (1) 8mm bolt facing up behind center panel.

Note: Slide the recirculation control lever to FRESH for better access to bolt. (Figure A)


3. Open the upper glove box then use a pry tool to unclip and remove the radio/climate control assembly. (Figure B & C)

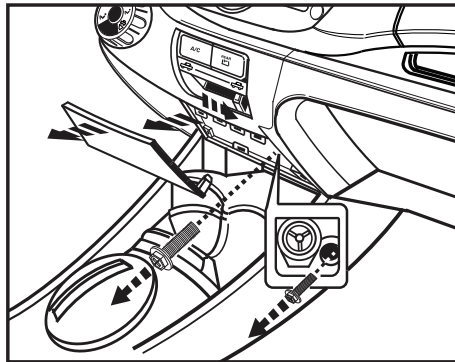

(Figure A)

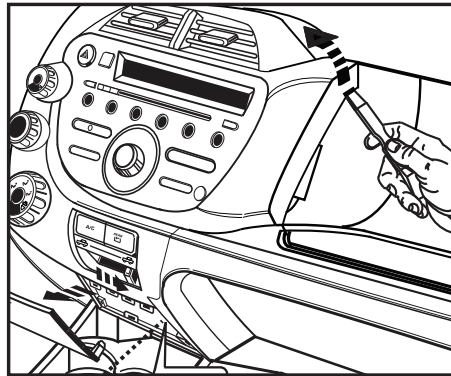


(Figure B)

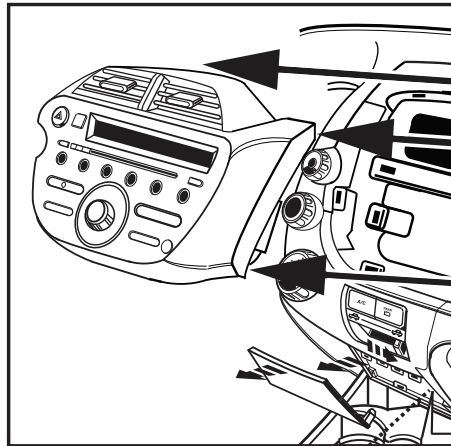


(Figure C)

4. Remove (2) Phillips screws securing the hazard switch to the back of the factory radio panel. (Figure D)
5. Remove (2) Phillips screws securing the air bag light to the back of the factory radio panel. (Figure E)
6. Remove (5) Phillips screws securing the A/C vents to the radio panel.
7. Remove (7) retaining clips from radio housing to be used later in kit preparation.

Continue to kit preparation

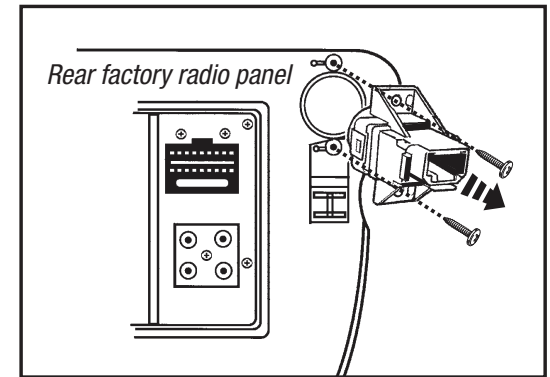


(Figure D)

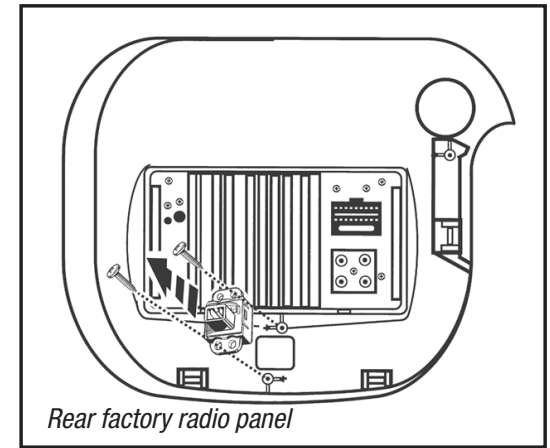


(Figure E)

Kit Preparation

1. Secure the hazard switch into the *radio housing* panel using the factory hardware. (Figure A)
2. Secure the air bag light into the *radio housing* panel using the factory hardware. (Figure A)
3. Secure the A/C vents to the *radio housing* using the factory hardware. (Figure B)
4. Attach the (7) retaining clips to the *radio housing* panel in the same location as removed from the factory radio panel.

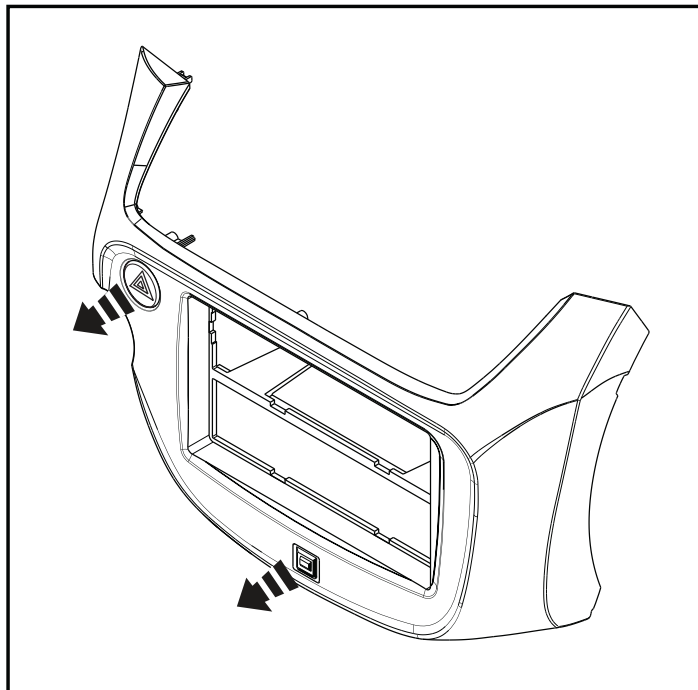

(Figure A)

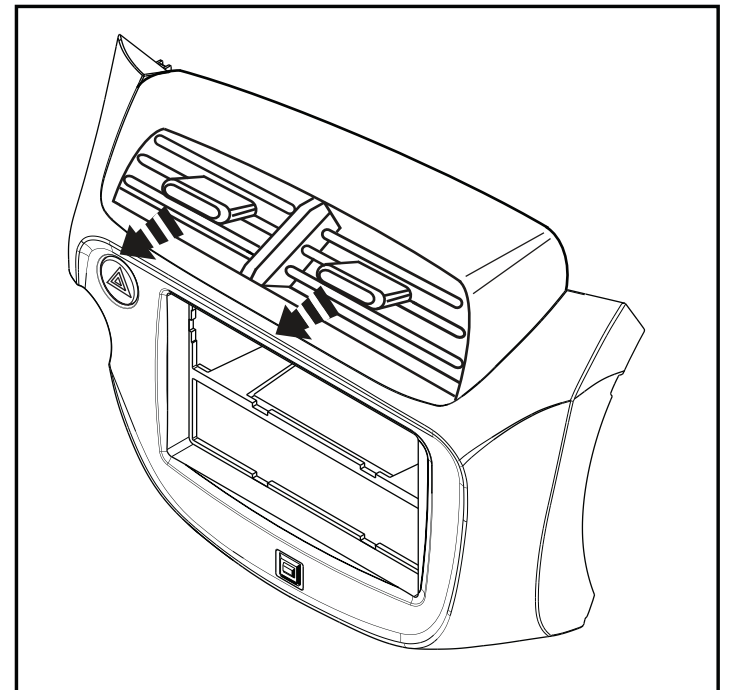


(Figure B)


Kit Assembly

DIN radio provision with pocket


1. Remove the metal DIN sleeve from the aftermarket radio.
2. Slide the sleeve into the *radio housing* and secure by bending the metal locking tabs down. (Figure A)
3. Slide the radio back into the sleeve until it clicks in. (Figure B)
4. Snap the *pocket* into the *radio housing*. (Figure C)
5. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXXESS. Test the radio for proper operation.
6. Reassemble the dash in reverse order of disassembly.

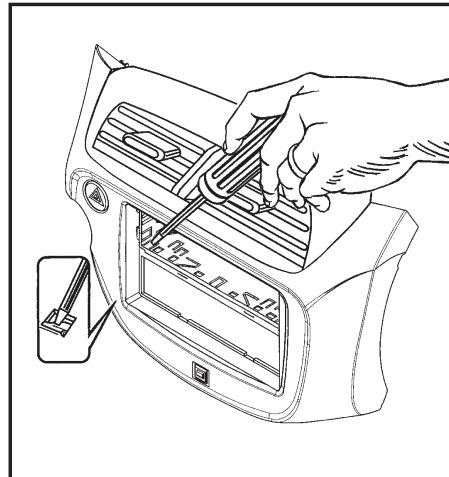

(Figure A)

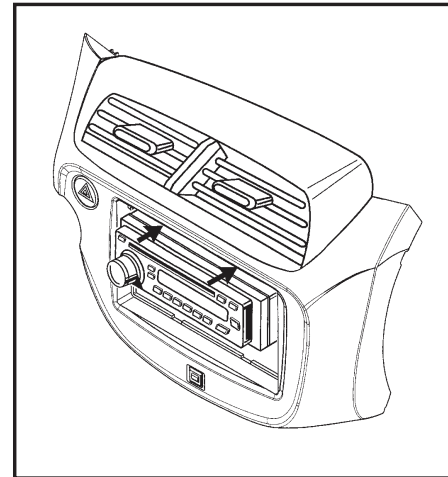

(Figure B)

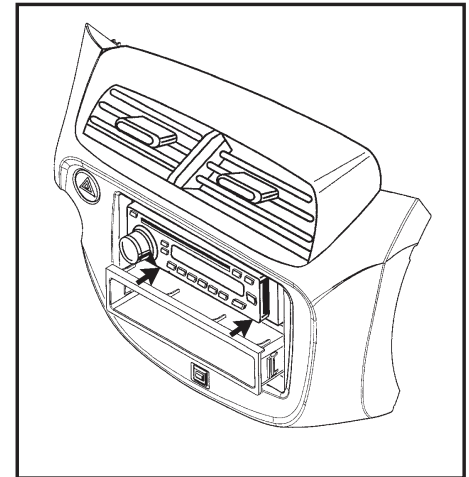

(Figure C)




99-7877


Kit Assembly

ISO DIN radio provision with pocket


1. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
2. Secure the *ISO brackets* to the radio with the screws supplied with the radio. (Figure A)
3. Slide the radio into the radio opening until the side clips engage. (Figure B)
4. Snap the *ISO trim plate* into the radio housing. (Figure B)
5. Snap the *pocket* into the radio housing. (Figure C)
6. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXXESS. Test the radio for proper operation.
7. Reassemble the dash in reverse order of disassembly.

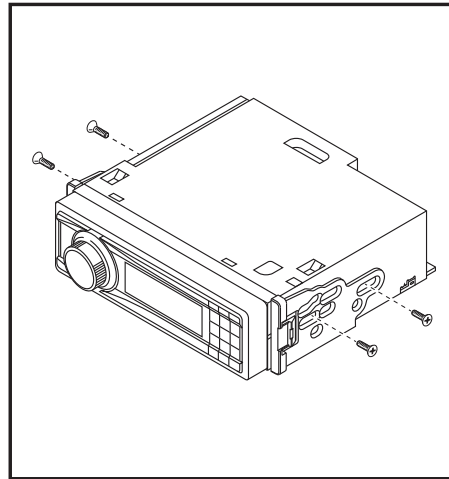

(Figure A)

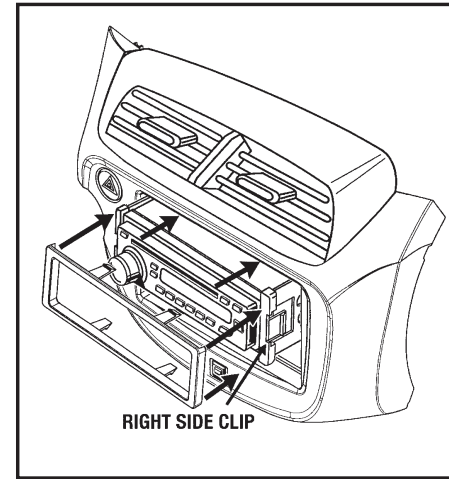

(Figure B)

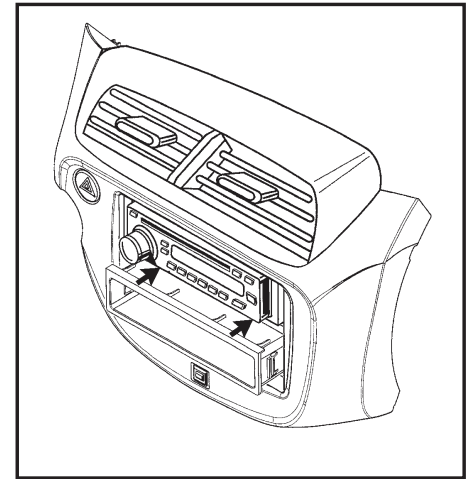

(Figure C)




99-7877


Kit Assembly

ISO DDIN radio provision


1. Cut and remove the center bar from the *radio housing*. (Figure A)
2. Snap the *ISO DDIN brackets* to the inside edge of the *radio housing*. (Figure B)
3. Slide the radio into the bracket/
radio housing assembly and secure
using the screws supplied with the
radio. (Figure C)
4. Snap the *ISO DDIN trim plate* onto
the front of the radio/housing
assembly. (Figure C)
5. Locate the factory wiring harness
and antenna connector in the
dash, and complete all necessary
connections to the radio. Metra
recommends using the proper
mating adapter from Metra and/or
AXXESS. Test the radio for proper
operation.
6. Reassemble the dash in reverse
order of disassembly.

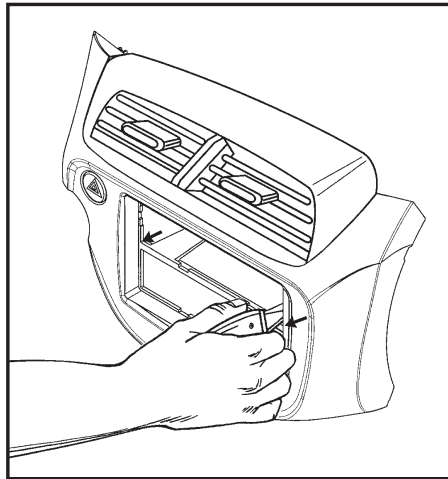

(Figure A)

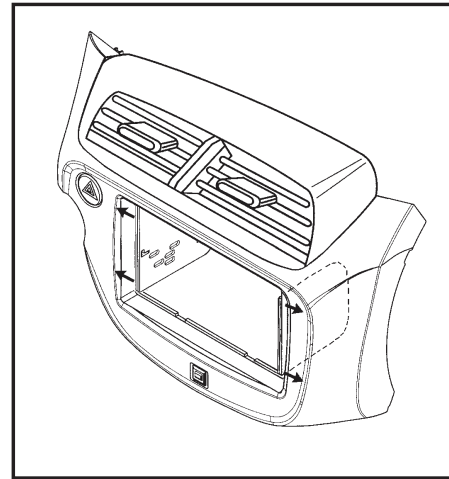

(Figure B)

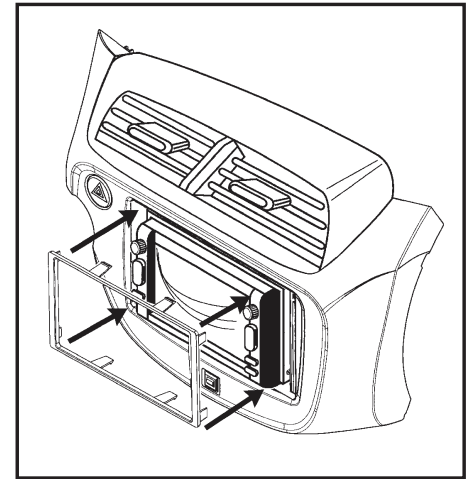

(Figure C)



Installation instructions for part 99-7877



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at **1-800-253-TECH**. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**