



INSTALLATION INSTRUCTIONS FOR PART 99-7881G

APPLICATIONS


Honda Civic 2012 99-7881G

KIT FEATURES

- ISO DIN radio provision with pocket
- *Painted to match factory dash*

KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (6) Panel clips
- E) (8) #8 x 3/8" Truss-head Phillips screws • F) (2) #8 x 1/2" Pan-head Phillips screws

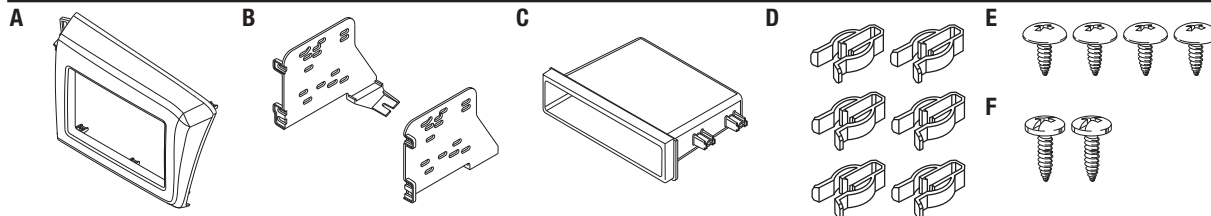

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-1729 - Honda 2008-up harness • 70-1730 - Honda 2008-up amp I/F harness

Antenna Adapter: • 40-HD11 - Honda antenna adapter 2009-up

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver • Socket wrench



Table of Contents

Dash Disassembly

– Honda Civic 2012..... 2

Kit Assembly

– ISO DIN radio provision with pocket..... 3

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

NOTE: Refer to the instructions included with the aftermarket radio.




99-7881G


Dash Disassembly

1. Remove instrument cluster surround panel. (Figure A)
2. Remove (2) Phillips screws securing accessory power socket panel. (Figure B)
3. Remove (2) 8mm/Phillips screws from under radio chassis. (Figure C)
4. Remove radio from dash and disconnect harnesses.


Continue to kit assembly

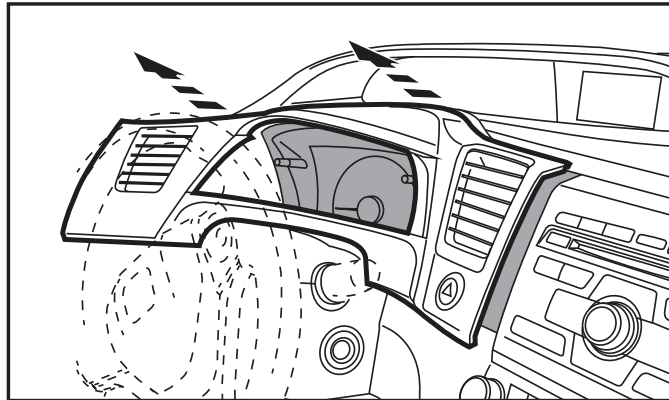

(Figure A)

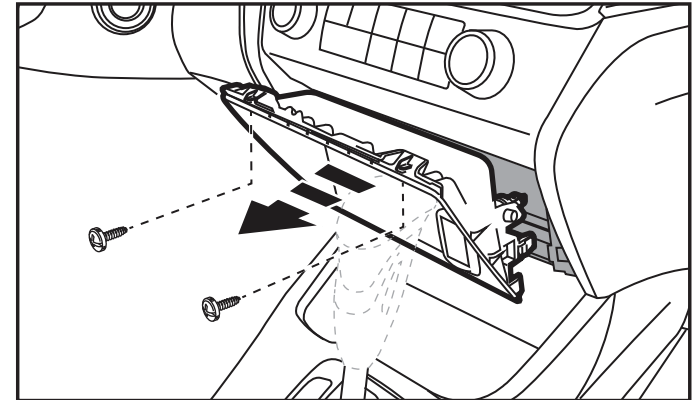

(Figure B)

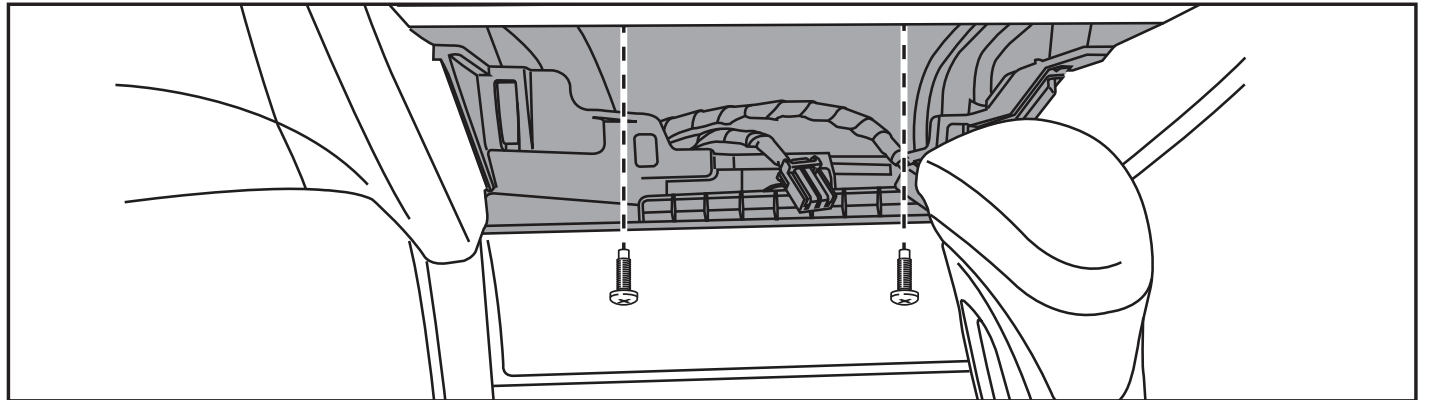

(Figure C)




99-7881G

Kit Assembly


ISO DIN radio provision with pocket

1. Mount the pocket to the radio brackets with the (4) #8 x 3/8" Phillips screws supplied. (Figure A)
2. Attach the radio brackets to the radio trim panel with (4) #8 x 3/8" Phillips screws supplied. (Figure B)
3. Slide the head unit into radio brackets and secure with screws supplied with the unit. (Figure C)
4. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXCESS.
5. Use (2) supplied #8 x 1/2" Phillips screws to secure the radio assembly in the sub dash.
6. Reassemble dash in reverse order of disassembly.


Note: Apply supplied clips to the factory locations on the new radio trim panel.

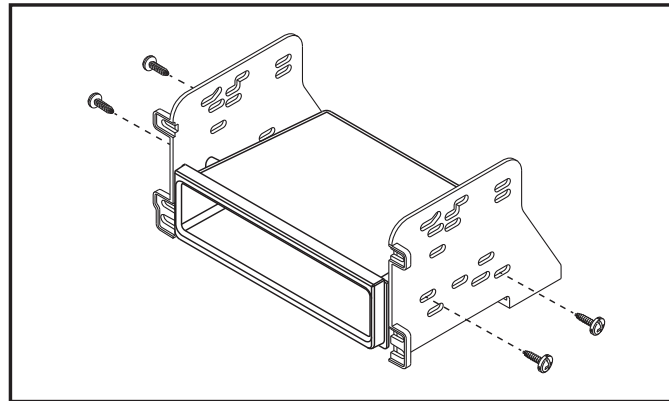

(Figure A)

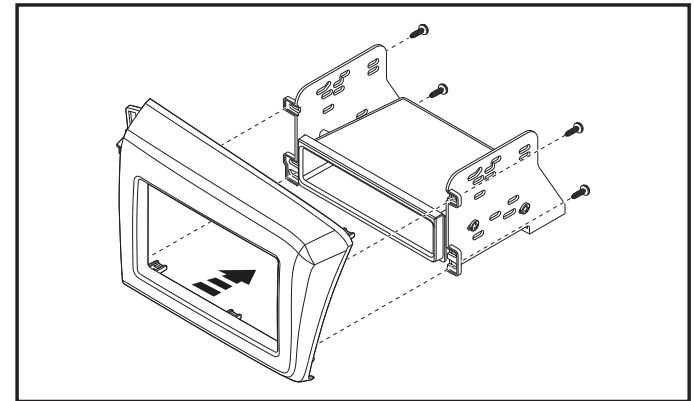

(Figure B)

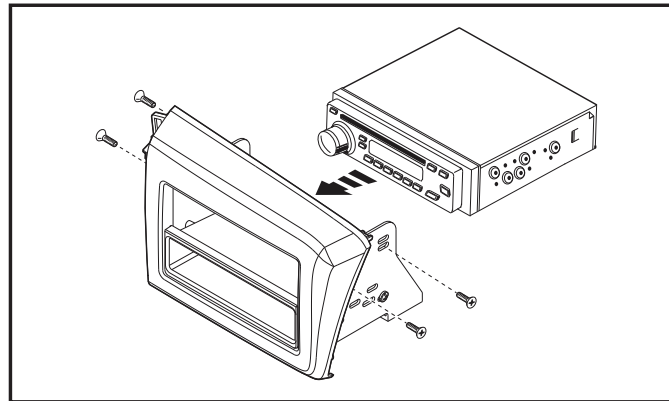

(Figure C)



INSTALLATION INSTRUCTIONS FOR PART 99-7881G



REV. 11/22/2013 INST99-7881G



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**

METRA. The World's best kits.™

1-800-221-0932

metraonline.com

© COPYRIGHT 2004-2013 METRA ELECTRONICS CORPORATION