



Installation instructions for part 99-7882B

Honda Civic 2013-2015 99-7882B


KIT FEATURES

- ISO DIN radio provision with pocket

Note: This kit will not retain the i-MID display

KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (3) metal panel clips • E) (3) plastic panel clips
- F) (4) #8 x 3/8" Phillips truss-head screws • G) (13) #8 x 3/8" Phillips pan-head screws
- H) (3) #4 x 3/8" Phillips truss-head screws • I) (2) #8 x 1/2" Phillips pan-head screws

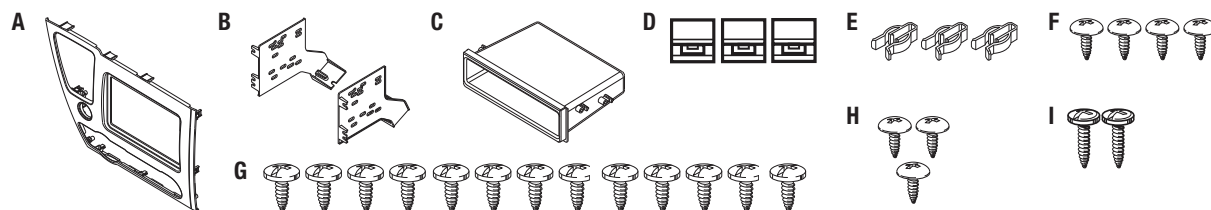

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • Please visit metraonline.com for options

Antenna Adapter: • 40-HD11

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver • 8mm socket wrench



Table of Contents


Dash Disassembly	2
Kit Preparation	3
Kit Assembly	
– ISO DIN radio provision with pocket.....	3

CAUTION! Metra recommends disconnecting the negative battery terminal before beginning any installation, unless the vehicle manufacturer recommends against so. Please check with your local Dealership for more information. All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before reconnecting the battery or cycling the ignition. Also, do not remove the factory radio with the key in the on position, or the vehicle running. It would be best to remove the key from the ignition and then wait a few seconds before removing the factory radio.


Dash Disassembly

1. Open the pocket door below the radio, remove (2) Phillips screws exposed, and then remove the pocket. (Figure A)
2. Remove (2) Phillips screws from the bottom edge of the radio. (Figure B)
3. Remove (2) 8mm screws facing up from inside the pocket cavity. (Figure C)
4. Unsnap and remove the climate/radio panel assembly. (Figure D)
5. Remove the components from the climate/radio panel to be reused in kit assembly. (Figure E)
 - a. Remove (4) screws from the climate control panel.
 - b. Remove (2) screws from the factory hazard button.
 - c. Remove (3) screws from the factory vent.
 - d. Remove (3) screws from the lower trim panel.


Continue to kit preparation

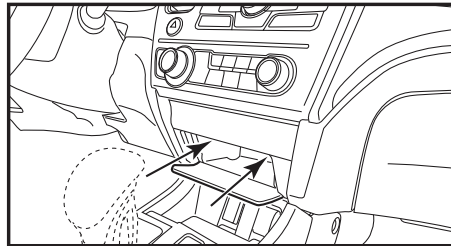


(Figure A)

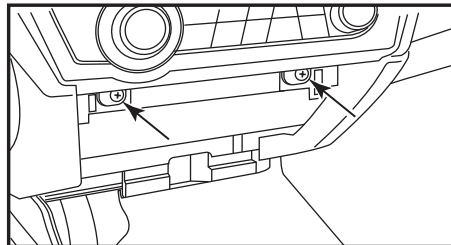


(Figure B)

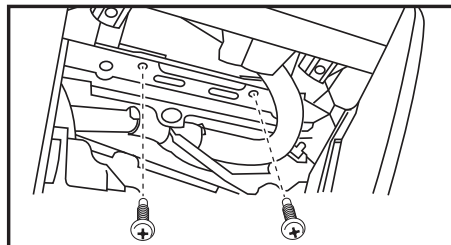

(Figure C)

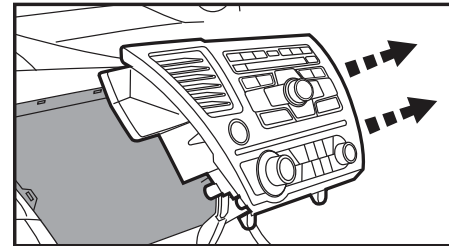

(Figure D)

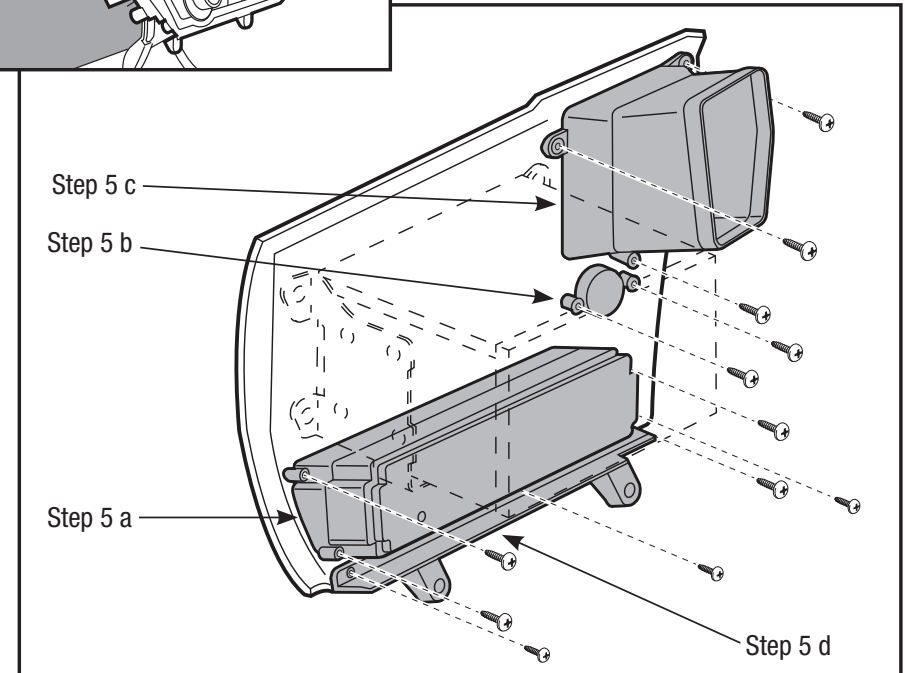


(Figure E)

Kit Preparation

1. Secure the factory components removed in dash disassembly to the *radio panel*. Except for the (3) screws to secure the lower trim panel, either the factory screws or the (9) #8 x 3/8" Phillips pan-head screws supplied with the kit may be used. For the lower trim panel use the (3) #4 x 3/8" Phillips truss-head screws supplied with the kit to secure it to the panel. (Figure A)
2. Attach the (3) metal and (3) plastic panel clips to the *radio panel*. The factory metal clips may be used in place of the metal clips, but not the plastic clips. (Figure A)

Continue to kit assembly

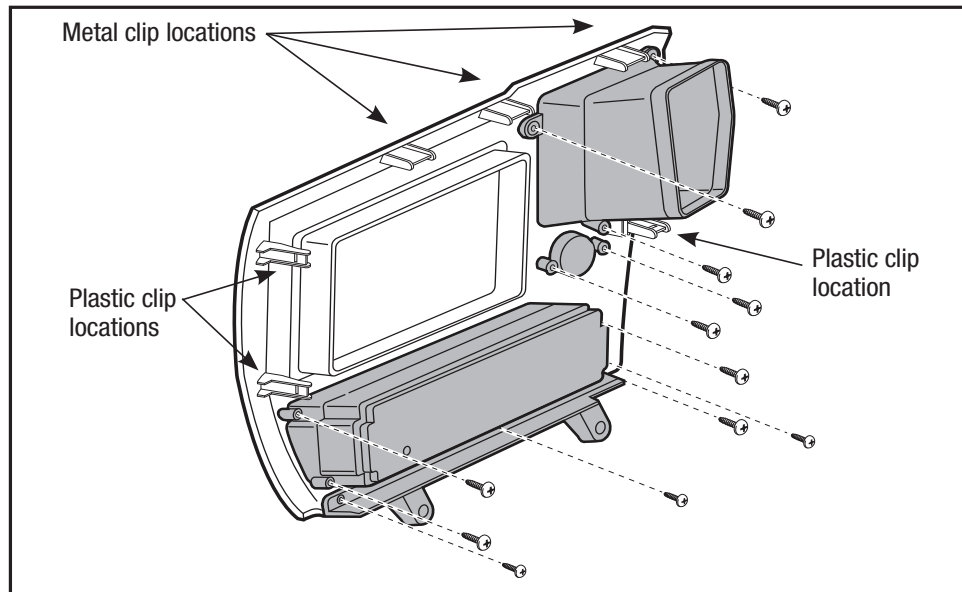


(Figure A)


Kit Assembly

ISO DIN radio provision with pocket

1. Secure the *pocket* to the *radio brackets* with the (4) #8 x 3/8" Phillips pan-head screws supplied with the kit. (Figure A)
2. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
3. Slide the radio between the bracket/pocket assembly and secure it with the screws supplied with the radio. (Figure B)
4. Secure the completed assembly to the *radio trim panel* with the (4) #8 X 3/8" Phillips truss-head screws supplied with the kit. (Figure C)
5. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Re-connect the negative battery terminal and test the radio for proper operation.
6. Reassemble the dash in reverse order of disassembly using the (2) #8 x 1/2" Phillips pan-head screws supplied with the kit for the lower radio mounts.

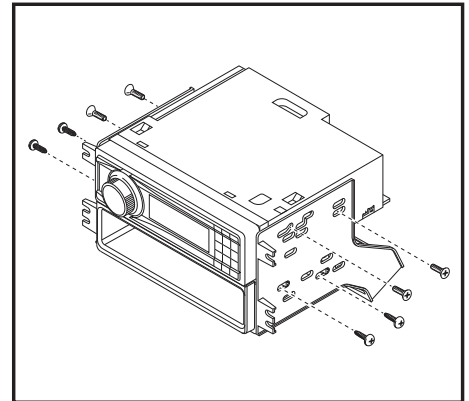

(Figure A)

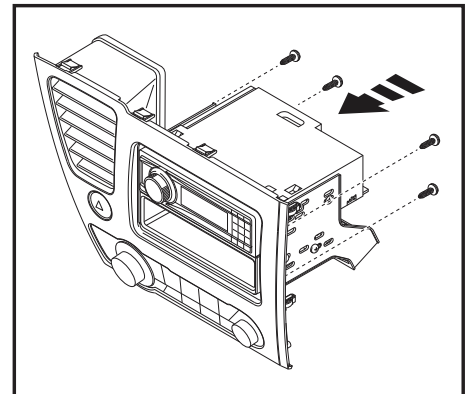

(Figure B)



Installation instructions for part 99-7882B



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at **1-800-253-TECH**. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**