



INSTALLATION INSTRUCTIONS FOR PART 99-7883HG

APPLICATIONS

Honda Fit 2015-up 99-7883HG


KIT FEATURES

- ISO DIN radio provision with pocket
- **Painted high gloss black**



KIT COMPONENTS

- A) Radio trim panel • B) Brackets • C) Pocket • D) (4) #8 x 3/8" Phillips screws

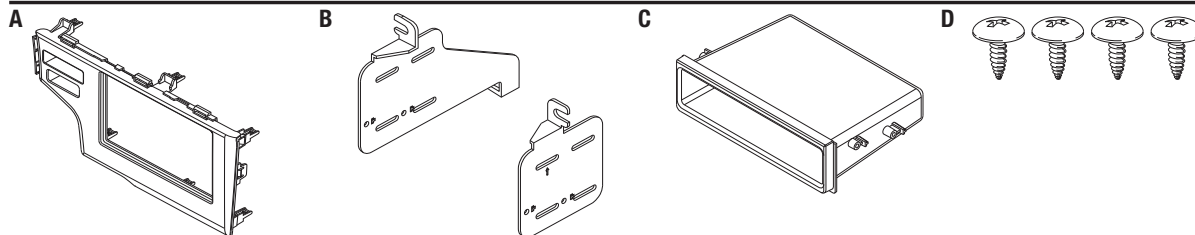

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-1729

Antenna Adapter: • 40-HD11

Table of Contents

Dash Disassembly

- Honda Fit 2015-up 2

Kit Assembly

- ISO DIN radio provision with pocket..... 3

TOOLS REQUIRED


- Phillips screwdriver • Panel removal tool

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.


NOTE: Refer to the instructions included with the aftermarket radio.

Dash Disassembly


1. Remove (1) Phillips screw from the trim panel below the a/c control that houses the accessory socket and factory USB's then unclip and remove the panel. (Figure A)
2. Remove (1) 8mm bolt facing up in cavity behind a/c control. (Figure B)
3. Unclip and remove the instrument cluster trim panel. (Figure C)

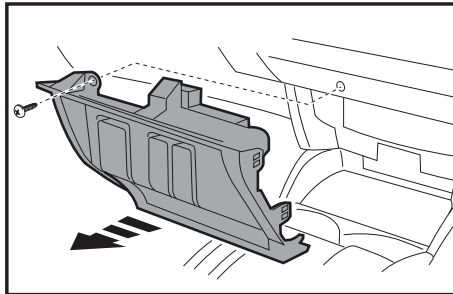

(Figure A)

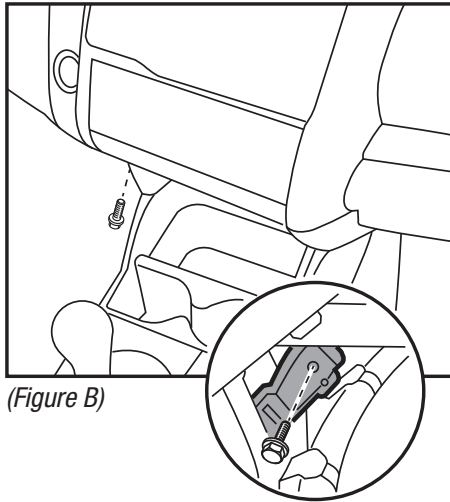


(Figure B)

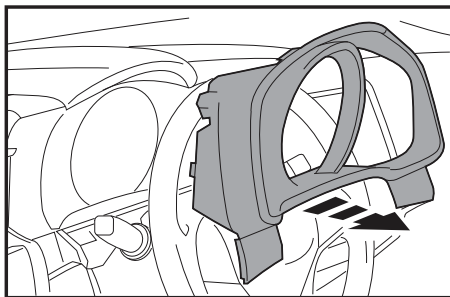


(Figure C)

4. Unclip and remove the a/c vent trim panel including the vents above the factory radio. (Figure D)
5. Remove (2) 8mm bolts securing the factory radio then unclip and remove the radio. (Figure E)
6. Remove (2) screws securing the air bag light.
7. Remove (2) screws securing the hazard switch.

Continue to kit assembly

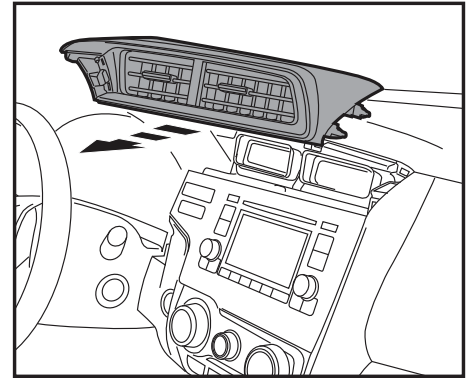

(Figure D)

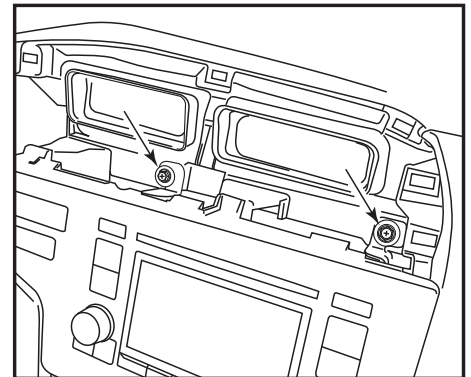

(Figure E)




99-7883HG


Kit Assembly

ISO DIN radio provision with pocket

1. Attach the air bag light and hazard switch to the 99-7883 radio trim panel.
2. Mount the pocket to the brackets with the (4) #8 x 3/8" Phillips screws supplied. (Figure A)
3. Slide the radio into the assembly and secure with the screws supplied with the radio. (Figure B)
4. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXCESS.
5. Mount the new radio assembly into the dash and reassemble the dash in the reverse order of disassembly using the 99-7883 radio trim panel.

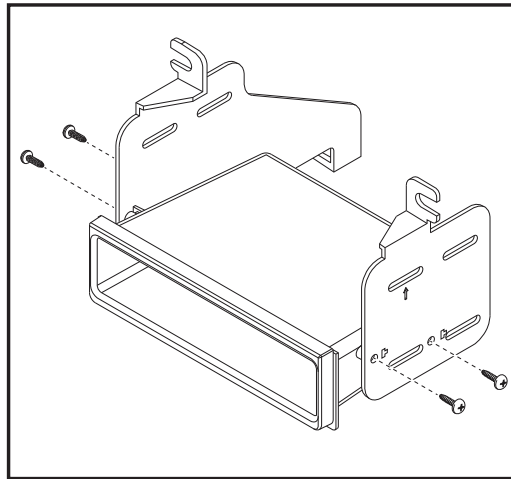

(Figure A)

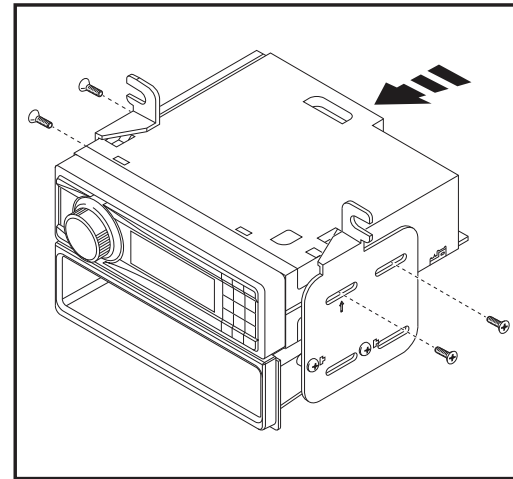

(Figure B)



INSTALLATION INSTRUCTIONS FOR PART 99-7883HG



REV. 3/25/2015 INST99-7883HG



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**

METRA. The World's best kits.™

1-800-221-0932

metraonline.com

© COPYRIGHT 2015 METRA ELECTRONICS CORPORATION