

Installation Kit

IMPORTANT

Before starting, compare items on your invoice with items received. If any parts are missing, first carefully check through packaging material. If an item is missing, please call:

Crutchfield at 1-888-955-6000

120 99-7893

Honda/Saab



Revision 02/02/14

If your vehicle is a Odyssey:

Do not break off any of the tabs on kit. Proceed to page 2.

If your vehicle is a CR-V or Civic:

1. Using pliers, break off **tabs not labeled** with a "C" on top of mounting bracket.
2. On bottom of mounting bracket, break off tabs labeled "P".

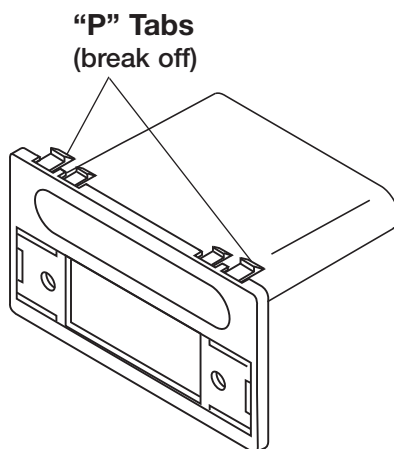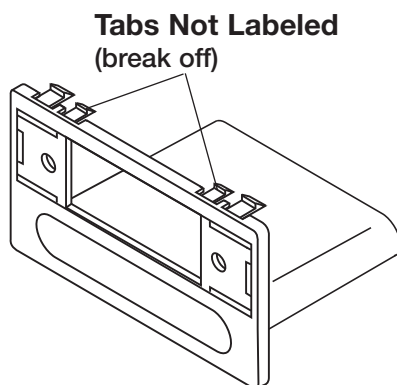



If installing a DIN receiver, follow instructions on the next page.
If installing a shaft receiver, see page 3.

If your vehicle is a Saab 9-3:

Proceed to instructions on page 5.

If your vehicle is a Prelude:

1. Using pliers, break off tabs labeled with a "C" on top of mounting bracket.
2. On bottom of mounting bracket, break off tabs not labeled "P".

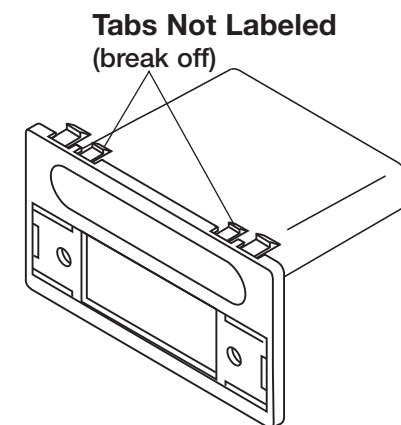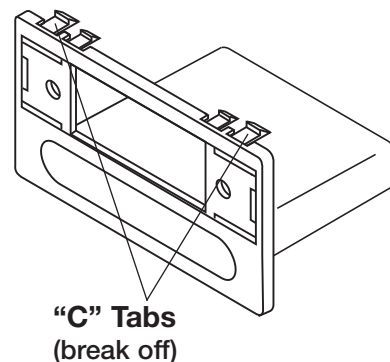


If installing a DIN receiver, follow instructions on the next page.
If installing a shaft receiver, see page 3.

Tools Required

Pliers



**Parts
Supplied:**

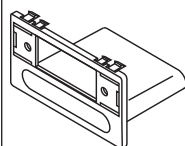

Mounting
Bracket



120997893

CRUTCHFIELD

Copyright 2014 Crutchfield Corporation

Installation Kit

120 99-7893

Honda

DIN kit preparation -- Honda

(See page 3 or 4 if installing a shaft receiver).

1. Cut out shaft supports in receiver mounting bracket with a utility knife to create the DIN receiver opening (Figures 1 & 2).
2. Install kit and receiver following instructions in the Crutchfield MasterSheet for your particular vehicle.

Receiver Mounting Bracket

FIGURE 1


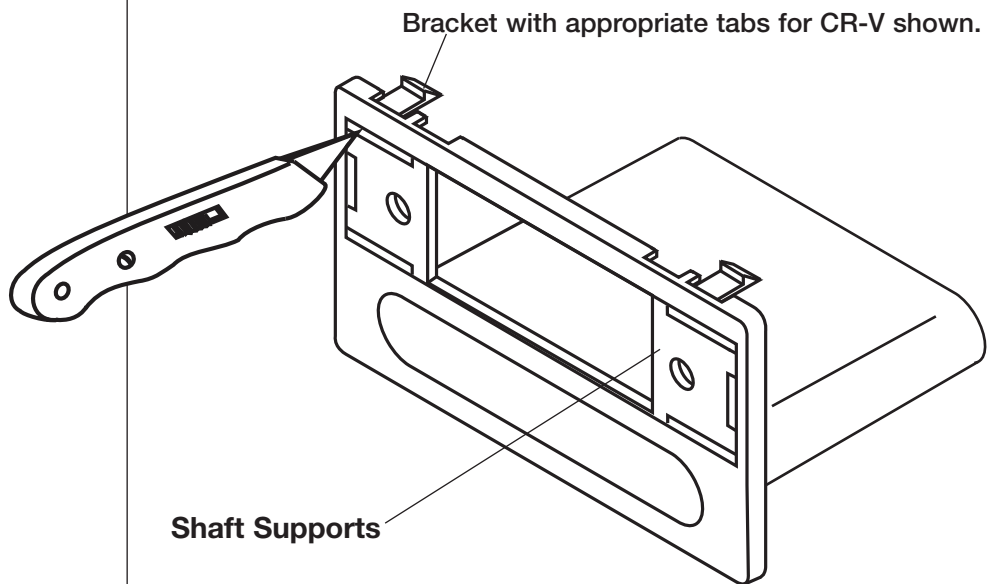



FIGURE 2



Tools Required

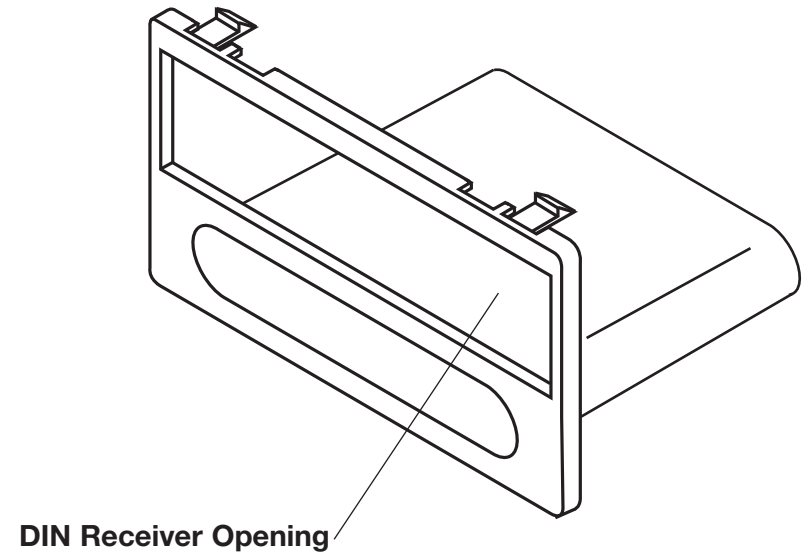

Utility Knife

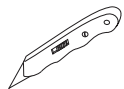

Installation Kit



120 99-7893

Honda

Shaft Assembly -- CR-V, Civic & Prelude

See the next page for shaft assembly if your vehicle is an Odyssey.

1. Choose the proper spacers (supplied with your order) to allow receiver nosepiece to extend 1/8" to 1/4" beyond face of receiver mounting bracket (see inset below).
2. Secure receiver and faceplate to mounting bracket with spacers and shaftnuts as shown. Attach control knobs.
3. Install receiver assembly following instructions in the Crutchfield MasterSheet for your particular vehicle.

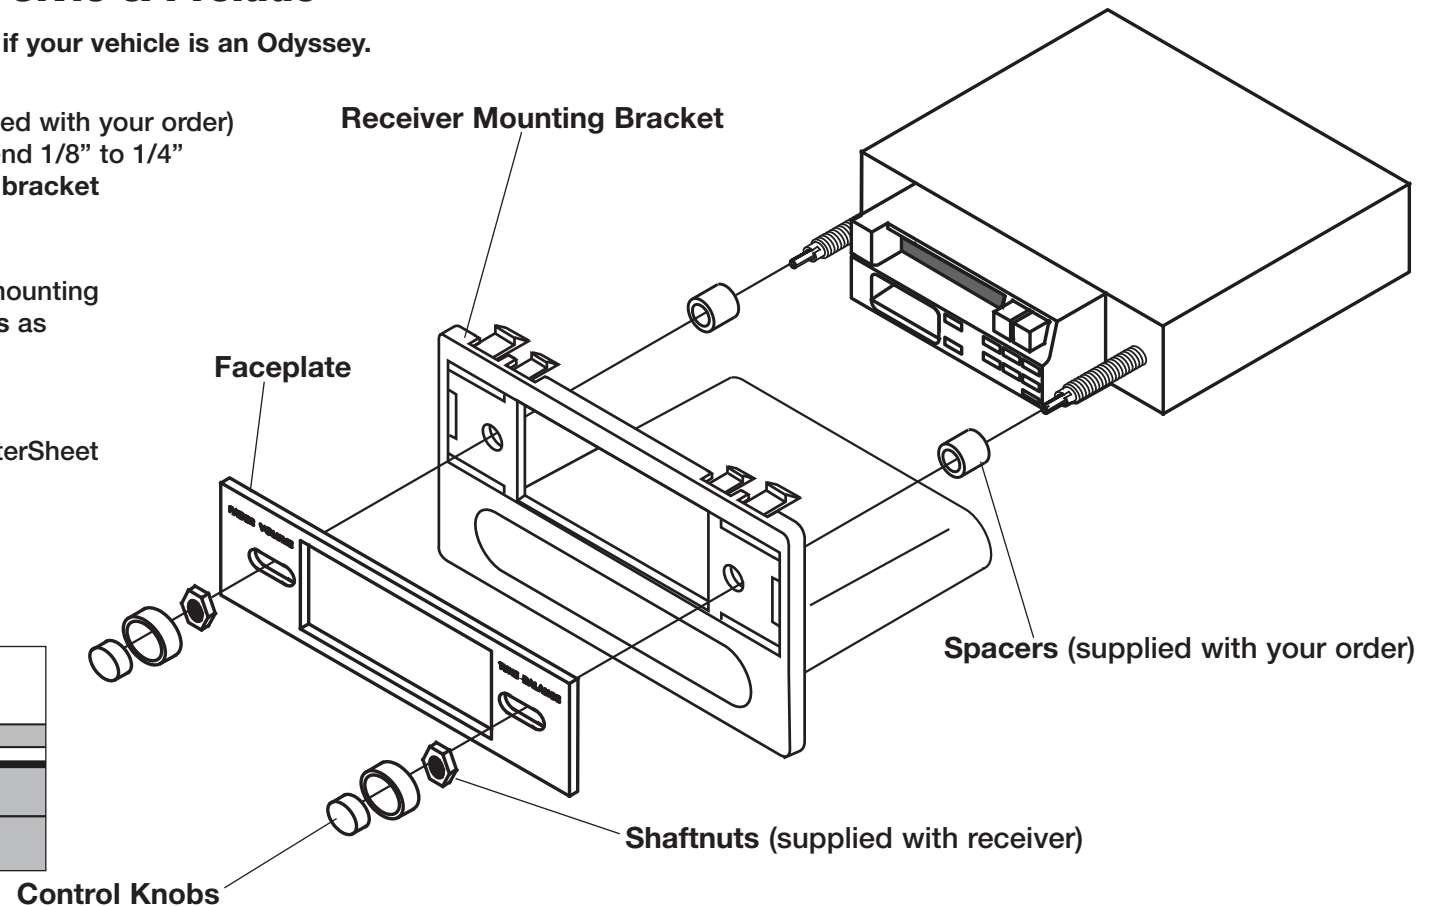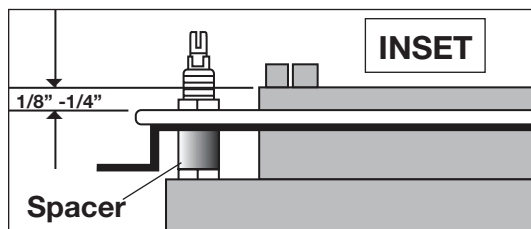

Tools Required



Deep Socket
(size depends
upon receiver)



CRUTCHFIELD
Copyright 2014 Crutchfield Corporation



Installation Kit

120 99-7893

Honda

Shaft Assembly -- Odyssey

1. Choose the proper spacers (supplied with your order) to allow receiver nosepiece to extend 1/8" to 1/4" beyond face of receiver mounting bracket (see inset below).
2. Secure receiver and faceplate to mounting bracket with spacers and shaftnuts as shown. Attach control knobs.
3. Install receiver assembly following instructions in the Crutchfield MasterSheet for your particular vehicle.

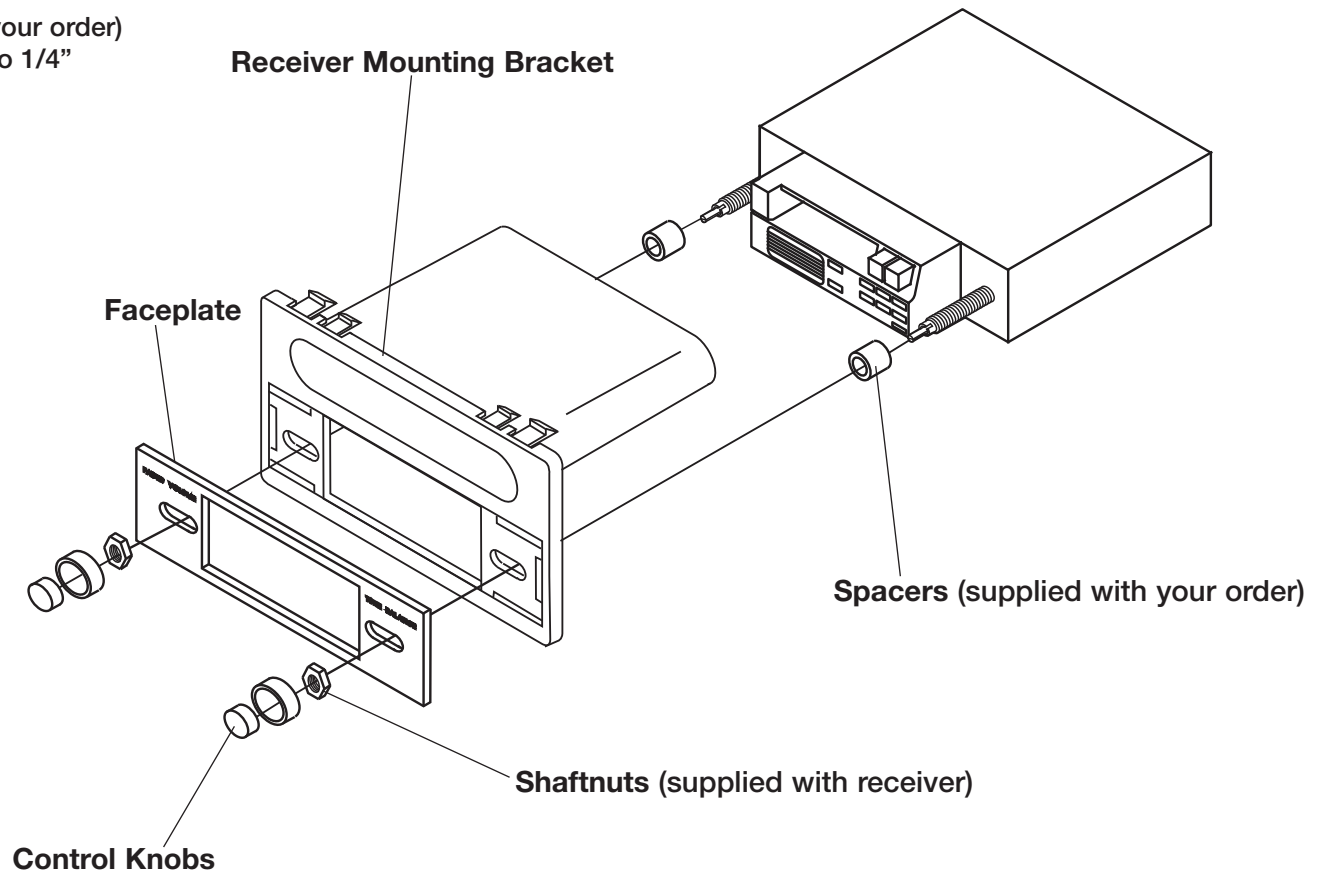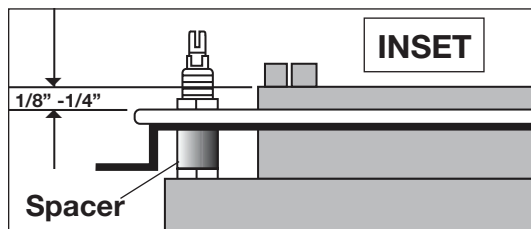

Tools Required

Deep Socket
(size depends
upon receiver)



Installation Kit

120 99-7893

Saab

DIN kit preparation -- Saab

1. Cut out shaft supports in receiver mounting bracket with a utility knife to create the DIN receiver opening. Break off all tabs on top of bracket (Figures 1 & 2).
2. The bracket must be modified by cutting off a portion of the top (Figure 2). **IMPORTANT:** Make cuts incrementally and test fit in dash to avoid cutting off too much material. When desired fit is achieved, bracket is ready for receiver installation.

FIGURE 1

Receiver Mounting Bracket


Remove all tabs on top of bracket

Shaft Supports

Tools Required



Utility Knife

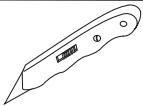

Pliers



FIGURE 2

The dotted line (indicating cutting) in this illustration is approximate. Please determine the actual cut by testing and checking the fit in the dash.

DIN Receiver Opening