

Installation Kit

IMPORTANT

Before starting, compare items on your invoice with items received. If any parts are missing, first carefully check through packaging material. If an item is missing, please call:

Crutchfield at 1-888-955-6000

120 99-7895

Honda

Revision 07/26/99

DIN Assembly

1. Remove **DIN sleeve** and **trim ring** from receiver.
2. Slide DIN sleeve into **receiver mounting bracket** and secure by bending **securing tabs** (Inset).
3. Slide receiver into DIN sleeve/mounting bracket assembly.
4. Install trim ring.
5. Install receiver assembly following instructions in the *Mastersheet* for your particular vehicle.

Receiver Mounting Bracket

DIN Sleeve

Securing Tabs


INSET

Bend tabs after sleeve is inside receiver mounting bracket.


Trim Ring

Tools Required


Flat Blade
Screwdriver



**Parts
Supplied:**

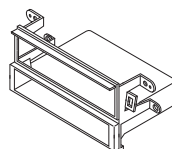

Mounting
Bracket



* 1 2 0 9 9 7 8 9 5 *

CRUTCHFIELD®

Copyright 1999 Crutchfield Corporation