



Installation instructions for part 99-8215


Toyota Avalon 2005-2010 99-8215

KIT FEATURES

- DIN radio provision

KIT COMPONENTS

- A) Radio housing • B) HVAC display harness (not shown)

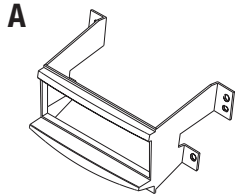

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • TYTO-01 • 70-1761

Antenna Adapter: • Not required

TOOLS REQUIRED

- Phillips screwdriver • Panel removal tool • Socket Wrench




Table of Contents

Dash Disassembly	2
Kit Assembly	
HVAC harness wiring	3
DIN radio provision	3


CAUTION! Metra recommends disconnecting the negative battery terminal before beginning any installation, unless the vehicle manufacturer recommends against so. Please check with your local Dealership for more information. All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before reconnecting the battery or cycling the ignition. Also, do not remove the factory radio with the key in the on position, or the vehicle running. It would be best to remove the key from the ignition and then wait a few seconds before removing the factory radio.

Dash Disassembly

1. Unclip and remove small trim piece from left side of panel above steering wheel. (Figure A)
2. Unclip and remove panel above steering wheel. (Figure B)

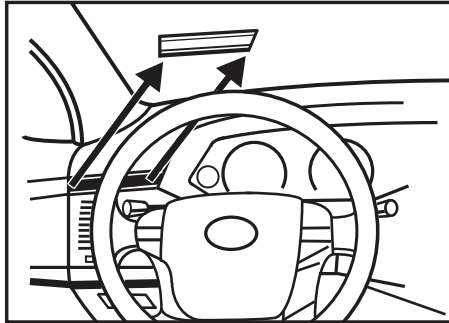


(Figure A)

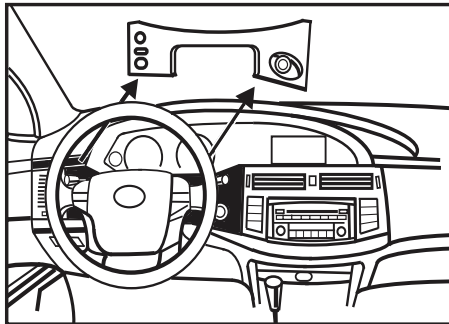


(Figure B)

3. Unclip and remove entire panel surrounding radio including A/C controls. (Figure C)
4. Remove (4) 10 MM bolts securing radio. (Figure D)

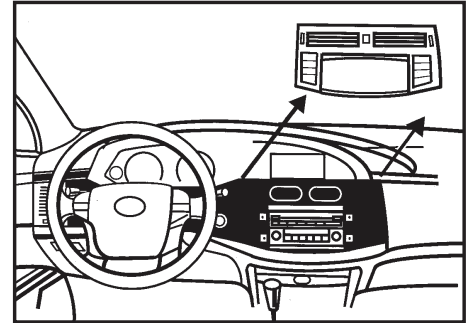

(Figure C)

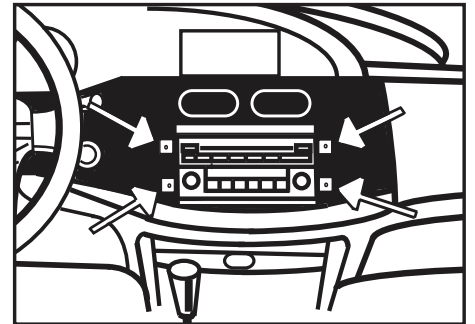

(Figure D)



99-8215


Kit Assembly

HVAC harness wiring


The included harness will retain the climate control information, is pre-wired for the AXXESS ASWC-1 (sold separately), and will retain the factory 3.5mm AUX input. Connect the Red wire to accessory power, and the Black to wire to ground when using the AXXESS ASWC-1.

DIN radio provision

1. Remove the metal “DIN” sleeve from the aftermarket radio.
2. Slide the DIN sleeve into the Radio Housing and secure by bending the metal locking tabs down. (Figure A)
3. Slide the radio back into the sleeve until it clicks in. (Figure B)
4. Locate the factory wiring harness and antenna plug in the dash and make all necessary connections to the radio. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
5. Mount the new radio assembly into the dash and reassemble the dash in reverse order of disassembly.

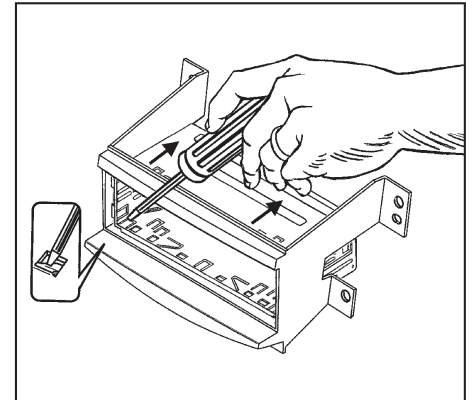

(Figure A)

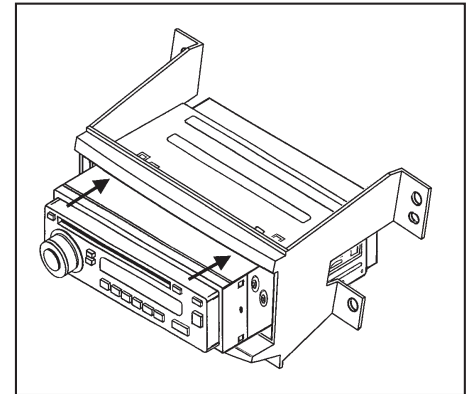

(Figure B)



Installation instructions for part 99-8215



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at **1-800-253-TECH**. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**