INSTALLATION INSTRUCTIONS FOR PART 99-8234

APPLICATIONS

Scion IQ 2012-up
99-8234

KIT FEATURES

- DIN head unit provision with pocket
- ISO DIN head unit provision with pocket

KIT COMPONENTS

• A) Radio Housing • B) Brackets • C) ISO Snap-in Brackets • D) Trim Plate

A

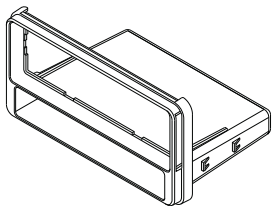

B

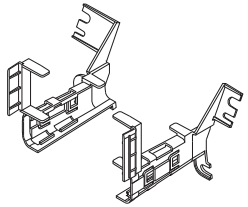

C

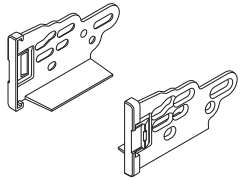

D

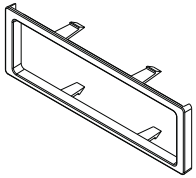

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-1761 Toyota Harness 1987-up

Antenna Adapter: • Not Required

TOOLS REQUIRED

• Panel removal tool • Phillips screwdriver • Socket Wrench

Table of Contents

Dash Disassembly

– Scion IQ 2012-up 2

Kit Assembly

– DIN head unit provision with pocket 3

– ISO DIN head unit provision with pocket 3

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in beforereconnecting the battery or cycling the ignition.

NOTE: Refer to the instructions included with the aftermarket radio.

REV. 9/24/2012 INST99-8234

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION

Dash Disassembly

1. Unclip and remove the climate control panel. (Figure A)
2. Unclip and remove the panel from around the radio. (Figure B)
3. Remove four 10 mm bolts and remove factory radio. (Figure C)

Continue to kit assembly

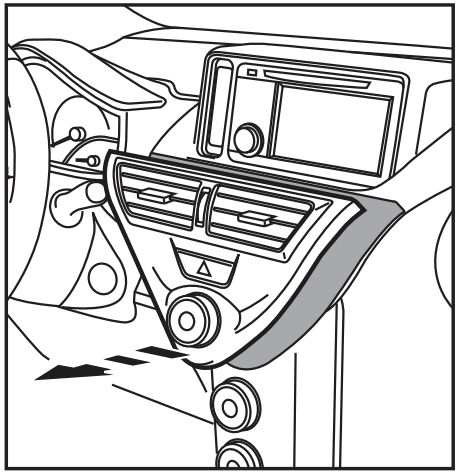

(Figure A)

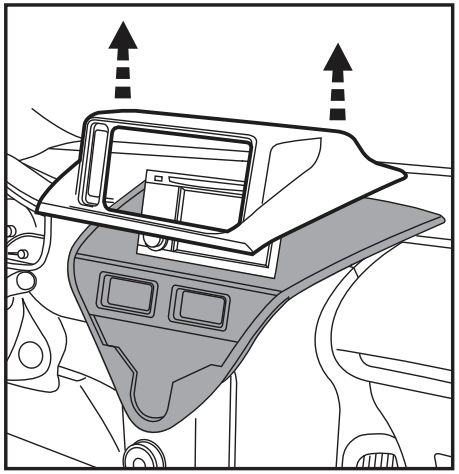

(Figure B)

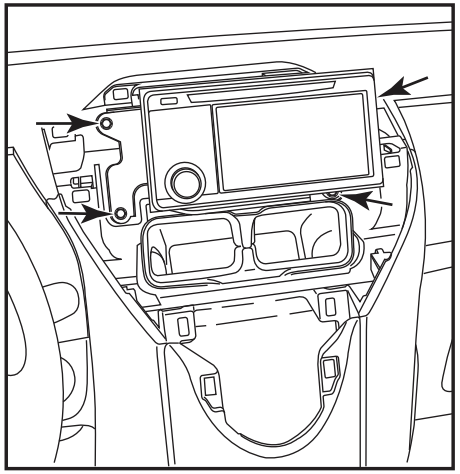

(Figure C)

Kit Assembly

DIN head unit provision with pocket

1. Slide the mounting brackets onto the sides of the radio housing until the side clips engage. ***Note: Tabs are marked Left and Right.*** (Figure A)
2. Slide the DIN cage into the radio housing and secure by bending the metal locking tabs down. (Figure B)
3. Slide the aftermarket head unit into the cage and secure. (Figure C)
4. Snap the trim plate into the radio housing. (Figure C)
5. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
6. Reassemble dash in reverse order of disassembly.

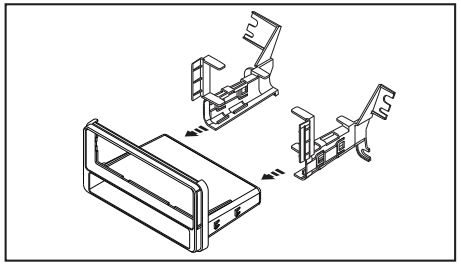

(Figure A)

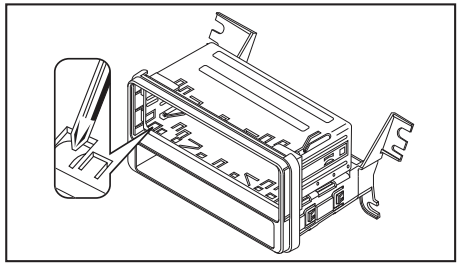

(Figure B)

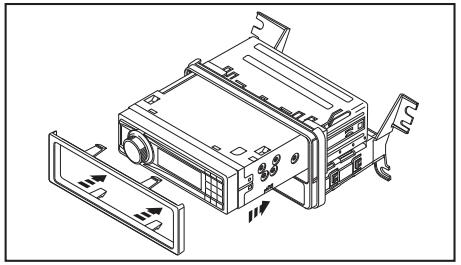

(Figure C)

ISO DIN head unit provision with pocket

1. Slide the mounting brackets onto the sides of the radio housing until the side clips engage. ***Note: Tabs are marked Left and Right.*** (Figure A)
2. Mount the ISO brackets to the head unit with the screws supplied with the unit. (Figure B)
3. Slide the head unit into the radio opening until the side clips engage. (Figure C)
4. Snap the trim plate into the radio housing. (Figure C)
5. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
6. Reassemble dash in reverse order of disassembly.

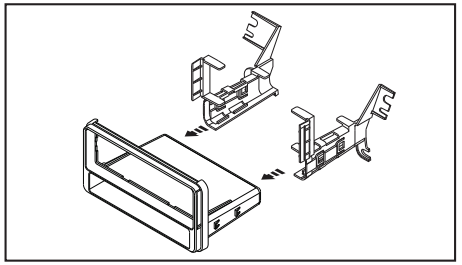

(Figure A)

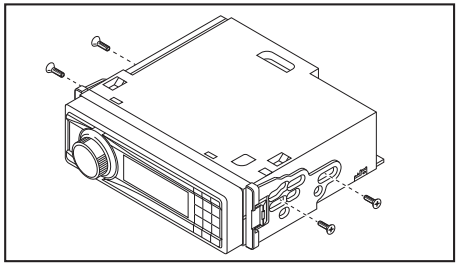

(Figure B)

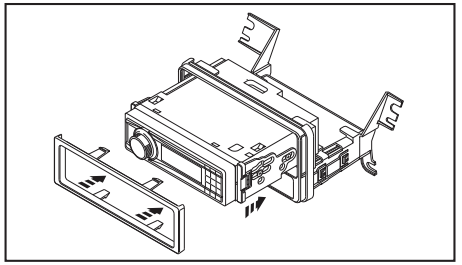

(Figure C)

INSTALLATION INSTRUCTIONS FOR PART 99-8234

REV. 9/24/2012 INST99-8234

KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.

Metra recommends MECP certified technicians

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION