



INSTALLATION INSTRUCTIONS FOR PART 99-8243B

APPLICATIONS


Toyota Prius V 2012-up 99-8243B

KIT FEATURES

- ISO DIN radio provision with pocket
- **Painted matte black**

KIT COMPONENTS

- A) Radio Housing Trim Panel • B) Brackets • C) Pocket • D) (4) #8 x 3/8" truss-head Phillips screws

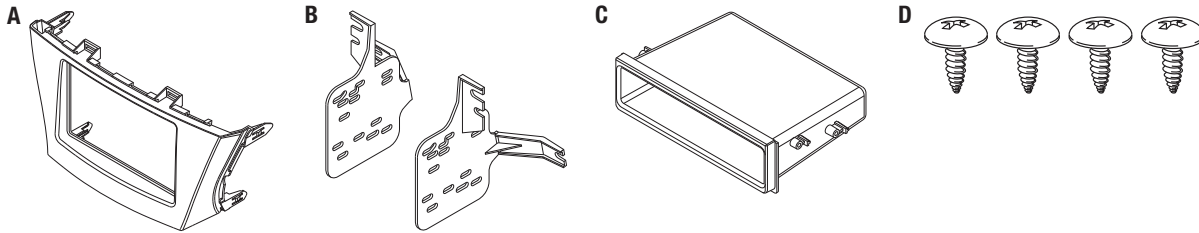

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-1761 harness or TYTO-02 Premium Sound Interface

Antenna Adapter: • 40-LX11

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver • Socket Wrench

Table of Contents

Dash Disassembly

- Toyota Prius V 2012-up 2

Kit Assembly


- ISO DIN radio provision with pocket..... 3

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.


NOTE: Refer to the instructions included with the aftermarket radio.

Dash Disassembly

1. Unsnap and remove the shifter trim panel. (Figure A)
2. Open the glove box then unsnap and remove the box and door as one unit. (Figure B)

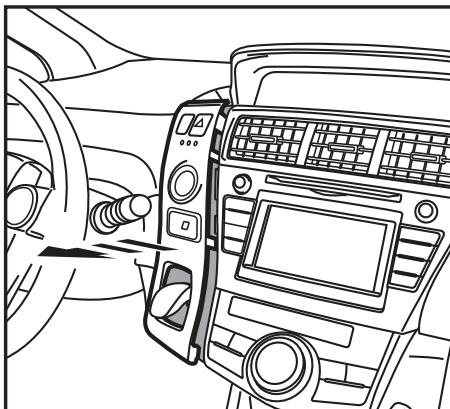


(Figure A)

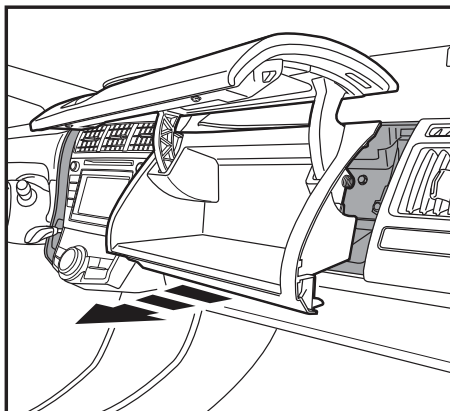


(Figure B)

3. Unsnap the vents from above the factory radio. (Figure C)
4. Remove four 10mm bolts to remove the factory radio. (Figure D)

Continue to kit assembly

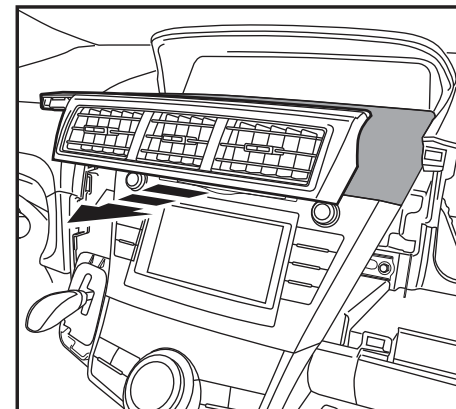

(Figure C)

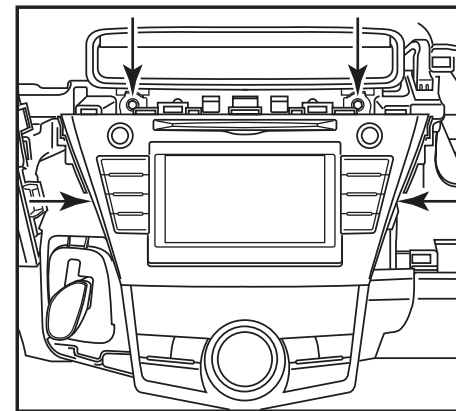


(Figure D)


Kit Assembly

ISO DIN radio provision

1. Mount the pocket to the radio brackets with the (4) #8 x 3/8" Phillips screws supplied. (Figure A)
2. Slide the radio into radio brackets and secure with screws supplied with the radio. (Figure B)
3. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
4. Mount the new radio assembly into the dash.
5. Snap the radio trim panel over the new radio and reassemble dash in reverse order of disassembly. ***(It is best to connect the factory vent assembly to the radio housing trim panel prior to installation.)***

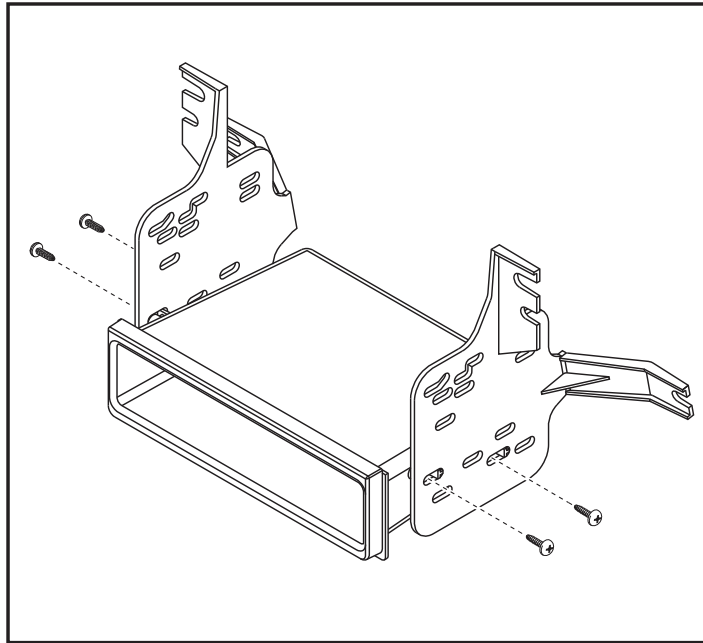

(Figure A)

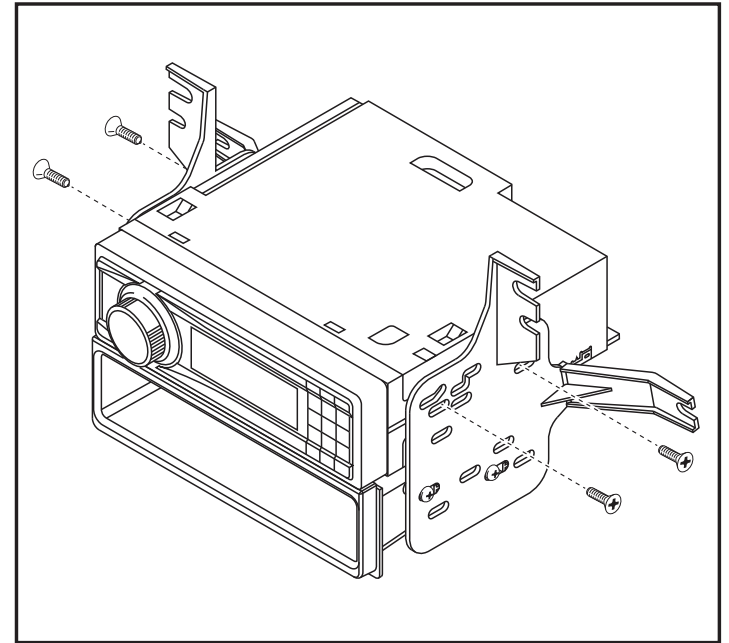

(Figure B)



INSTALLATION INSTRUCTIONS FOR PART 99-8243B



REV. 12/31/2013 INST99-8243B



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**

METRA. The World's best kits.™

1-800-221-0932

metraonline.com

© COPYRIGHT 2013 METRA ELECTRONICS CORPORATION