



INSTALLATION INSTRUCTIONS FOR PART 99-8245CHG

APPLICATIONS


Toyota Corolla 2014 - up 99-8245CHG

KIT FEATURES

- ISO DIN radio provision with pocket
- *Painted charcoal high gloss*

KIT COMPONENTS

- A) Radio housing • B) Radio brackets • C) Pocket • D) (2) Panel clip mounts
- E) (4) #8 x 3/8" Truss head Phillips screws • F) (4) #4 x 3/8" Phillips screws

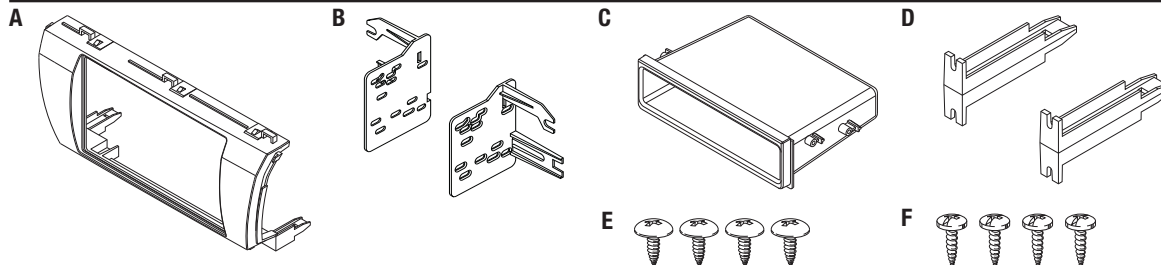

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-1761 - Toyota harness • TYT0-01 - Toyota amplified interface

Antenna Adapter: • 40-LX11 - Toyota/Lexus



Table of Contents

Dash Disassembly

– Toyota Corolla 2014-up 2

Kit Assembly

– ISO DIN radio provision with pocket..... 3

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver
- Socket wrench

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

NOTE: Refer to the instructions included with the aftermarket radio.


Dash Disassembly

1. Unclip and remove the entire panel around the radio from the instrument cluster to the passenger side of the dash including the clock and A/C vents. (Figure A)


Tip: Start on the passenger side with the glove box open.

2. Remove (4) 10 mm bolts securing the factory radio and remove it. (Figure B)
3. Remove the (4) yellow panel clips from the factory radio.

Continue to kit assembly

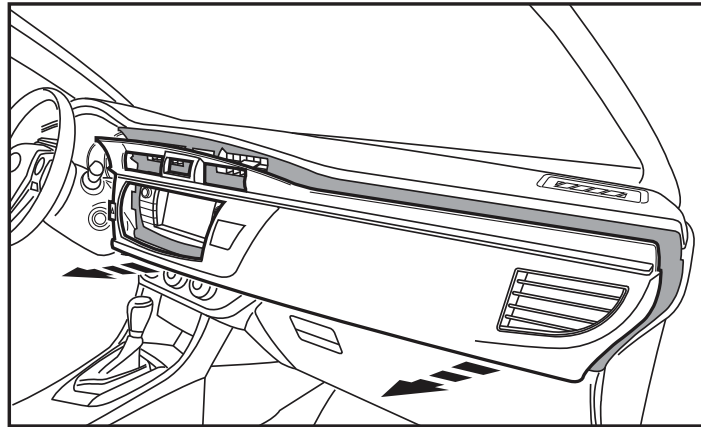

(Figure A)

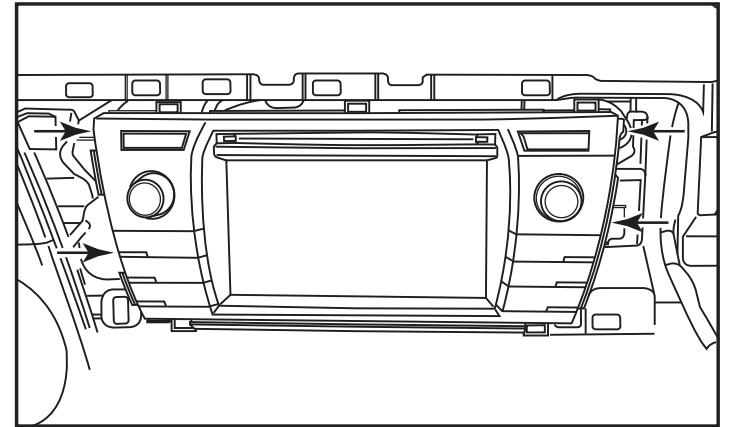

(Figure B)




99-8245CHG


Kit Assembly

ISO DIN radio provision with pocket


1. Mount the pocket to the radio brackets with the (4) #8 x 3/8" Phillips screws supplied. (Figure A)
2. Slide the radio into radio brackets and secure with screws supplied with the radio. (Figure B)
3. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
4. Mount the radio/pocket/bracket assembly into the dash with the factory hardware.
5. Attach the panel clip mounts onto the radio housing using the (4) #4 x 3/8" Phillips screws supplied. (Figure C)
6. Attach the clips previously removed from step 3 under dash disassembly, to the panel clip mounts on the radio housing.
7. Clip the trim radio housing over the radio/pocket/ bracket assembly.
8. Reassemble dash in reverse order of disassembly.

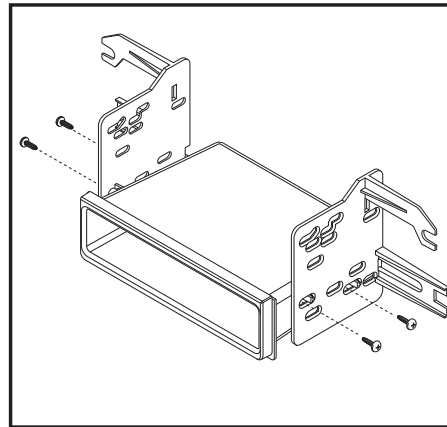

(Figure A)

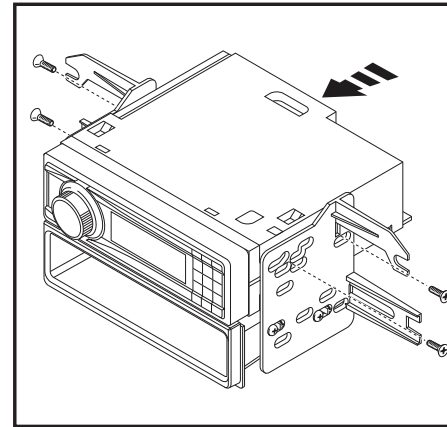

(Figure B)

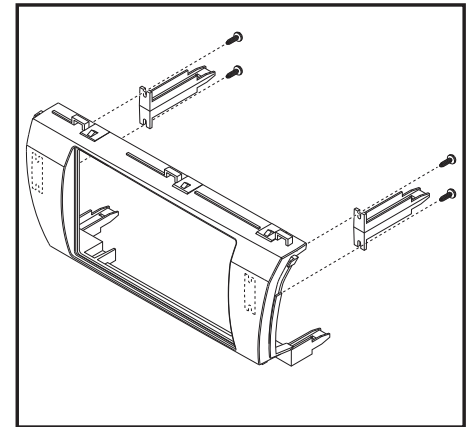

(Figure C)



INSTALLATION INSTRUCTIONS FOR PART 99-8245CHG



REV. 3/25/2015 INST99-8245CHG



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**

METRA. The World's best kits.™

1-800-221-0932

metraonline.com

© COPYRIGHT 2015 METRA ELECTRONICS CORPORATION