



INSTALLATION INSTRUCTIONS FOR PART 99-8252


Toyota Tundra 2014-up 99-8252

KIT FEATURES

- ISO DIN radio provision with pocket
- ISO DDIN radio provision
- *Painted and textured to match the factory appearance*

KIT COMPONENTS

- A) Radio housing trim panel • B) Brackets • C) Pocket • D) (2) Panel clips • E) (8) #8 x 3/8" Phillips screws

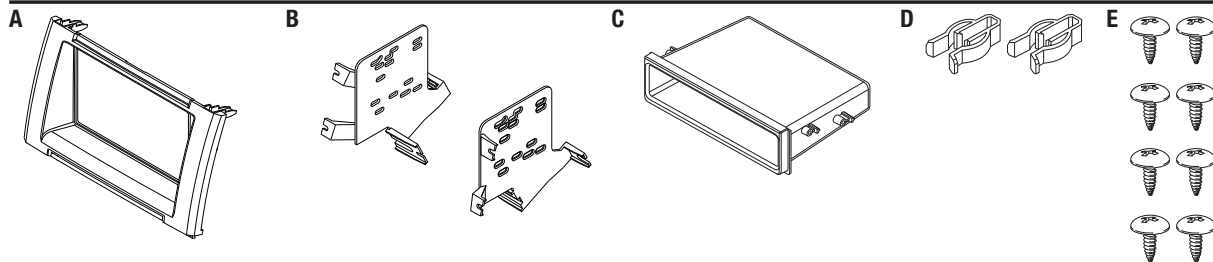

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-1761 • TYTO-02 (JBL amp)

Antenna Adapter: • 40-LX11

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver • 10mm socket wrench



Table of Contents


Dash Disassembly	2
Kit Assembly	
– ISO DIN radio provision with pocket.....	3
– ISO DDIN radio provision	3

CAUTION! All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before cycling the ignition. Also, do not remove the factory radio with the key in the on position, or while the vehicle is running.

Dash Disassembly

1. Unsnap and remove the factory climate controls. (Figure A)
2. Remove (4) 10mm bolts securing the factory radio and remove it.

Continue to kit assembly

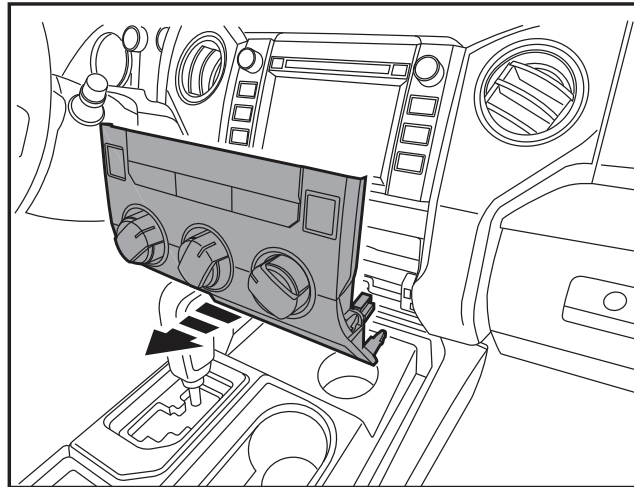

(Figure A)




99-8252


Kit Assembly

ISO DIN radio provision with pocket


1. Attach the included *panel clips* to the *radio housing trim panel*. Factory clips can also be used if desired.
2. Mount the *pocket* to the *radio brackets* with the (4) supplied #8 x 3/8" Phillips screws. (Figure A)
3. Mount the *bracket/pocket* assembly to the *housing trim panel* with the remaining (4) supplied #8 x 3/8" screws. (Figure B)
4. Slide the radio into *radio brackets* and secure with screws supplied with the radio. (Figure C)
5. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
6. Mount the new radio assembly into the dash and reassemble the dash in reverse order of disassembly.

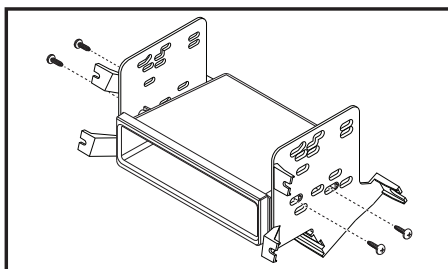

(Figure A)

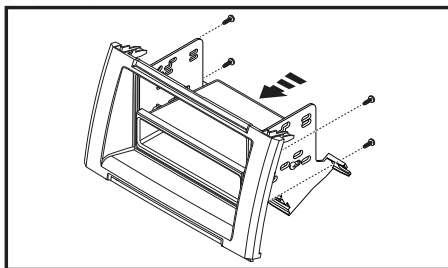


(Figure B)

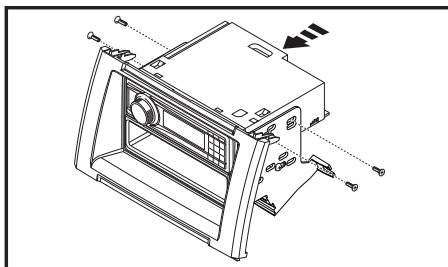


(Figure C)

ISO DDIN radio provision

1. Attach the included *panel clips* to the *radio housing trim panel*. Factory clips can also be used if desired.
2. Attach the *brackets* to the *radio housing trim panel* using (4) of the supplied #8 x 3/8" screws. (Figure A)
3. Slide the radio into the *bracket/radio housing* assembly and secure to the assembly using the screws supplied with the radio. (Figure B)
4. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS.
5. Mount the new radio assembly into the dash and reassemble the dash in reverse order of disassembly.

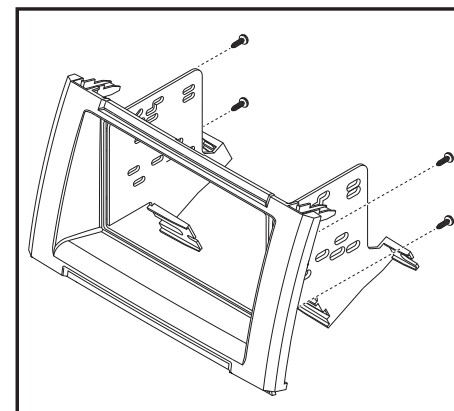

(Figure A)

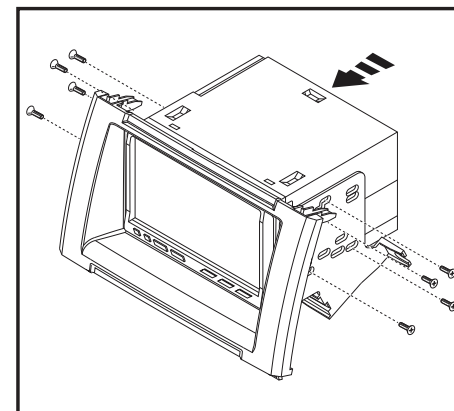

(Figure B)



INSTALLATION INSTRUCTIONS FOR PART 99-8252



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at 1-800-253-TECH. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians

REV. 6/21/2016 INST99-8252