



Installation instructions for part 99-8263HG

Toyota Avalon 2011-2012

(with factory navigation)


99-8263HG

KIT FEATURES

- ISO DIN radio provision with pocket
- ISO DDIN radio provision
- **Painted High Gloss Black**

KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (2) Panel clips • E) (4) #8 x 3/8" Phillips screws

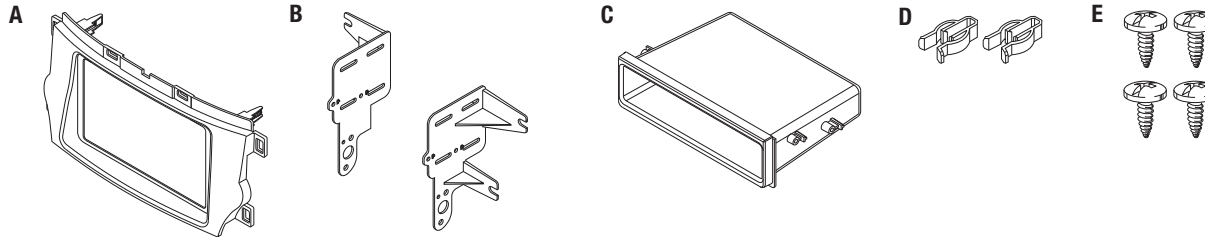

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: TYTO-01

Antenna Adapter: Not required

Steering wheel control interface: ASWC-1 (sold separately)



Table of Contents

Dash Disassembly 2

Kit Assembly

- ISO DIN radio provision with pocket..... 3
- ISO DDIN radio provision 3

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver
- 10mm socket wrench

CAUTION! All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before cycling the ignition. Also, do not remove the factory radio with the key in the on position, or while the vehicle is running.




99-8263HG


Dash Disassembly

1. Unclip and remove the radio/climate trim panel. (Figure A)
2. Remove (4) 10mm screws securing the radio/climate control assembly. (Figure B)
3. Remove (4) Phillips screws securing the climate control to the factory bracket assembly. (Figure C)


Continue to Kit Assembly

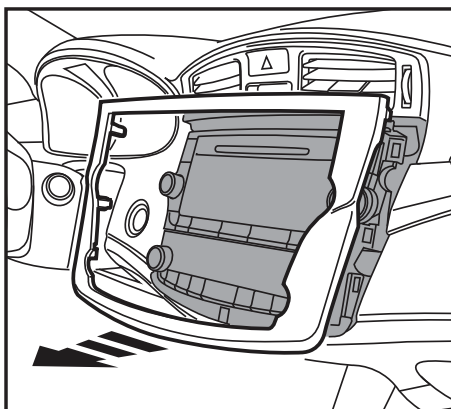

(Figure A)

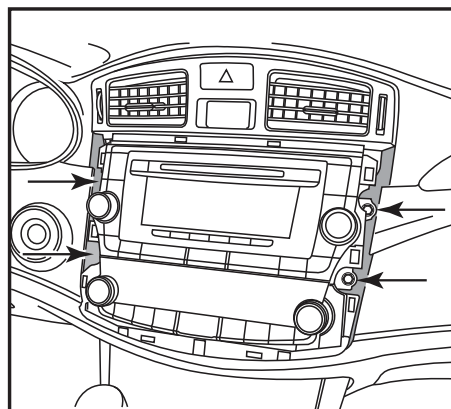

(Figure B)

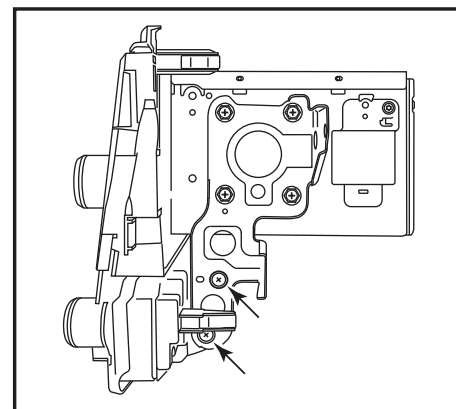


(Figure C)


Kit Assembly

ISO DIN radio provision with pocket

1. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
2. Secure the *radio brackets* to the radio using the screws supplied with the radio. (Figure A)
3. Secure the *pocket* to the radio bracket assembly using (4) #8 x 3/8" Phillips screws supplied. (Figure A)
4. Secure the climate control to the completed assembly using the factory hardware. (Figure A)
5. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio and factory components. Metra recommends using the proper mating adapter from Metra and/or Axxess. Test the radio and climate controls for proper operation.
6. Attach the (2) *panel clips* supplied onto the *radio trim panel*, snap the panel to the vehicle, and then reassemble the dash in reverse order of disassembly. (Figure B)

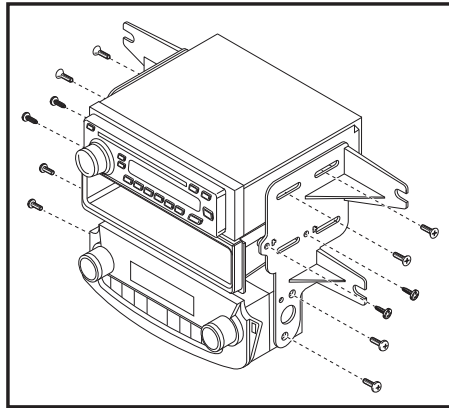


(Figure A)

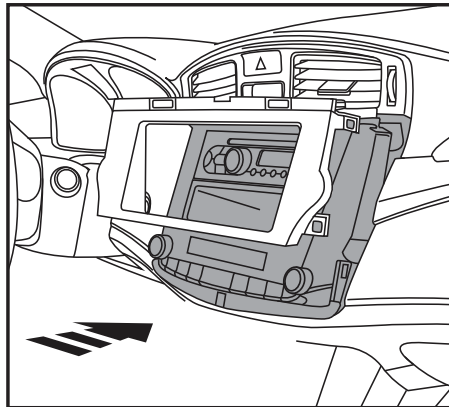


(Figure B)

ISO DDIN radio provision

1. Secure the *radio brackets* to the radio using the screws supplied with the radio. (Figure A)
2. Secure the climate control to the completed assembly using the factory hardware. (Figure A)
3. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio and factory components. Metra recommends using the proper mating adapter from Metra and/or Axxess. Test the radio and climate controls for proper operation.
4. Attach the (2) *panel clips* supplied onto the *radio trim panel*, snap the panel to the vehicle, and then reassemble the dash in reverse order of disassembly. (Figure B)

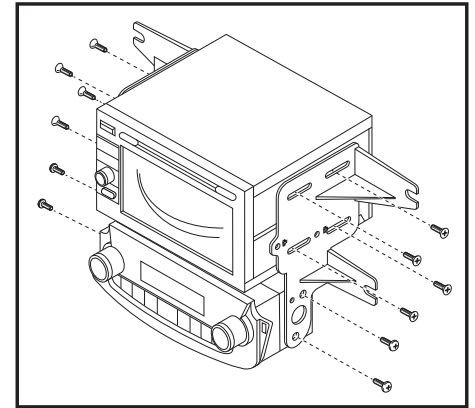

(Figure A)

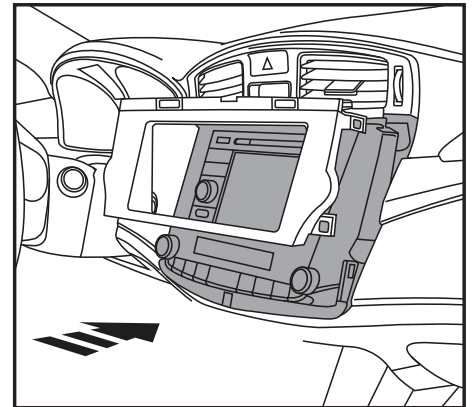

(Figure B)



Installation instructions for part 99-8263HG



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at **1-800-253-TECH**. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**