



INSTALLATION INSTRUCTIONS FOR PART 99-8716B

APPLICATIONS


Mercedes GLK 2010-up 99-8716B

KIT FEATURES

- DIN head unit provisions
- ISO DIN head unit provision
- *Painted Matte Black to match factory finish*

KIT COMPONENTS

- A) Radio housing • B) ISO Brackets • C) ISO Trim Plate

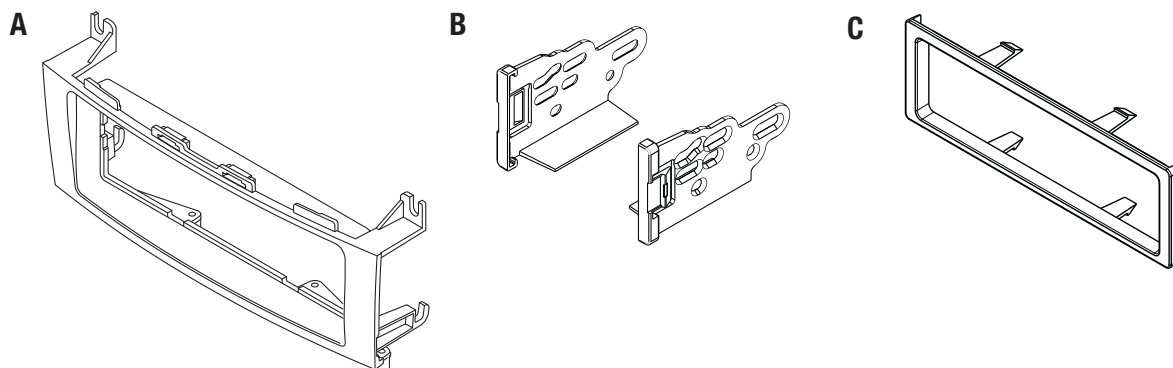

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness:


- TBA

Antenna Adapter:

- 40-EU56

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver • Socket wrench

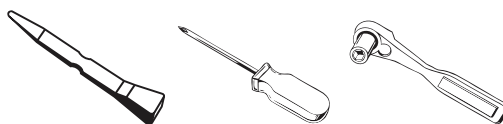

REV. 2/2/12

METRA. THE WORLD'S BEST KITS.™



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION



99-8716B

Table of Contents

Dash Disassembly

– Mercedes GLK 2010-up	3
------------------------------	---

Kit Assembly

– DIN head unit provision	4
– ISO DIN head unit provision	5

Caution: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

Note: Refer also to the instructions included with the aftermarket radio.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**




Dash Disassembly 99-8716B


Mercedes GLK 2010-up

1. Unclip and remove center A/C vent. (Figure A)
2. Unclip and remove the small trim between the A/C vent and the top of the factory radio. (Figure B)
3. Remove the (2) exposed Torx screws from the factory radio. (Figure B)
4. Slide the clips on the left and right top sides of the radio up to release the radio from the sub dash. Disconnect harnesses and antennas. (Figure C)
5. Remove (4) Torx screws securing the trim covering from the bottom of the factory radio for use in Kit Assembly. (Figure D)


Continue to kit assembly

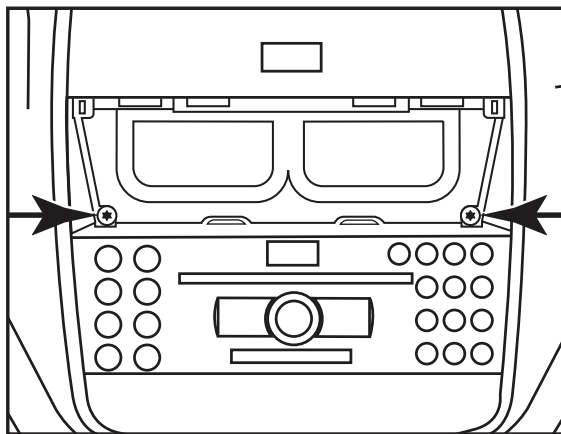


(Figure B)

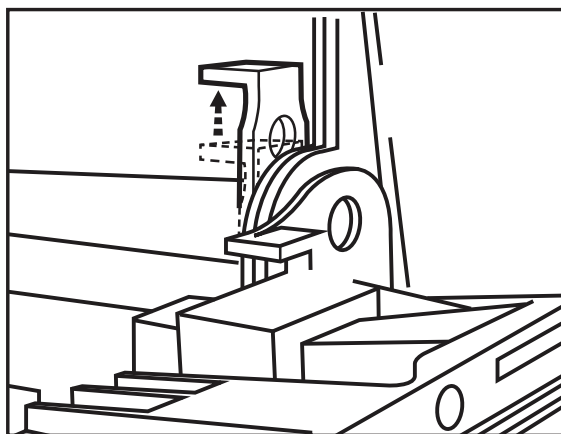

(Figure C)

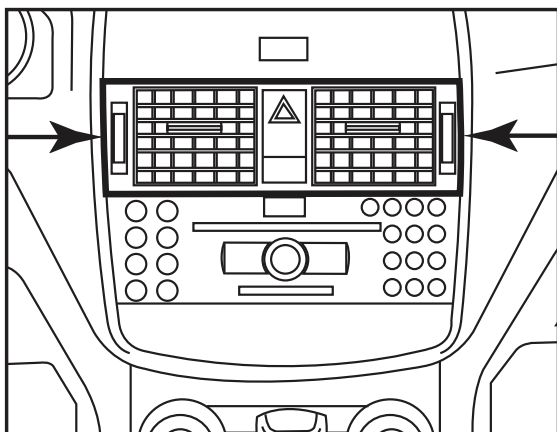

(Figure A)

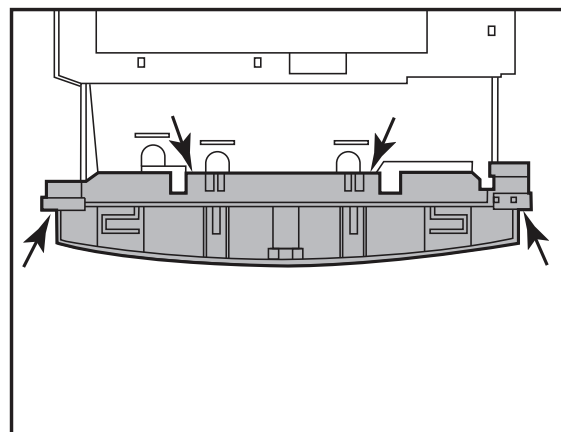


(Figure D)




Kit Assembly 99-8716B

DIN head unit provision


1. Attach the trim covering to the bottom of the 99-8716 radio housing using the factory hardware. (Figure A)
2. Slide the DIN cage into the Radio housing and secure by bending the metal locking tabs down. (Figure B)
3. Slide the aftermarket head unit into the cage and secure. (Figure C)
4. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
5. Reassemble dash in reverse order of disassembly.

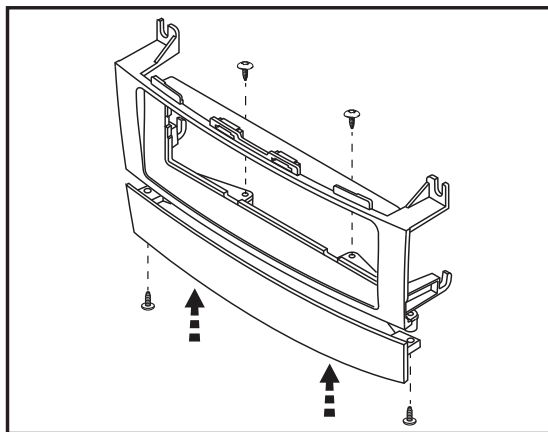

(Figure A)

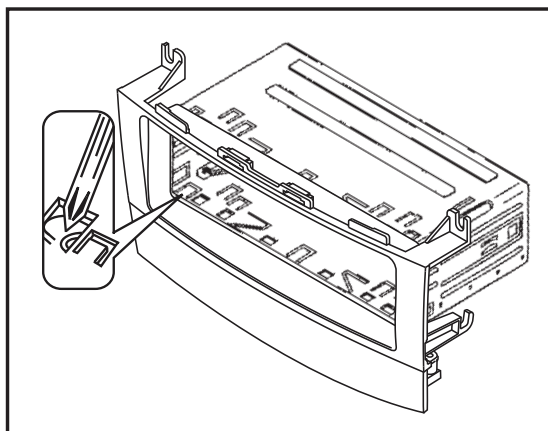

(Figure B)

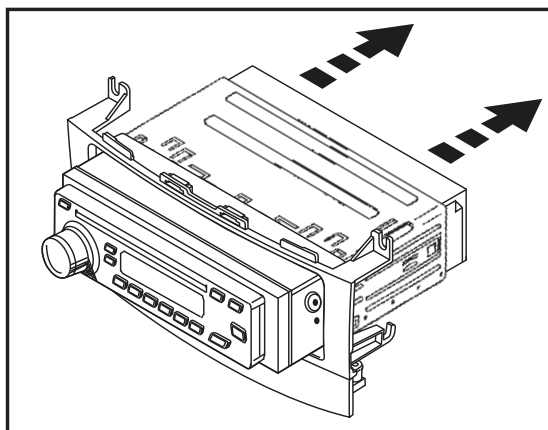


(Figure C)




Kit Assembly 99-8716B

ISO DIN head unit provision


1. Attach the trim covering to the bottom of the 99-8716 radio housing using the factory hardware. (Figure A)
2. Mount the ISO Brackets to the head unit with the screws supplied with the radio. (Figure B)
3. Slide the head unit into the radio opening until the side clips engage. (Figure C)
4. Snap the Trim plate into the radio housing. (Figure C)
5. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
6. Reassemble dash in reverse order of disassembly.

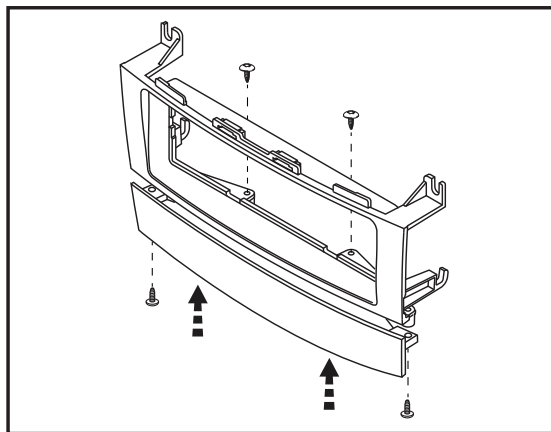

(Figure A)

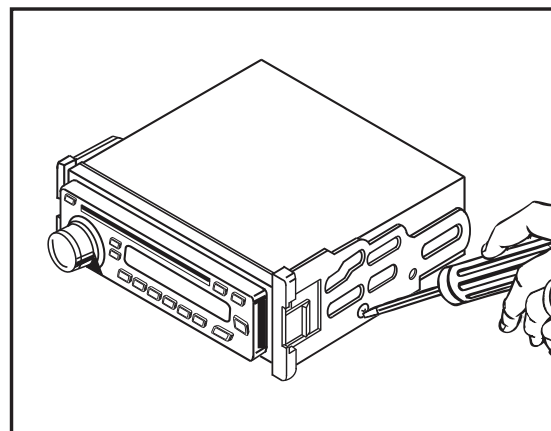

(Figure B)

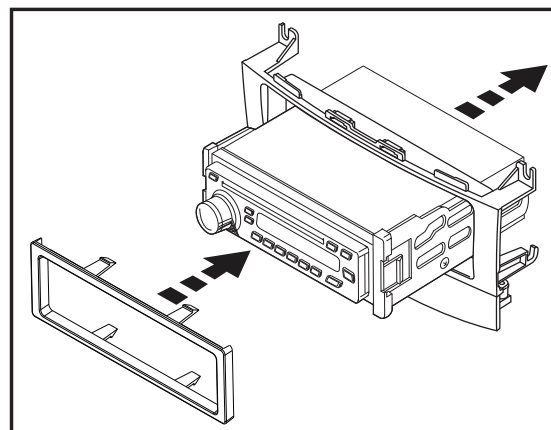

(Figure C)



INSTALLATION INSTRUCTIONS FOR PART 99-8716B

REV. 2/2/12

METRA. THE WORLD'S BEST KITS.™



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION