




Installation instructions for part 99-8259

Toyota Prius C 2015-up 99-8259

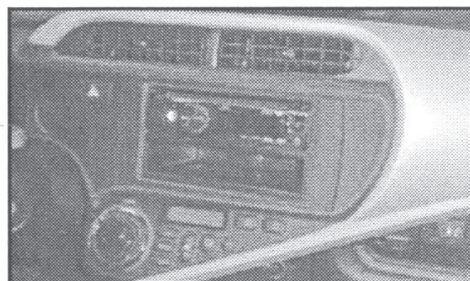


KIT FEATURES

- ISO DIN radio provision with pocket
- **99-8259B** - Painted Matte Black
- **99-8259HG** - Painted Gloss Black

KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (4) #6 x 3/8" Phillips pan-head screws
- E) (2) #8 x 3/8" Phillips truss-head screws

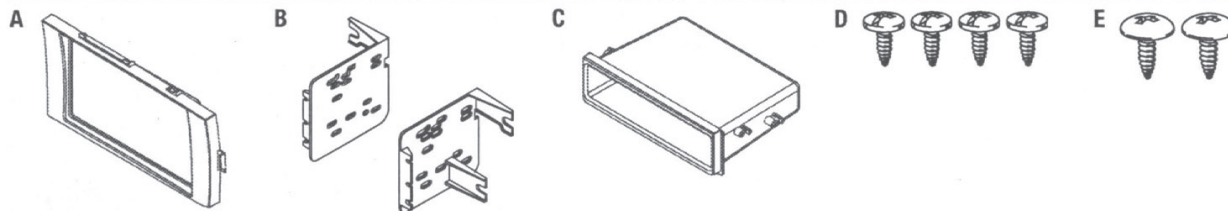

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-1761

Antenna Adapter: • 40-LX11

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver • 8mm socket

Table of Contents

Dash Disassembly	2
Kit Assembly	
– ISO DIN radio provision with pocket.....	3

CAUTION! All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before cycling the ignition. Also, do not remove the factory radio with the key in the on position, or while the vehicle is running.

METRA. The World's best kits.®


metraonline.com

© COPYRIGHT 2016 METRA ELECTRONICS CORPORATION


Dash Disassembly

1. Unclip and remove the trim panel from around the radio including the hazard switch. (Figure A)
2. Remove (4) 8mm bolts securing the factory radio, then unplug and remove the radio. (Figure B)

Continue to kit assembly

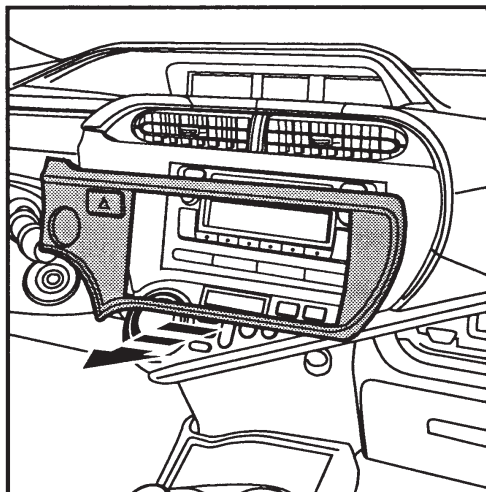

(Figure A)

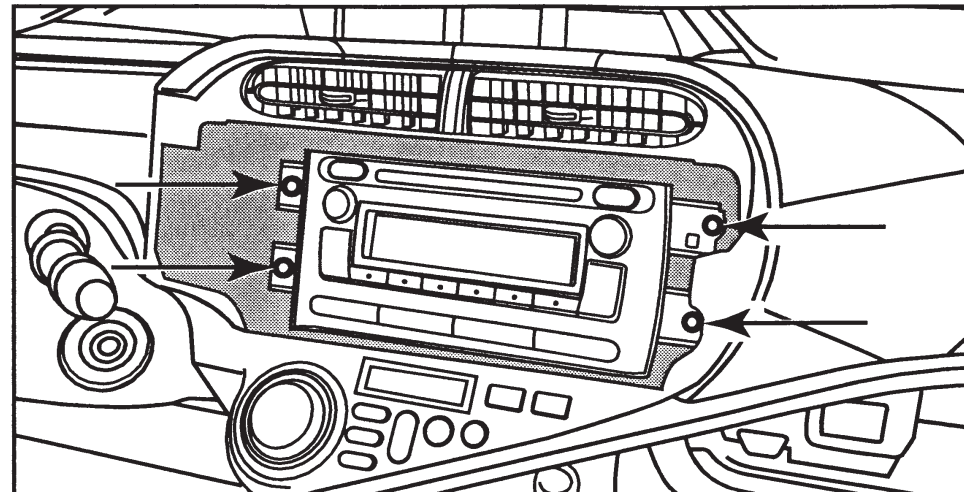


(Figure B)


Kit Assembly

ISO DIN radio provision with pocket

1. Secure the *radio brackets* to the *radio trim panel* using (4) #6 x 3/8" Phillips pan-head screws supplied. (Figure A)
2. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
3. Secure the radio to the radio-bracket/trim assembly using screws supplied with the radio. (Figure B)
4. Secure the pocket to the radio-bracket/trim assembly using (2) #8 x 3/8" Phillips truss-head screws supplied. (Figure B)
5. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Test the radio for proper operation.
6. Reassemble the dash in reverse order of disassembly.

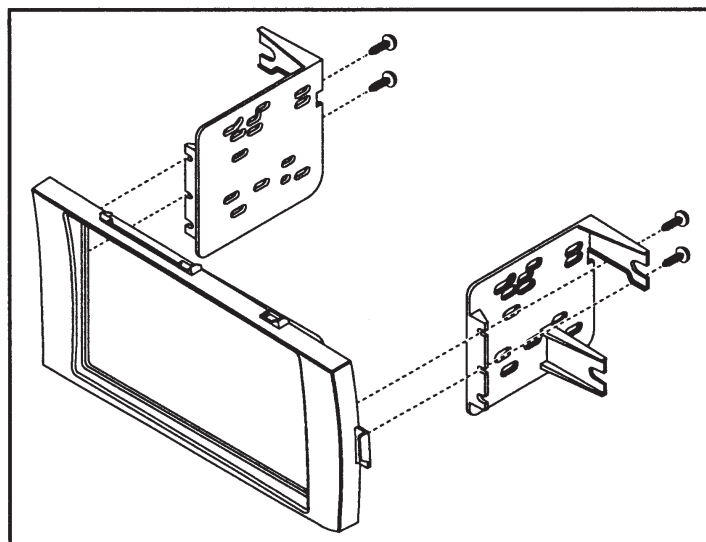

(Figure A)

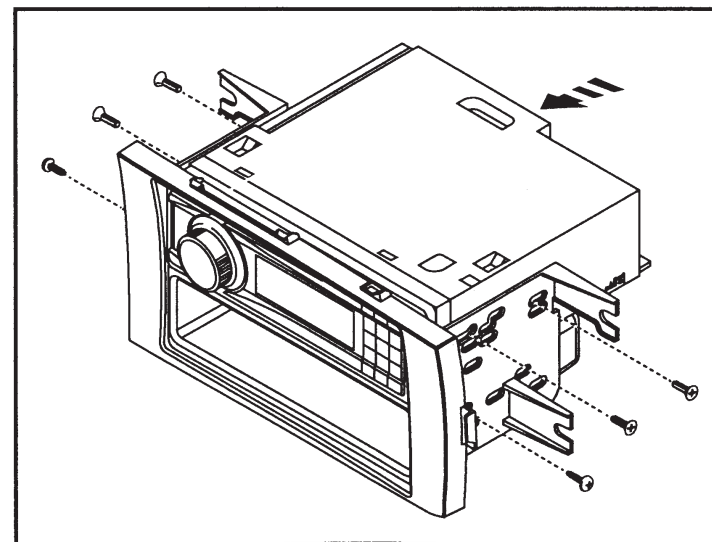

(Figure B)




Installation Instructions for part 99-8259



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at 1-800-253-TECH. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.

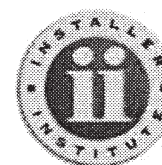

KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**