



REAR HUMP 6.5" SPEAKER-PODS

INSTALLATION

PN: 250-RZ6-B65

Fits: 2025-Up Polaris® RZR Pro Series 2 or 4-seater



RZR PRO



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

WARRANTY DISCLAIMER

SSV Works offers a warranty on all products manufactured by SSV Works, covering defects in material or workmanship. For Kicker products included with SSV Works systems, SSV Works handles all warranty claims directly, eliminating the need to contact Kicker separately. Warranty coverage is as follows:

- Enclosures/Panels (SSV Works): Limited Lifetime Warranty
- SSV Works Speakers and Subwoofers: Limited Lifetime Warranty
- Kicker Speakers: Limited 3-Year Warranty
- Kicker Subwoofers: Limited 1-Year Warranty
- SSV Works Amplifiers: Limited 2-Year Warranty
- Kicker Amplifiers: Limited 2-Year Warranty
- SWITCH Works Products: Limited 3-Year Warranty

This warranty does not cover damage caused by misuse, improper installation, or unauthorized modifications. For warranty claims, please contact SSV Works directly for assistance.



REAR HUMP 6.5" SPEAKER-PODS

CONTENTS

PARTS LIST	1
• Included Parts	1
• Tools Needed	1
DISASSEMBLY	2
INSTALLATION	2
REASSEMBLY	2



RZR PRO

REAR HUMP 6.5" SPEAKER-PODS

PARTS LIST



(2) Speaker Pods

If ordered with speakers, they will come preloaded and connected internally in the pod.



(2) B-H3695

Factory Wire Harness Adapter



(2) B-MBP3730

Mounting Brackets



(4) B-HPM616HH-4

M6 x 16 Flanged Bolts with Washers



(2) B-HP3763

Plastic T-Handle M6 x 1 Screws


TOOLS NEEDED

- T30 Torx driver
- 8mm Socket




REAR HUMP 6.5" SPEAKER-PODS

DISASSEMBLY: STEPS 1-5

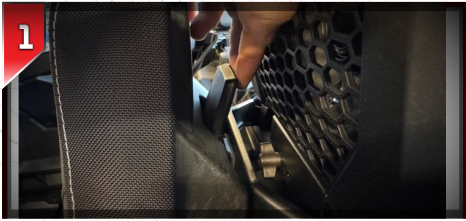


Starting on either the driver or passenger side, remove the rear seats by pulling the backrest release lever forward, then lifting the seat up and out of the vehicle.

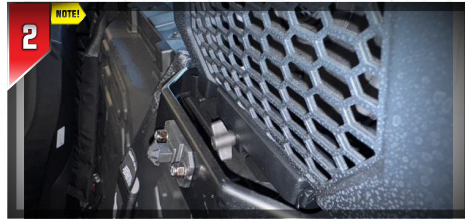

If equipped with factory speaker pods, remove the front mounting bolt by twisting it counterclockwise by hand.

NOTE! If your vehicle does not have factory speaker pods, skip steps 2-4.

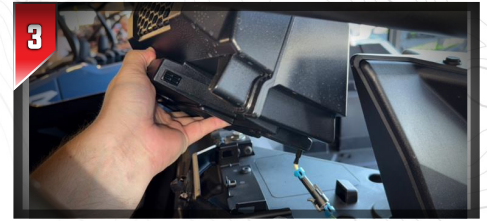


Disconnect the 2-pin connector from the factory speaker pod.

INSTALL: STEPS 6-10



Using a T30 Torx bit, remove the two bolts securing the factory speaker pod bracket.

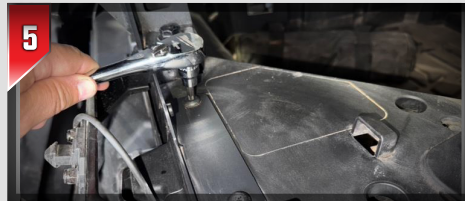

Using the original T30 bolts, install the (B-) mounting bracket in place of the factory bracket.

On the **driver's side**, the off-center tab at the front of the bracket should face **toward the passenger side**. On the **passenger side**, the tab should face **toward the driver's side**.



Using an 8mm socket, attach the (B-MBP3730) plate to the front of either speaker pod.

For the **passenger-side pod**, make sure the bracket points to the **left side** of the pod, as shown in the image.



Repeat Step 6 to assemble the driver-side pod.

For the **driver-side pod**, ensure the bracket points to the **left side** of the pod, as shown in the image.



If you're only upgrading the factory pods, connect the included (B-H3695) 2-pin harness to the factory harness you previously disconnected. Then, plug the other end of the (B-H3695) harness into the SSV speaker pod harness. Tuck any excess slack down into the opening.



Position the speaker pod by first sliding the rear bottom mounting nipples into their corresponding channels.

REASSEMBLY: STEP 11



With the (B-HP3736) T-handle bolt, secure the front of the pod. Repeat these steps on the other side of the vehicle.



Once installation is complete, reinstall the seat by setting it back into position and securing the latch.



RZR PRO

REAR HUMP 6.5" SPEAKER-PODS

INSTALLATION



818-991-1778

SUPPORT@SSVWORKS.COM

SSV WORKS CORPORATE

4610 Calle Quetzal, Camarillo, CA 93012

SSV WORKS (LOCATION #2)

1212 E Venture Dr. #100, St. George, UT 84790