



## Toyota Corolla 2020-Up, Corolla Hatchback 2019-Up

Visit [MetraOnline.com](https://www.MetraOnline.com) for more detailed information about the product and up-to-date vehicle specific applications


### KIT FEATURES

- ISO DIN radio provision
- ISO DDIN radio provision †
- Pioneer modular DDIN radio provision †
- Painted high gloss black to match the factory finish

† This kit can only be used with an ISO DDIN radio with an "L" shaped chassis design, with the radio chassis at the bottom of the screen. As of this writing, only the Alpine INE-W967HD (discontinued, replaced by INE-W977HD), iLX-107, and iLX-207 have this design. Also, The Pioneer modular radios, DMH-CZ550NEX and DMH-CZ500NEX, can be used with the adapter brackets provided.

### KIT COMPONENTS

- A) ISO DIN radio trim panel • B) ISO DDIN radio trim panel • C) Trim panel housing • D) Trim panel housing clip brackets • E) Radio brackets
- F) Pioneer adapter brackets • G) Panel clips (qty. 2) • H) Phillips screws (qty. 8)

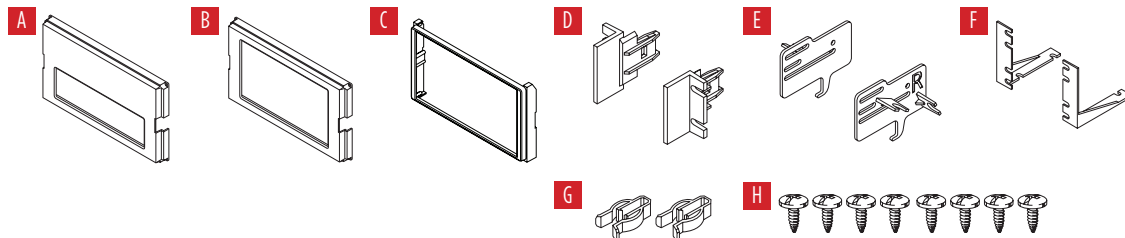

### TABLE OF CONTENTS

|                                             |   |
|---------------------------------------------|---|
| Dash Disassembly .....                      | 2 |
| Kit Assembly .....                          |   |
| –ISO DIN radio provision .....              | 3 |
| –ISO DDIN radio provision.....              | 4 |
| –Pioneer modular DDIN radio provision ..... | 5 |

### WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: 70-1765

Antenna Adapter: 40-LX11

Steering wheel control interface: ASWC-1

12v-to-6v camera step-down: AX-CAM6V


### TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver
- 10mm socket wrench


**Attention!** Let the vehicle sit with the key out of the ignition for a few minutes before removing the factory radio. When testing the aftermarket equipment, ensure that all factory equipment is connected before cycling the key to ignition.

## DASH DISASSEMBLY

1. Unclip and remove the radio trim panel. (Figure A)
2. Unclip, unplug, and remove the climate control panel. (Figure B)
3. Unclip, unplug, and remove the center a/c vent and hazard switch assembly. (Figure C)

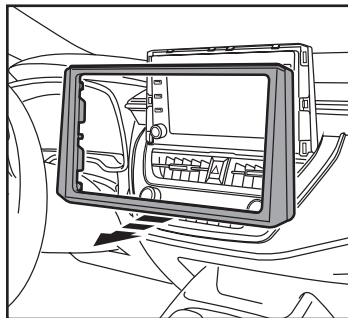


(Figure A)

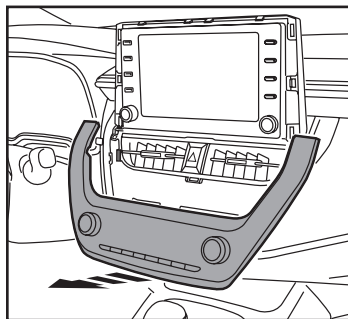


(Figure B)

4. Remove (4) 10mm screws securing the bottom of the radio. Two screws will be clearly visible, but two will be hidden, facing upward. Unclip and slide the radio out, then unplug and remove. (Figure D)

*Continue to Kit Assembly*

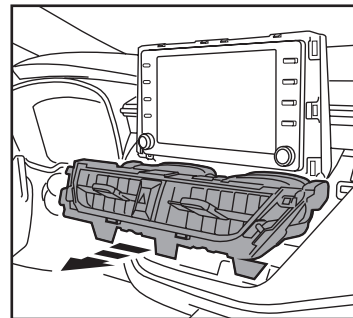

(Figure C)

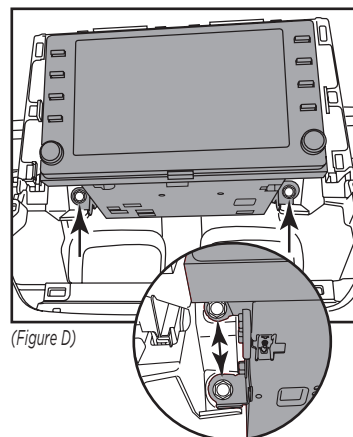


(Figure D)


## KIT ASSEMBLY

### ISO DIN radio provision

1. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
2. Secure the **radio brackets** to the radio using screws supplied with the radio. Note the location of the bracket on the radio and the screw slots to be used. (Figures A,B)
3. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or Axxess. Test the radio for proper operation.
4. Slide the radio assembly into the dash, then secure using the factory screws.

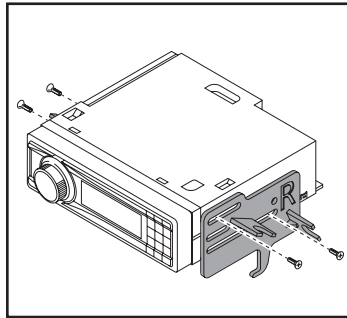


(Figure A)

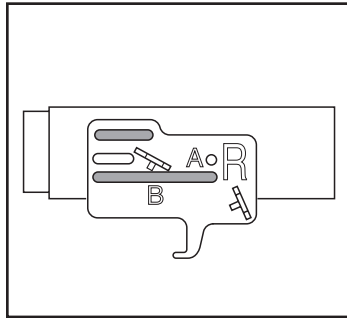


(Figure B)

5. Attach the **ISO DIN radio trim panel** to the **trim panel housing**, then secure using (4) Phillips screws provided (Figure C)
6. Secure the **trim panel housing clip brackets** to the trim panel/housing assembly using (4) Phillips screws provided. (Figure D)
7. Attach (2) **panel clips** provided onto the trim panel/housing assembly.
8. Clip the trim panel/housing assembly to the dash.
9. Reassemble the dash in reverse order of disassembly to complete the installation.

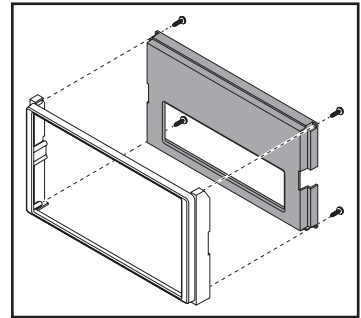

(Figure C)

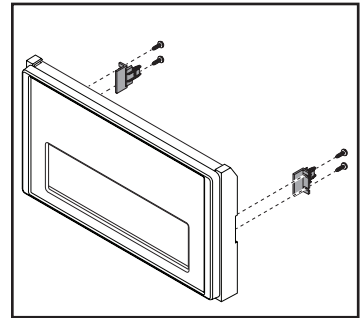


(Figure D)


## KIT ASSEMBLY

### ISO DDIN radio provision

1. Secure the **radio brackets** to the radio using screws supplied with the radio. Note the location of the bracket on the radio and the screw slots to be used. (Figures A,B)
2. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or Axxess. Test the radio for proper operation.
3. Slide the radio assembly into the dash, then secure using the factory screws.

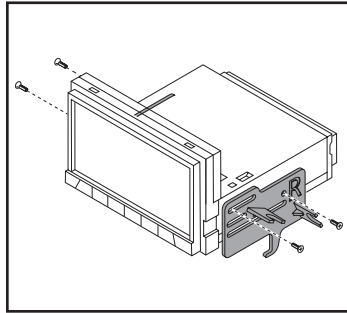


(Figure A)

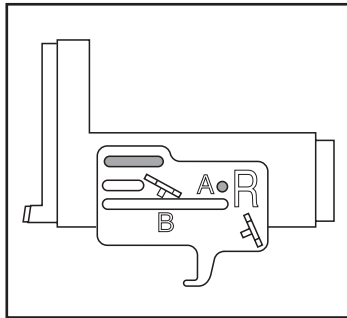


(Figure B)

4. Attach the **ISO DDIN radio trim panel** to the **trim panel housing**, then secure using (4) Phillips screws provided (Figure C)
5. Secure the **trim panel housing clip brackets** to the trim panel/housing assembly using (4) Phillips screws provided. (Figure D)
6. Attach (2) **panel clips** provided onto the trim panel/housing assembly.
7. Clip the trim panel/housing assembly to the dash.
8. Reassemble the dash in reverse order of disassembly to complete the installation.

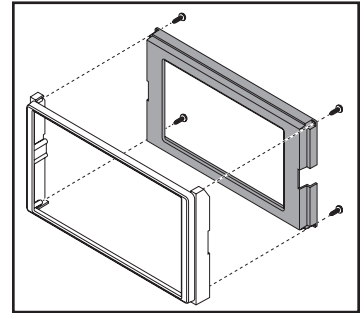

(Figure B)

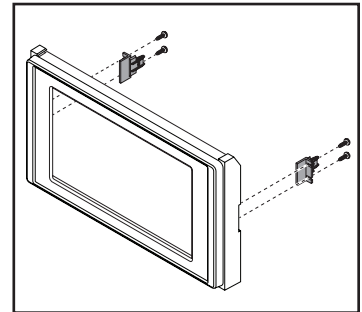

(Figure C)

## KIT ASSEMBLY

### Pioneer Modular DDIN radio provision


**Note:** For steps 1 and 2, reference the installation manual provided with the radio for which hardware to use. The display screen and radio chassis use two different types of screws.

1. Secure the **Pioneer adapter brackets** to the radio chassis using (4) screws supplied with the radio. (Figure A)
2. Secure the radio display to the **Pioneer adapter brackets** using (4) screws supplied with the radio. (Figure B)


**Note:** Use the screw slots in the adapter bracket indicated in the inset.

3. Connect the radio display to the radio chassis.


*Continued on the next page*

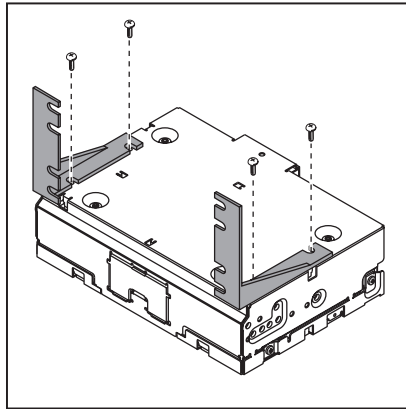


(Figure A)

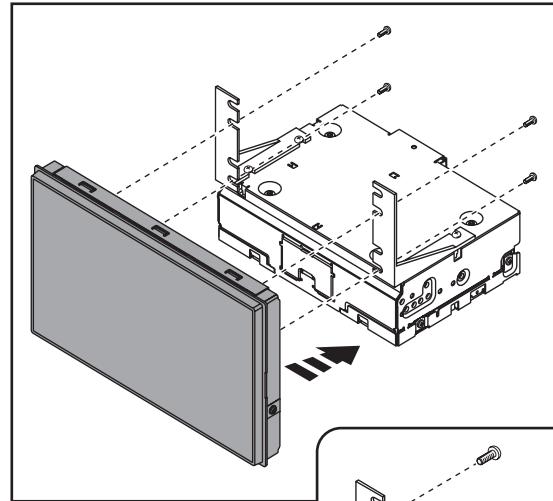


(Figure B)

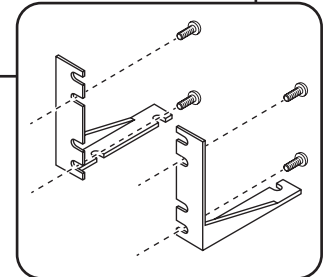

4. Secure the **radio brackets** to the radio chassis using screws supplied with the radio. Note the location of the bracket on the radio and the screw slots to be used. (Figures C,D)
5. Locate the factory wiring harness and antenna connector in the dash and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or Axxess. Test the radio for proper operation.
6. Slide the radio assembly into the dash, then secure using the factory screws.

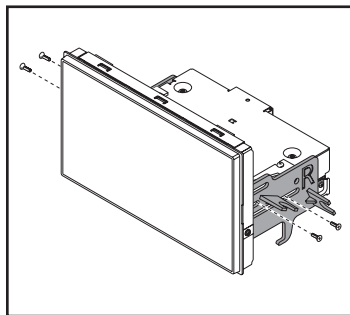


(Figure C)

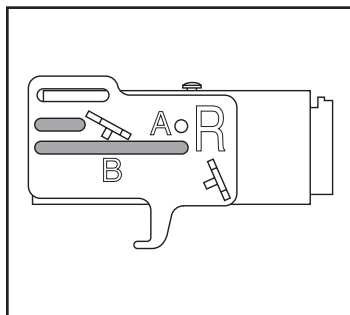


(Figure D)

7. Attach the **ISO DDIN radio trim panel** to the **trim panel housing**, then secure using (4) Phillips screws provided (Figure E)
8. Secure the **trim panel housing clip brackets** to the **trim panel housing** using (4) Phillips screws provided. (Figure F)
9. Attach (2) **panel clips** provided onto the trim panel/housing assembly.
10. Clip the trim panel/housing assembly to the dash.
11. Reassemble the dash in reverse order of disassembly to complete the installation.

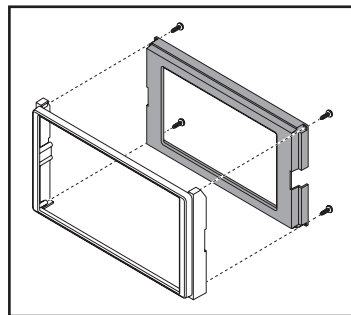

(Figure E)

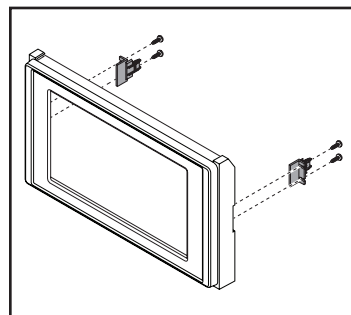

(Figure F)



## 99-8270HG

INSTALLATION INSTRUCTIONS



If you are having difficulties with the installation of this product, contact our Tech Support line either by phone at **386-257-1186 ext. 8300**, or email at **techsupport@metra-autosound.com**. Before doing so, look over the instruction booklet a second time and ensure that the installation was performed exactly as the instruction booklet is stated. Have the vehicle apart and ready to perform troubleshooting steps before contacting Metra/Axxess Tech Support.



### **KNOWLEDGE IS POWER**

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto [www.installerinstitute.com](http://www.installerinstitute.com) or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP  
certified technicians**