



Honda Accord 2008-2012*

Honda Crosstour 2012-2015*

*Designed for factory single zone climate controls only

NOTE: Factory NAV screen not retained

Visit MetraOnline.com for more detailed information about the product and up-to-date vehicle specific applications

KIT FEATURES

- DIN Radio provision with pocket
- Double DIN Radio provision
- ISO DIN radio provision with pocket
- ISO Mount radio provision with pocket
- Stacked ISO Mount Units Provision
- Painted to match factory dash 99-7874 = Charcoal, 99-7874T = Taupe

KIT COMPONENTS

A) Radio Housing • B) ISO Brackets • C) ISO Trim Plate • D) Double DIN Brackets • E) Double DIN Trim Plate • F) Pocket

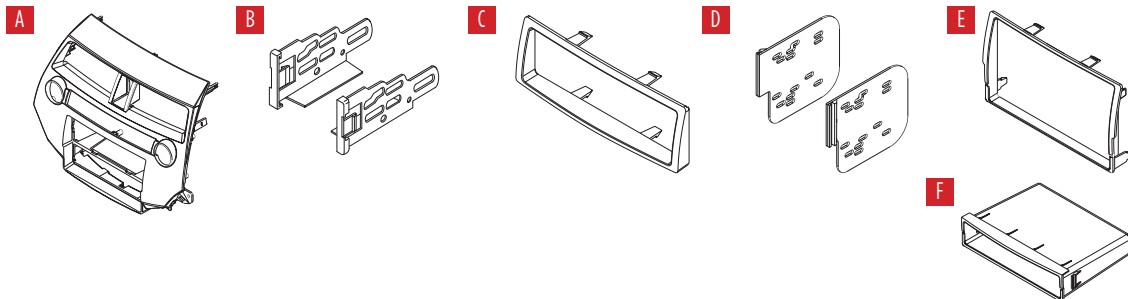


TABLE OF CONTENTS

Dash Disassembly	2-3
Kit Preparation	4
Kit Assembly	
– DIN radio provision with pocket	5
– ISO DIN radio provision with pocket	6
– ISO DDIN radio provision with pocket	7

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: 70-172

Antenna Adapter: 40-HD10

TOOLS REQUIRED


- Panel removal tool • Phillips screwdriver

Attention! With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.


DASH DISASSEMBLY

1. Unclip and remove the trim panel above the glove box at the right side of the factory radio. (Figure A)
2. Unclip and remove the trim panel at the left side of the factory radio. (Figure B)
3. Remove (2) Phillips screws from the left and right side of the radio. (Figure C)
4. Unclip and remove the top of the center console including the cup holders. (Figure D)
5. Remove (2) Phillips screws at the bottom edge of the pocket assembly. (Figure E)


Continued on the next page

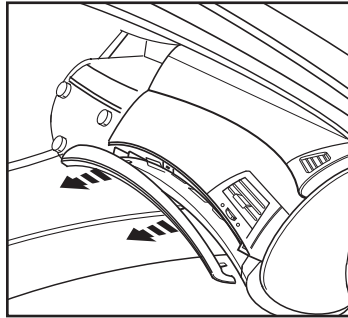


(Figure A)

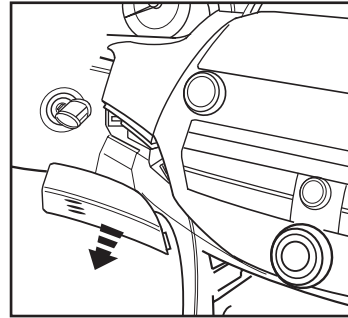


(Figure B)

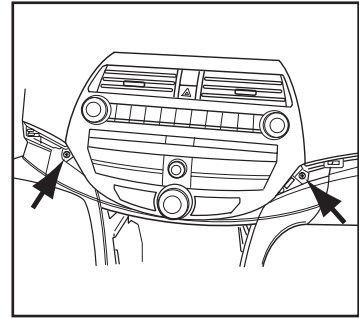

(Figure C)

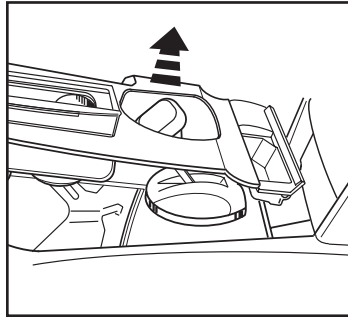


(Figure D)

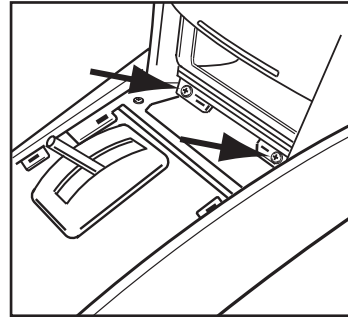


(Figure E)

DASH DISASSEMBLY (CONT.)


6. Remove (2) Phillips screws facing up inside of the pocket, below the factory radio. (Figure F)
7. Unclip and remove the pocket assembly. (Figure G)
8. Remove (2) Phillips screws securing the bottom of the radio. (Figure H)
9. Unclip the factory radio assembly. Unplug and remove the radio assembly. (Figure I)

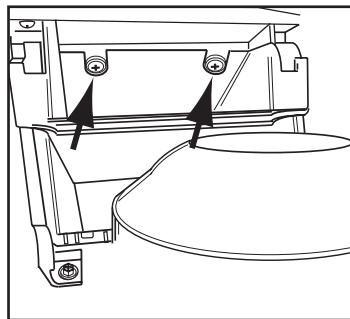

(Figure F)

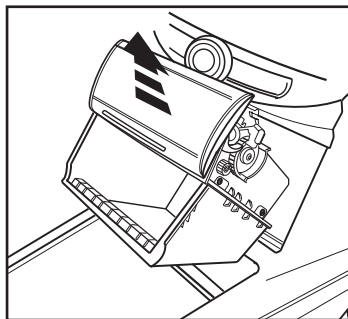


(Figure G)

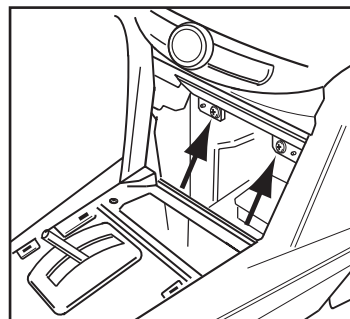

(Figure H)

Continue to Kit Preparation

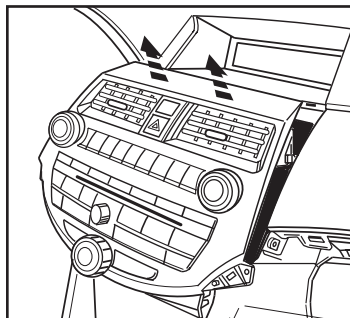


(Figure I)


KIT PREPARATION

From the factory radio assembly:


1. Remove (6) Phillips screws securing the climate controls, then remove.
2. Remove (4) Phillips screws securing the a/c vents, then remove.
3. Unclip and remove the hazard switch and passenger airbag light.
4. Remove (4) Phillips screws securing the lower trim panel, then remove.
5. Remove (9) panel clips.

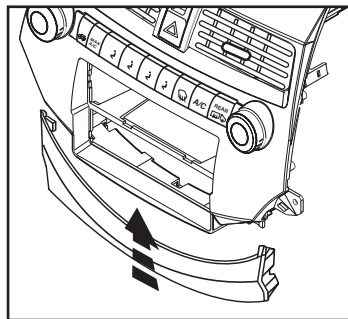

(Figure A)

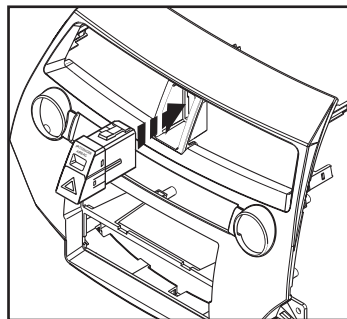


(Figure B)

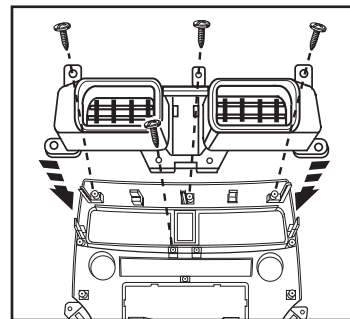


(Figure C)

To the 99-7874 radio housing:

6. Secure the lower panel using the factory screws. (Figure A)
7. Clip in the hazard switch and airbag light. (Figure B)
8. Secure the a/c vent using the (4) factory screws. (Figure C)
9. Secure the climate controls using the (6) factory screws. (Figure D)
10. Attach the factory panel clips. (Figure E)

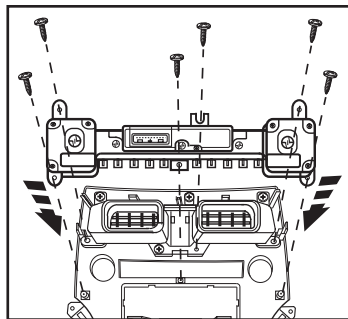

(Figure D)

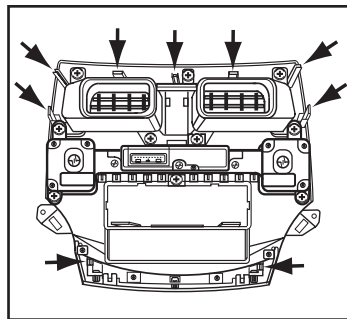


(Figure E)

Continue to Kit Assembly


KIT ASSEMBLY

DIN radio provision with pocket


1. Remove the metal DIN sleeve from the aftermarket radio.
2. Slide the sleeve into the **radio housing** and secure by bending the metal locking tabs outward. (Figure A)
3. Slide the radio back into the sleeve until it clicks into place. (Figure B)
4. Clip the **pocket** into the **radio housing**. (Figure C)
5. Reassemble the dash in reverse order of disassembly to complete the installation.

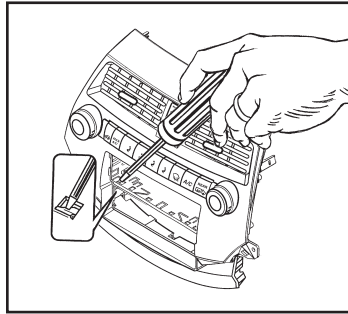

(Figure A)

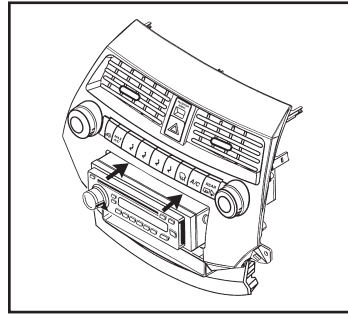

(Figure B)

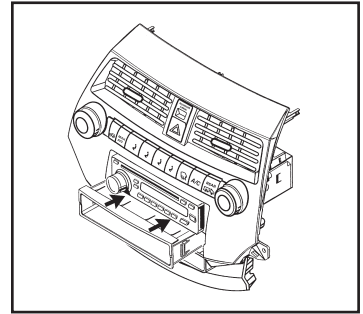


(Figure C)


KIT ASSEMBLY

ISO DIN radio provision with pocket


1. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
2. Secure the **ISO DIN radio brackets** to the radio using the screws supplied with the radio. (Figure A)
3. Slide the radio into the **radio housing** until it clicks into place. (Figure B)
4. Clip the **ISO DIN trim plate** onto the radio assembly. (Figure C)
5. Clip the **pocket** into the **radio housing**. (Figure C)
6. Reassemble the dash in reverse order of disassembly to complete the installation.

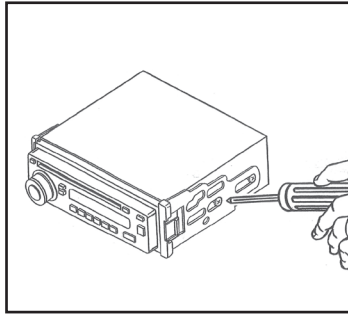

(Figure A)

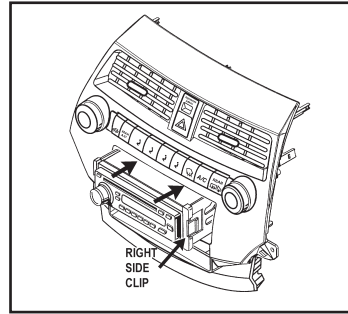

(Figure B)

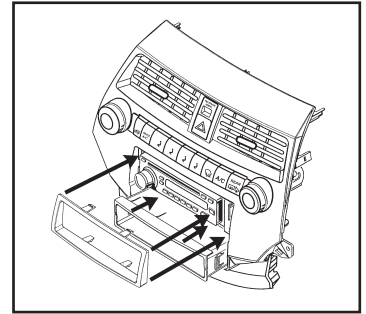


(Figure C)


KIT ASSEMBLY

ISO DDIN radio provision


1. Cut and remove the center bar from the **radio housing**. (Figure A)
2. Clip the **ISO DDIN radio brackets** to the inside edge of the **radio housing**. (Figure B)
3. Slide the radio into the **radio housing**, then secure to the **radio brackets** using screws supplied with the radio. (Figure C)
4. Clip the **ISO DDIN trim plate** into the radio assembly. (Figure C)
5. Reassemble the dash in reverse order of disassembly to complete the installation.

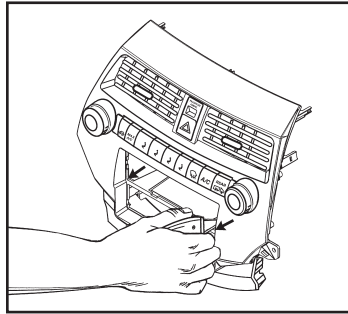

(Figure A)

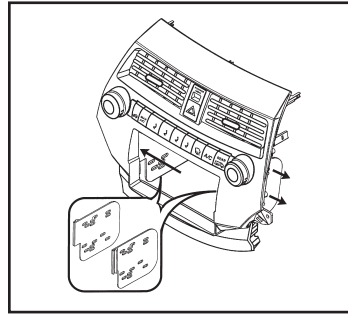

(Figure B)

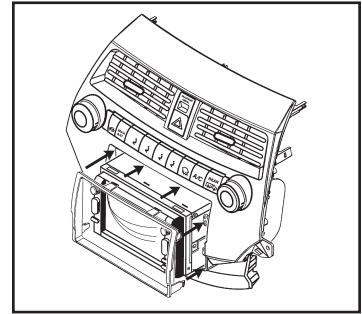

(Figure C)



99-7874
INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 7:00 PM

Sunday: 10:00 AM - 4:00 PM



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.edu or call 386-672-5771 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**