



VREC-H520DC

DASH CAMERA

Quick Start Guide

Pioneer Electronics Australia Pty Ltd

Unit 13, 135-155 Rooks Road,
Vermont, Victoria, 3133, Australia
Tel: (03) 9586-6300

This guide is intended to explain you the basic functions of this unit. For details, please refer to the Owner's manual stored on the website.

www.pioneer.com.au

After-Sales Service for Pioneer Products

Please contact the authorized Pioneer dealer from which you purchased this unit or an authorized Pioneer service company for after-sales service or questions you may have about the product. You may contact Pioneer directly as follows:

Pioneer Electronics Australia Pty Ltd

Unit 13, 135-155 Rooks Road, Vermont, Victoria, 3133, Australia

Tel : (03) 9586-6300

Do not ship your unit in for repair without contacting Pioneer first. Always produce the warranty card with serial number affixed on it. Units sent without a return authorization number or without serial number will be refused.

Precautions

Information for users on collection and disposal of old equipment and used batteries.

(Symbol for equipment)



Symbol example for batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with national legislation. By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

When disposing of products, please comply with governmental regulations or environmental public institution's rules that apply in your country / area

Safety precautions

Certain country, state and provincial laws may prohibit or restrict the placement and use of this product in your vehicle. Please comply with all applicable laws and regulations regarding the use, installation and operation of this product. It is the user's responsibility to comply with all applicable laws, rules, regulations and ordinances.

Warning

- Do not install this product in your vehicle if its location or use would obstruct the driver's clear view of the road or the operation of any airbag in the vehicle. It is also the owner's / driver's responsibility to know and comply with the laws rules, and regulations of the driving location, including, for example, passenger privacy rights. And not to use the device in any location where its installation or use is prohibited.
- Do not use this device to make audio or video recordings prohibited in the location where you are using this product. Always provide notice that is required in your location that video and audio recordings (if audio is in use) are being made and obtain appropriate consent and authorization from the persons being recorded. Some states, provinces and municipalities require posting a visible written notice that occupants and conversations are being recorded.

WARNING

- Do not allow this product to come into contact with liquids. This can cause electrical shock. Contact with liquids can also cause smoke, overheating and damage to the product.

Before using this product, be sure to read and fully understand the following safety information:

- Don't use this product if it will distract you from safely operating your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating this product or reading the display, park your vehicle in a safe location and apply the parking brake before making the necessary adjustments.
- Certain functions (such as viewing of screen and certain button operations) offered by this product could be dangerous (possibly resulting in serious injury or death) and/or unlawful if used while driving.

Precautions before connecting the system:

WARNING

- Securely install this product on the front windshield to prevent it from falling off. If this product is not firmly installed, it may fall off the windshield while driving and cause an accident. Periodically inspect this product.
- Pioneer recommends that only authorized service company
- personnel, who have special training and experience in mobile electronics, set up and install this product.
- Secure all wiring with cable clamps or electrical tape. Do not allow any bare wiring to remain exposed

Precautions before installation:

WARNING

- Do not install this product where it may:

- I. obstruct the driver's vision.
- II. impair the performance of any of the vehicle's operating systems or safety features, including airbags, hazard lamp buttons or
- III. impair the driver's ability to safely operate the vehicle.

- Do not install this product near the dashboard, door, or pillar where an airbag is deployed. Please refer to your vehicle owner's manual carefully for reference to the deployment area of the airbags.


CAUTION

- To ensure proper installation, be sure to use the supplied parts in the manner specified. If any parts are not supplied with this product, use compatible parts in the manner specified after you have the parts' compatibility checked by your dealer. If parts other than supplied or compatible ones are used, they may damage internal parts of this product or they may work loose, and the product may become detached. Also, please note that the product may not function properly in case non-compatible accessories are used.
- Do not install this product in places subject to high temperatures or humidity, such as:
 - I. Places close to a heater, vent, or air conditioner.
 - II. Places that may be exposed to rain, such as close to the door.

Packaging Contents

1N Dash Camera [VREC-H520DC], 1N Power Adapter, 1N Power Cable, 1N Electrostatic Film, 1N Mount with adhesive, 1N Rear Camera, 1N Rear Camera Connecting Cable, 1N Quick Start Guide, 128GB SD card

Product Appearance

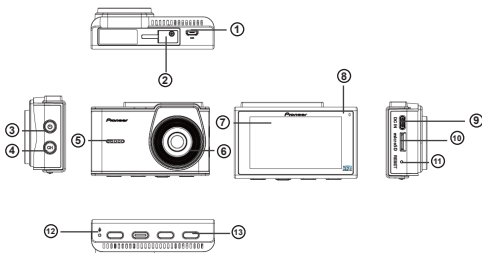

- | | |
|---|--|
| 1. Rear camera connection terminal (to connect rear camera cable) | 6. Camera Lens |
| 2. Adhesive Mount Cradle connection point | 7. LCD Display |
| 3. ON/OFF Power Button | 8. System/LED Indicator |
| 4. Toggle Button to switch between Rear and Front Camera view | 9. Power port (to connect power cable) |
| 5. Speaker | 10. microSD™ Card Slot |
| | 11. Reset |
| | 12. Mic |
| | 13. Function Buttons |

Product Appearance

Resolution: 2K (Front); 1080p; Full HD (Rear)

Display Screen: LCD; 3 inches; 7.62 cm

Wi-Fi: In-build (2.4 GHz)

G-sensor: Supported

Storage: microSD Card (Class 10 or above; up to 512 GB)


Power Supply: 5 V, 2.0 A (via cigarette charger slot of vehicle or via Hardwire Kit)

Power Connector: USB Type-C®

Power Back-up: Super Capacitor

Status Display

The status display shows the operating status of this product.

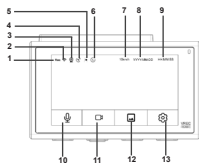

- | | |
|---------------|--------------------|
| 1 Recording | 8 Date |
| 2 Wi-Fi | 9 Time |
| 3 Rear Camera | 10 Mic |
| 4 GPS | 11 Event Recording |
| 5 ADAS | 12 Gallery |
| 6 Timelapse | 13 Settings |
| 7 Speed | |

System Indicator Display

The operating status of this product is displayed with the system indicator.

System Indicator	Illuminated green	Illuminated red	Blinking green	Solid green
Menu Displayed	—	—	—	—
Normal Recording	○	—	—	—
Recording Event	—	—	○	—
Under parking surveillance	—	—	—	○
Error Has Occurred (Including microSD Card not Inserted)	—	○	—	—

Function Buttons


There are 4 function button on the bottom of the dash camera and 2 buttons on the side as indicated below. The functions of the buttons will depend on the displayed screen.

Recording




- 1 Turn ON/OFF Audio recording
- 2 Capture emergency video (60 s)
- 3 Access Gallery
- 4 Settings

During playback




- 5 Back
- 6 Video Speed
- 7 Play/Pause
- 8 Delete

During MENU screen display

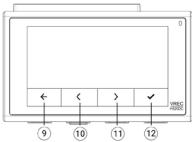

- 9 Back
- 10 Go Previous / Up
- 11 Go Next / Down
- 12 Confirm

During MENU screen display

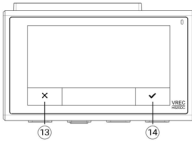


- 13 Cancel
- 14 Confirm

Inserting and Ejecting the microSD Card

Turn OFF the power to this product when inserting and removing the microSD card.

Inserting the microSD Card

Hold the top edge of the microSD card, position the microSD card so that the microSD card label is facing opposite side of the lens and slowly insert it into the microSD card slot until it clicks.




⚠ CAUTION

Do not insert the microSD card at an angle. Doing so may cause damage.

Ejecting the microSD Card

Slowly push in the top edge of the microSD card until it clicks (1).

The lock will be released. Pull out the microSD card (2).



⚠ CAUTION

Ensure care is taken when handling the microSD card, as it could be hot.

Do not remove the microSD card while the device is in operation.


Note:

1. Use a class 10 or above microSD card for proper functionality.
2. You will not be able to record videos without microSD card.
3. You shall be prompted to format the microSD card after inserting it first time into the dash camera.

Specified Installation Position on Front Windshield

When installing this product in your vehicle, please be mindful of the position on the front windshield. Install in a way that satisfies any prescribed or applicable laws at your location and also following conditions:

- Install the product at a place where it doesn't obstruct any of the airbag deployment zone. The ideal location is behind the rear view mirror out of the driver's view as shown in the illustration below.
- A position where this entire product is within 20% of the top edge of the height of the front windshield (range within 20% of the actual length, excluding parts overlapping weatherstrips, moldings, etc. and masked parts) or are in the shadow of the rear-view mirror as viewed from the driver's seat. Note that "20%" as described above is a rough estimate. Please install the product in accordance with your location's laws and regulations.
- A position where the lens part of this product is within the wiping range of the wiper.
- A position where the lens part of this product does not hang over the sunshade and black ceramic lines/black ceramic pattern.
- A position where this product faces in the horizontal direction to the front and side to side.
- A position where the cigarette lighter USB power cable can be routed without unnecessary force.

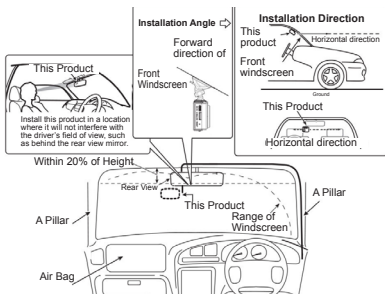


Always install this product in the specified installation position to ensure a safe field of view while driving and to achieve full performance from the product. Pioneer is not liable for any damages due to faulty or improper installation or use of the product

Recommended Installation Position on Rear Windshield

When installing the rear camera on the inside of the rear window, installation in a vehicle and in a position that satisfies all of the following conditions is recommended.

- A position where the lens part of the rear camera is within the wiping range of the wiper.
- A position where the rear camera faces in the horizontal direction to the rear and side to side.
- A position where the lens part of the rear camera and the double-sided tape do not overlap the heating wires.
- A position where the rear camera connection cable can be routed without unnecessary force.

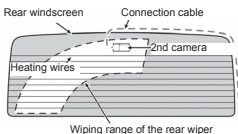

Installing the rear camera


The top and bottom of the image can be set according to the mounting direction of the rear camera

1. **Clean the installation area of dirt and oils using a clean cloth.**



2. Install the rear camera.

- ① Peel off the double-sided tape release paper from the rear camera.
- ② Adjust the lens so that it faces outside the vehicle, and install at the specified position on the rear windshield.



⚠ CAUTION

- Make sure that the surface of the rear windshield is clean and dry, before attaching the rear camera.
- Use extreme care as the double-sided tape on the rear camera is extremely strong, and should not be reapplied once it has been applied.
- To ensure the installation strength of the adhesive tape, leave this product for 24 hours after application before using it.

Note

- A protective film is applied to the lens when the product is purchased. Peel off this film.

Installing the Dash Camera

1. Clean the installation area of dirt and oils using a clean cloth.



2. Install this product.


Peel off the double-sided tape release paper from the dash camera mount.

Mounting bracket →



Install at the specified position of the front windshield.

Firmly push this product

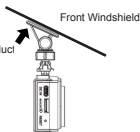


⚠ CAUTION


- Make sure that the surface of the front windshield is clean and dry, before attaching the dash camera mount.
- Use extreme care as the double-sided tape on the dash camera mount is extremely strong, and should not be reapplied once it has been applied.
- For optimal tape adhesion, it is recommended that the product remains undisturbed in the vehicle for about 24 hours, and avoiding any shock during driving.

3. Connecting the cables.

- Connect the power cable to the power adapter and main unit.



- Route the power cable via A column as shown below.



- Please route the cable of rear camera via ceiling only.
- Connect the USB power adapter to cigarette lighter socket of the vehicle. Fully insert this into the vehicle accessory socket to make a good connection. (The location of the accessory socket will differ depending on the vehicle).

⚠ CAUTION

- The accessory socket may be extremely hot immediately after connecting the adapter into the accessory socket. The tip of the power cable may melt or short circuit if it is plugged in while the socket is hot. Ensure that the socket is cool before plugging in the cigarette lighter power cable.
- Use only with 12V vehicle accessory cigarette lighter socket or USB port to avoid damage/malfunction.

4. Adjust the angles

Adjust the angles of this product so that video outside the vehicle is properly displayed.



5. Switch on the ignition

Switch on the ignition to check if the installed product is working as expected.


Direct connection with Vehicle Battery (Parking mode)

Be sure to disconnect the $\ominus$ terminal of the vehicle's battery before connecting the power cable.

Parking mode can be enabled on this dash camera for which user have to purchase a Hardwire Kit and get it installed by a trained automobile technician. By using the power cable to draw power directly from the vehicle, this product can detect and record vehicle movement caused by vibration even when the vehicle's ignition is turned OFF. It is recommended to use a power cable (or Hardwire Kit) with fuse.

In case you switch back to USB power adaptor (from Hardwire kit) to power the dash camera, please note to perform factory-reset operation using App or Dash Camera GUI.

If factory-reset is not performed, the dash camera may not work properly or may seem to be shut down.

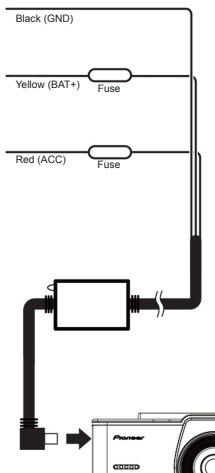

Ground (Black)

Securely connect to the metal part of the vehicle body. To prevent noise, connect as close to the navigation unit as possible.

+ Battery power supply (Yellow)

Always connect to the power circuit supplied with power from the battery, regardless of whether the vehicle engine switch is ON or OFF.

Accessory power supply (Red)

Connect to the power circuit supplied with power when the vehicle engine switch is turned to the ACC position. Never install the accessory power supply to a vehicle that does not have an ACC position on the engine switch. Doing so may lead to a dead battery.


Note:

Connect the red and yellow lead wires to the terminals after wiring through the vehicle's fuse unit.



Connection Precautions

To prevent fuming and damage to the product, be sure to first securely connect the black lead wire (Ground) of this product to the metal part of the vehicle body. Connect separate black lead wires (Ground) for products with a high current consumption such as a power amplifier. When setting up connections all at once, there is a risk of fuming or damage to the product when screws loosen or come off completely.



*1 Not Supplied with the product

Parking Mode provides added security by monitoring your vehicle when it is parked, and the engine is turned OFF. This mode is especially useful for capturing video footage of incidents such as theft, vandalism, or collisions that may occur while your vehicle is unattended.

When activated, the dash camera enters a state of low power consumption and starts recording if vibration (detected by the G-sensor) or motion is detected.

Connecting to Dash Camera App

1. Scan the code for the Companion App on Google Play or App Store



2. Download the App
3. Sign up and follow pairing instructions.
4. Default Wi-Fi Name (SSID): Pioneer_H520DC_XXXX
5. Default password: 12345678

Note

- * XXXX shall be a unique alphanumeric entity.
- Supports Android™ OS version 11 & above, iOS version 13 & above.

Trademarks and Copyrights

- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- App Store is a service mark of Apple Inc., registered in the U.S. and other countries and regions.
- Android and Google Play are trademarks of Google LLC.
- STARVIS 2 and its logo are registered trademarks or trademarks of Sony Group Corporation or its affiliates.
- microSD, microSDHC and microSDXC Logos are trademarks of SD-3C LLC.

