

Installation assistance available at:

# RFTECH

[www.rockfordfosgate.com/rftech](http://www.rockfordfosgate.com/rftech)

# PUNCH®

P | 1



P | 1 COAXIAL SPEAKERS

P1V2-25 • P1V2-3 • P1V2-4  
P1V2-46 • P1V2-5 • P1V2-6  
P1V2-65 • P1V2-675 • P1V2-68  
P1V2-69

SCAN QR-CODE FOR:  
Product Details • Specifications  
Owners Manual • Installation Video

600 South Rockford Drive • Tempe, Arizona 85288 United States  
Direct: (480) 967-3565 • Toll Free: (800) 669-9899  
**ROCKFORDFOSGATE.COM**



Serial Number: \_\_\_\_\_ Date of Purchase: \_\_\_\_\_



Installation & Operation

## Introduction

Dear Customer,

*Congratulations on your purchase of the world's finest brand of audio products. At Rockford Fosgate we are fanatics about musical reproduction at its best, and we are pleased you chose our product. Through years of engineering expertise, hand craftsmanship, and critical testing procedures, we have created a wide range of products that reproduce music with all the clarity and richness you deserve.*

*For maximum performance we recommend you have your new Rockford Fosgate product installed by an Authorized Rockford Fosgate Dealer, as we provide specialized training through Rockford Technical Training Institute (RTTI). Please read your warranty and retain your receipt and original carton for possible future use.*

*Great product and competent installations are only a piece of the puzzle when it comes to your system. Make sure that your installer is using 100% authentic installation accessories from Rockford Fosgate in your installation. Rockford Fosgate has everything from RCA cables and speaker wire to power wire and battery connectors. Insist on it! After all, your new system deserves nothing but the best.*

*To add the finishing touch to your new Rockford Fosgate image, order your Rockford accessories, which include everything from T-shirts to hats.*

Visit our web site for the latest information on all Rockford products;

**WWW.ROCKFORDFOSGATE.COM**

or, in the U.S. call 1-800-669-9899 or FAX 1-800-398-3985. For all other countries, call +001-480-967-3565 or FAX +001-480-966-3983.

### Table of Content

2	Introduction
3	Specifications
4-7	Dimensions
8	Contents
8-11	Installation Considerations & Mounting
12	French
12	Spanish
13	German
13	Italian
14	Limited Warranty Information

If, after reading your manual, you still have questions regarding this product, we recommend that you see your Rockford Fosgate dealer. If you need further assistance, you can call us direct at **1-800-669-9899**. Be sure to have your serial number, model number, and date of purchase available when you call.

## Safety

### PRACTICE SAFE SOUND

Continuous exposure to sound pressure levels over 100dB may cause permanent hearing loss. High powered auto sound systems may produce sound pressure levels well over 130dB. Use common sense and practice safe sound.

### PRATIQUEZ UNE ÉCOUTE SANS RISQUES

Une exposition continue à des niveaux de pression acoustique supérieurs à 100 dB peut causer une perte d'acuité auditive permanente. Les systèmes audio de forte puissance pour auto peuvent produire des niveaux de pression acoustique bien au-delà de 130 dB. Faites preuve de bon sens et pratiquez une écoute sans risques

### PRACTIQUE EL SONIDO SEGURO

El contacto continuo con niveles de presión de sonido superiores a 100 dB puede causar la pérdida permanente de la audición. Los sistemas de sonido de alta potencia para automóviles pueden producir niveles de presión de sonido superiores a los 130 dB. Aplique el sentido común y practique el sonido seguro.

### PRÄKTIZIEREN SIE SICHEREN SOUND

Fortgesetzte Geräuschdruckpegel von über 100 dB können beim Menschen zu permanentem Hörverlust führen. Leistungsstarke Autosoundsysteme können Geräuschdruckpegel erzeugen, die weit über 130 dB liegen. Bitte wenden Sie gesunden Menschenverstand an und praktizieren Sie sicheren Sound.

### OSSERVATE LE REGOLE DEL SUONO SENZA PERICOLI

La costante esposizione a livelli di pressione acustica al di sopra dei 100dB possono causare la perdita permanente dell'udito. I sistemi audio ad alta potenza possono produrre livelli di pressione acustica ben superiori ai 130dB. Si consiglia il buon senso e l'osservanza delle regole del suono senza pericoli

This symbol with "WARNING" is intended to alert the user to the presence of important instructions. Failure to heed the instructions will result in severe injury or death.

This symbol with "CAUTION" is intended to alert the user to the presence of important instructions. Failure to heed the instructions can result in injury or unit damage.

### **WARNING**

- To prevent injury and damage to the unit, please read and follow the instructions in this manual. We want you to enjoy this system, not get a headache.

### **CAUTION**

- If you feel unsure about installing this system yourself, have it installed by a qualified Rockford Fosgate technician.
- Before installation, disconnect the battery negative (-) terminal to prevent damage to the unit, fire, and/or possible injury.


Model	P1V2-25	P1V2-3	P1V2-4	P1V2-46	P1V2-5	P1V2-6	P1V2-65	P1V2-675	P1V2-68	P1V2-69
Midrange	2.5" (19mm) Inverted Dome	3.5" (19mm) Inverted Dome	4" (19mm) Inverted Dome	4" x 6" (19mm) Inverted Dome	5.25" (19mm) Inverted Dome	6" (19mm) Inverted Dome	6.5" (19mm) Inverted Dome	6.75" (19mm) Inverted Dome	6" x 8" (19mm) Inverted Dome	6" x 9" (19mm) Inverted Dome
Tweeter	3/4" (19mm) Inverted Dome									
Piezo	Lower 1/3 co-witnessed 9 mm Convex									
Nominal Impedance	4Ω									
Frequency Response	150Hz - 25kHz	98Hz - 25kHz	75Hz - 25kHz	64Hz - 25kHz	56Hz - 25kHz	53Hz - 25kHz	49Hz - 25kHz	49Hz - 25kHz	45Hz - 25kHz	45Hz - 25kHz
Voice Coil Diameter	1"	1"	1"	1"	1"	1"	1"	1"	1"	1"
Bass-Blocker Value/Frequency	33µF / 1.2kHz @ 6dB/Octave	33µF / 1.2kHz @ 6dB/Octave	33µF / 1.2kHz @ 6dB/Octave	100µF / 400Hz @ 6dB/Octave	—	—	—	—	—	—
Power Rating (RMS/Peak)	75W / 150W									
Fs - Free Air Resonance	200 Hz	130 Hz	100 Hz	85 Hz	75 Hz	70 Hz	65 Hz	65 Hz	60 Hz	60 Hz
Sensitivity (1W/1M)	82 dB	82 dB	85 dB	86 dB	86 dB	88 dB	88 dB	88 dB	88 dB	89 dB
Sensitivity (2.83V/1M)	85 dB	85 dB	88 dB	89 dB	89 dB	91 dB	91 dB	91 dB	91 dB	92 dB
Cut Out Diameter	2.54" (64.5 mm)	2.87" (73 mm)	3.41" (86.5 mm)	5.62" x 3.66" (142.7 x 92.9 mm)	4.37" (111 mm)	5" (127 mm)	5.42" (137.6 mm)	5.67" (144 mm)	7.19" x 5.16" (182.5 x 131.5 mm)	8.4" x 5.71" (213.5 x 145 mm)
Rear-Loading Depth (Twist Loc Flange)	1.47" (37.3 mm)	1.48" (37.7 mm)	1.72" (43.8 mm)	—	2.33" (59.2 mm)	—	—	—	—	—
Front-Loading Depth (Twist Loc Flange)	1.6" (40.6 mm)	1.7" (43.3 mm)	1.99" (50.5 mm)	—	2.6" (66.0 mm)	—	—	—	—	—
Mounting Depth (Standard Flange)	N/A	—	—	2.02" (51.2 mm)	—	2.38" (60.4 mm)	2.5" (63.5 mm)	2.48" (62.9 mm)	2.61" (66.4 mm)	3.13" (79.4 mm)
Min Mounting Depth *No Motor Cover	N/A	—	—	1.93" (49.1 mm)	2.31" (58.6 mm)	2.14" (54.3 mm)	2.26" (57.3 mm)	2.24" (56.8 mm)	2.37" (60.3 mm)	3.13" (70 mm)
Front Side Clearance	0.32" (8.2 mm)	0.53" (13.4 mm)	0.5" (12.7 mm)	0.38" (9.7 mm)	0.44" (11.1 mm)	0.49" (12.4 mm)	0.43" (11 mm)	0.51" (12.9 mm)	0.43" (11 mm)	0.42" (10.6 mm)




CTA-2031 defines test procedures for rating the performance and physical size of mobile loudspeakers, and requirements for reporting these characteristics.

# Dimensions


## P1V2-25

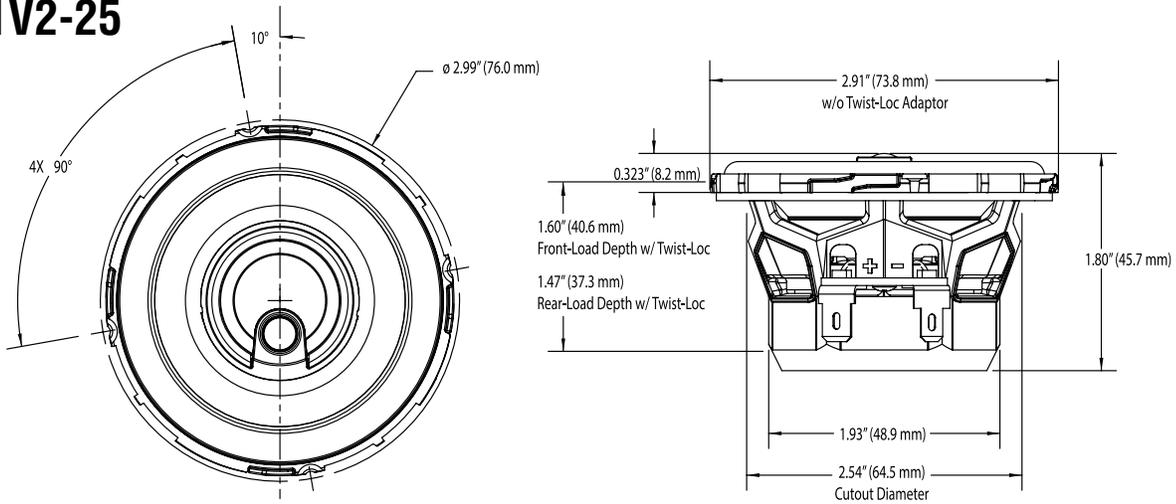



## P1V2-3

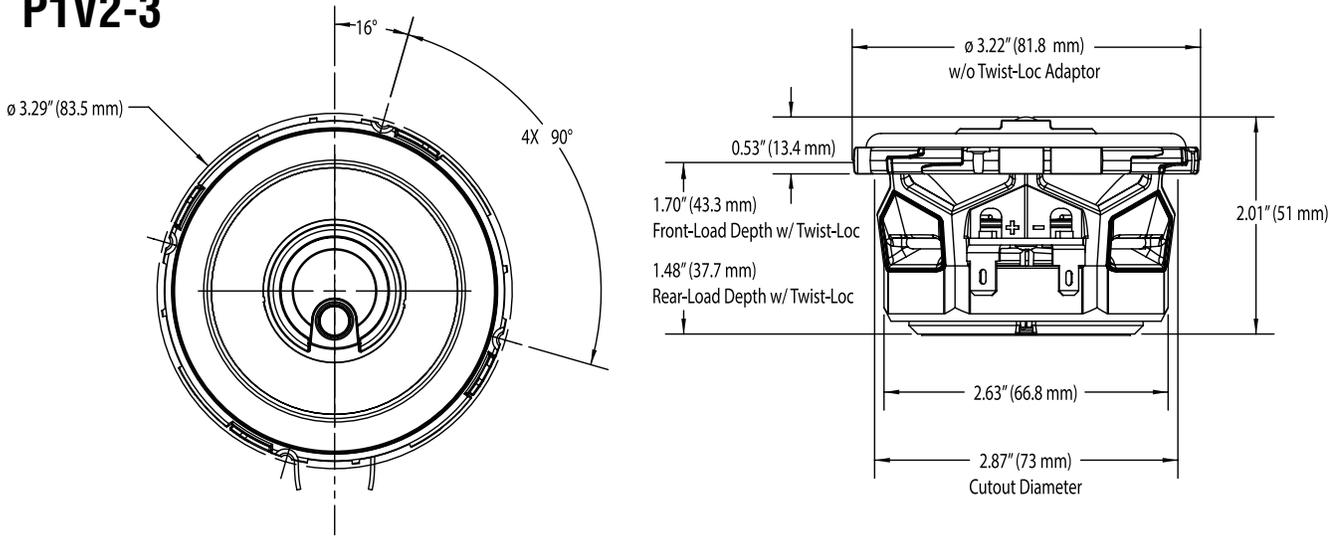



## P1V2-4

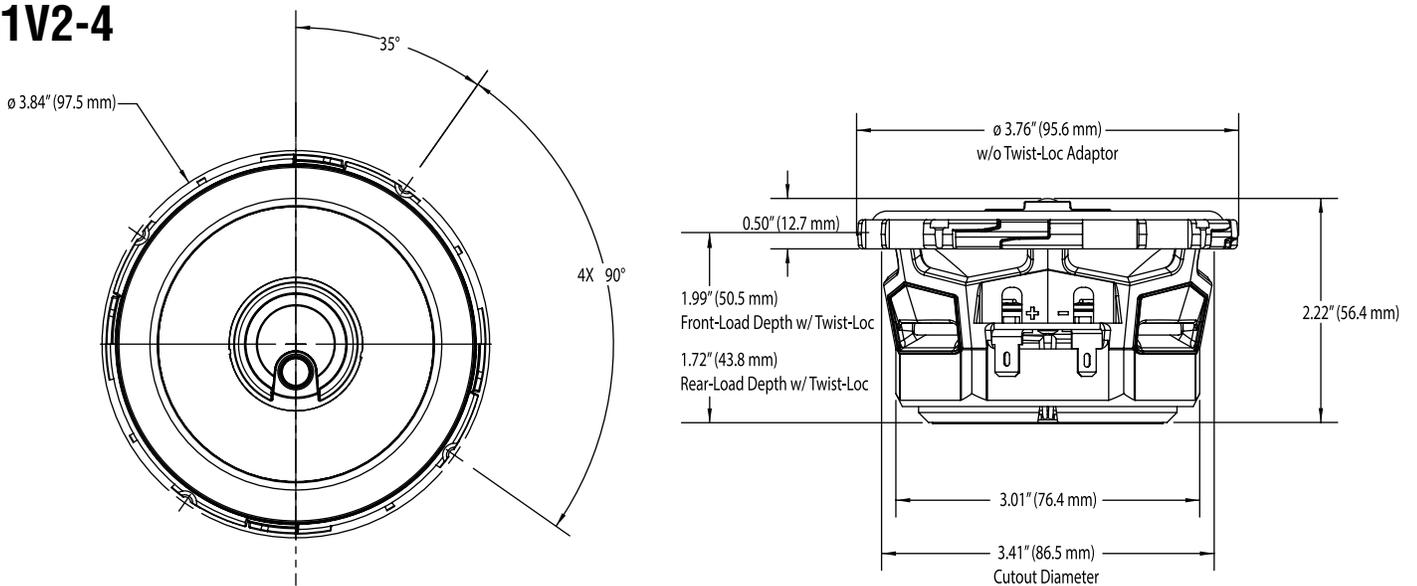



# P1V2-46

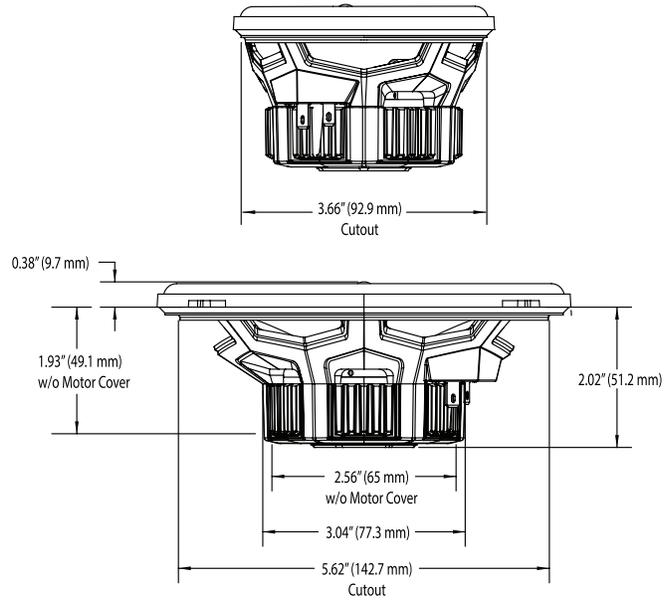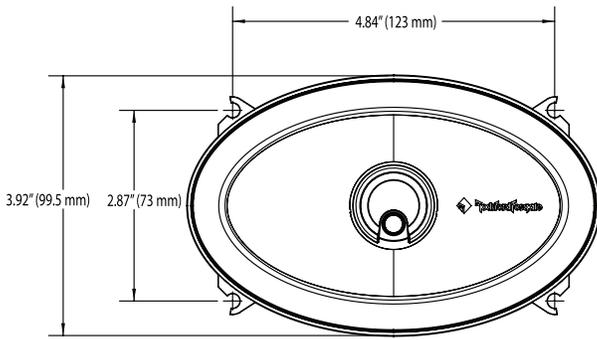



# P1V2-5

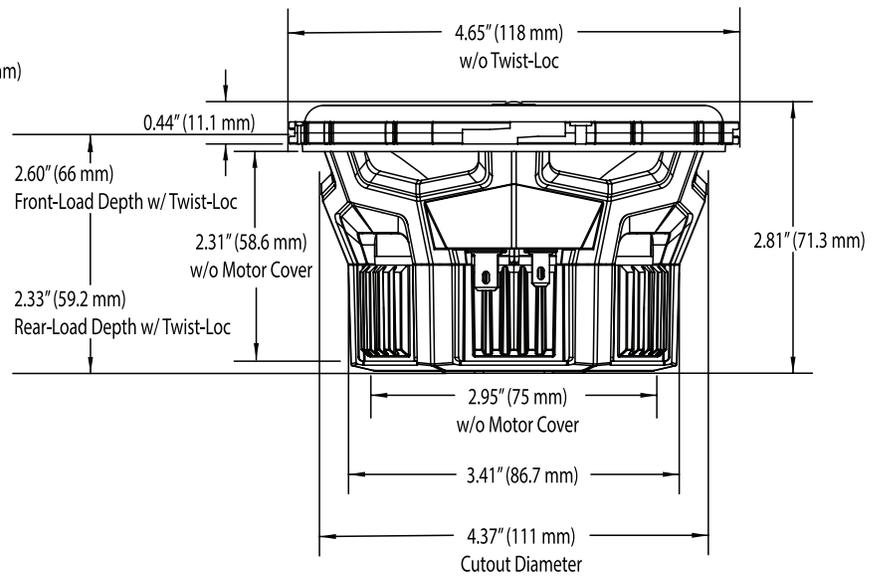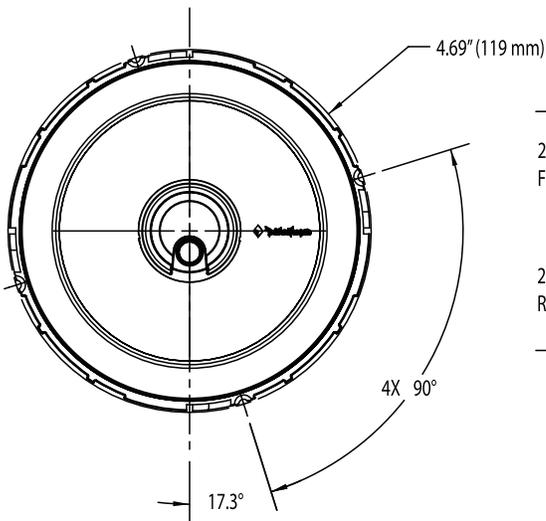



## P1V2-6

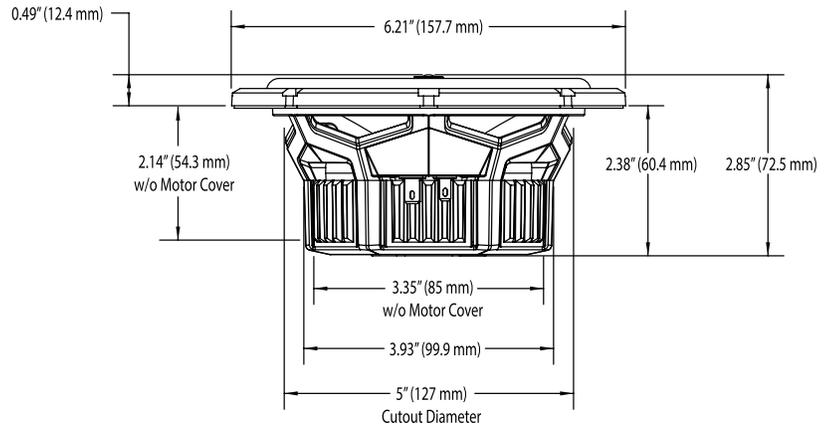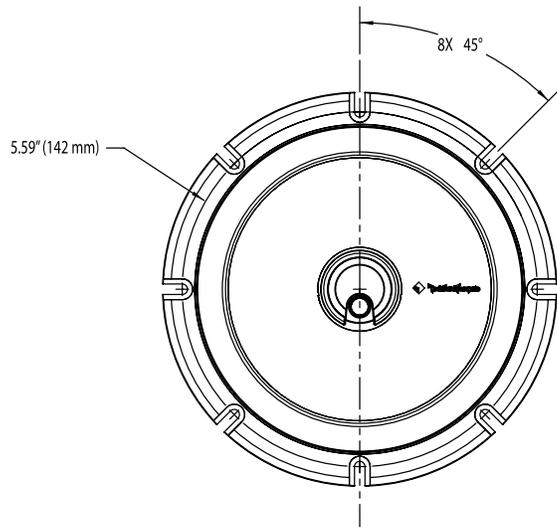



## P1V2-65

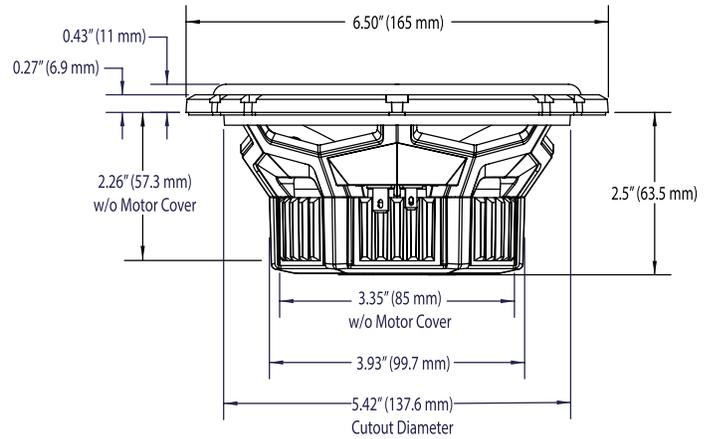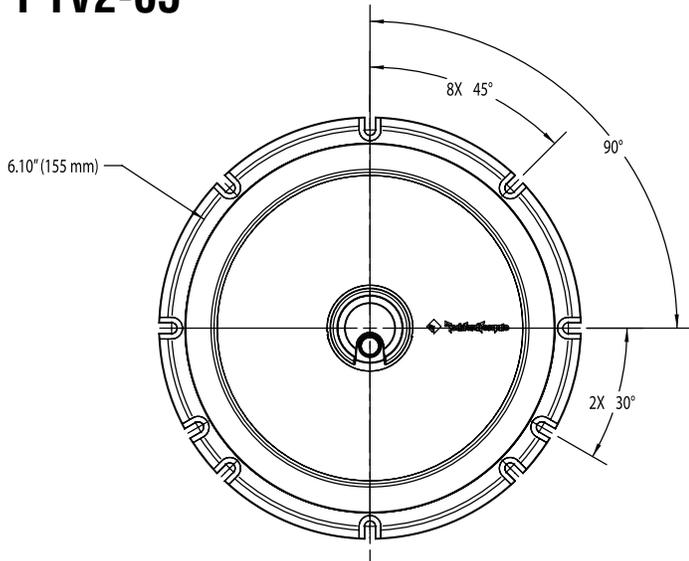



## P1V2-675

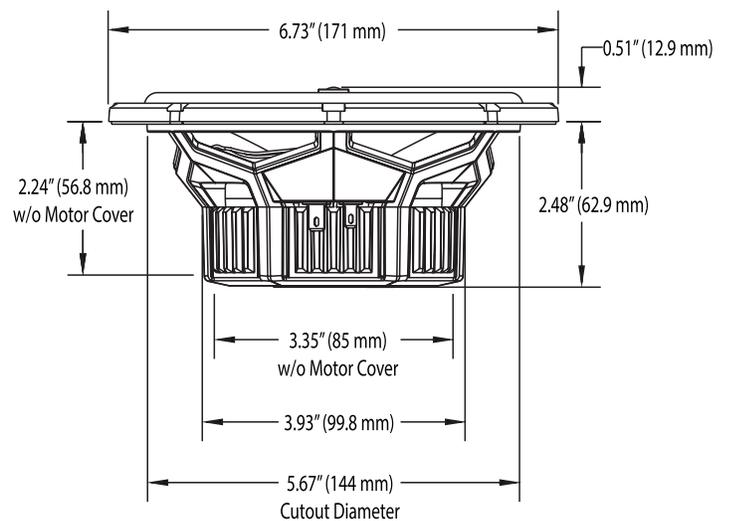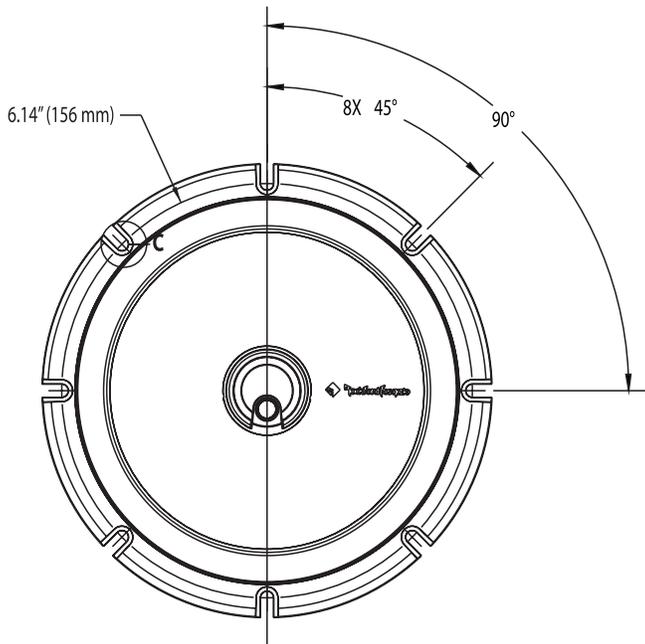

# P1V2-68

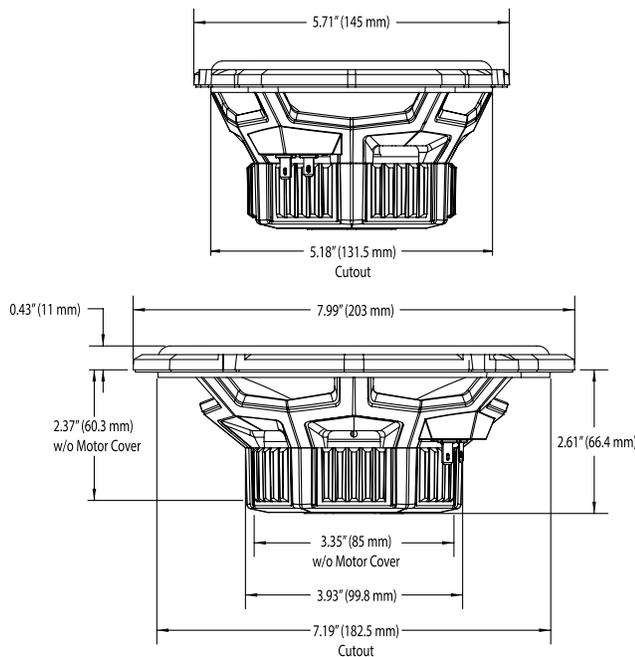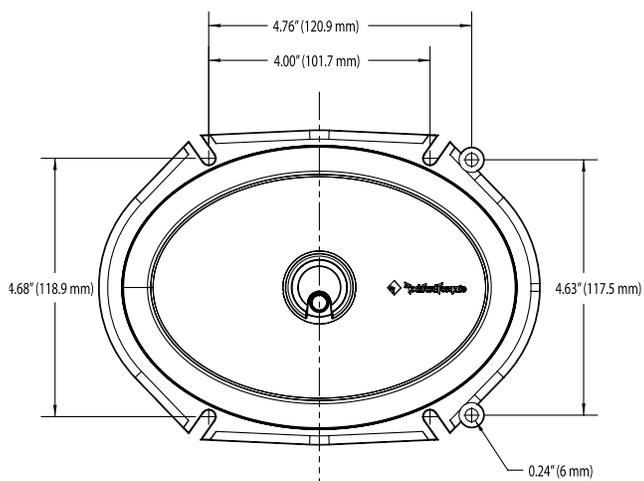

# P1V2-69

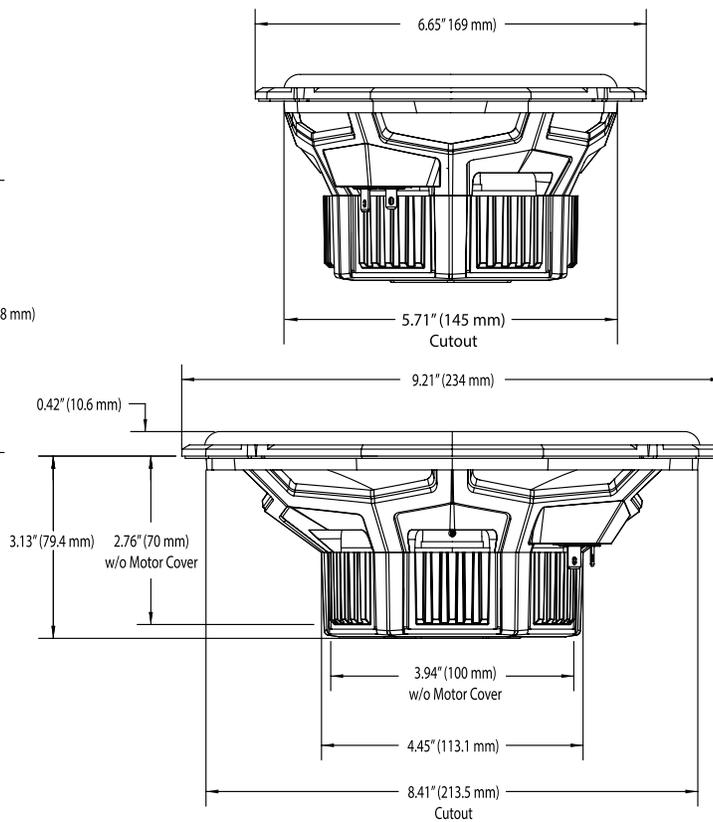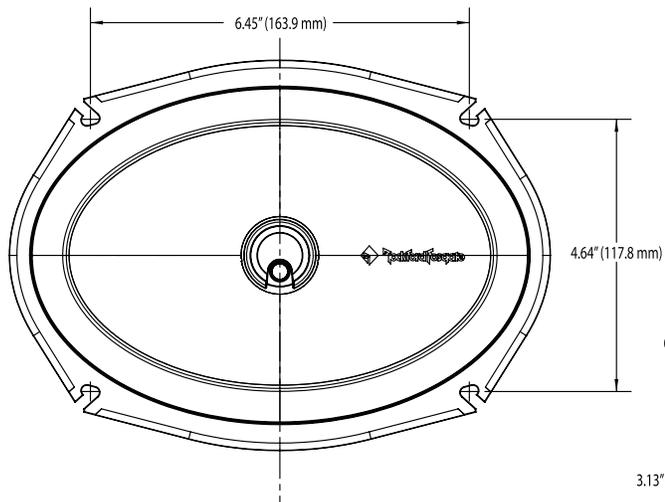

## Contents

### Included Hardware

#### All P1 Models

- Self Tapping Phillips Screws [#8 X 32mm] - (Speaker)

#### P1V2-46 Only

- M3 Hex Nuts (Mounting Adapter)
- Phillips Machine Screws [M3X6.5mm] - (Mounting Adapter)

### Included Parts

#### All P1 Models

- 3 positive female spade connectors (.250")
- 3 negative female spade connectors (.187")


### Included Twist-Lock Adapter

Applies to: P1V2-25, P1V2-3, P1V2-4, P1V2-5

### TWIST-LOCK ADAPTER FRONT LOAD INSTALL - STEPS 1-4


#### STEP 1

Align Tabs On Twist-Lock Adapter To Grooves In Basket Flange.

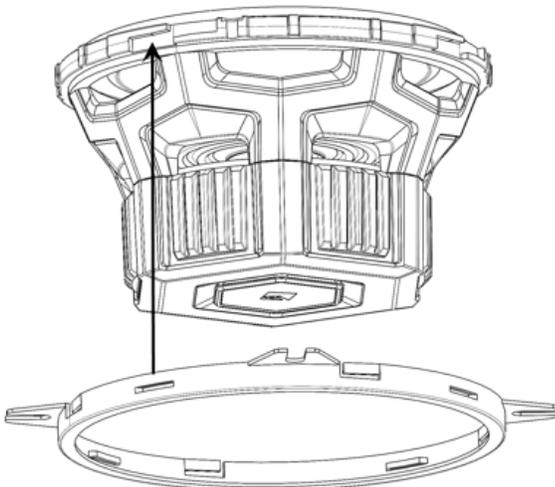


#### STEP 2

Place Twist-Lock Adapter Up Onto The Bottom Side Of Basket Flange.

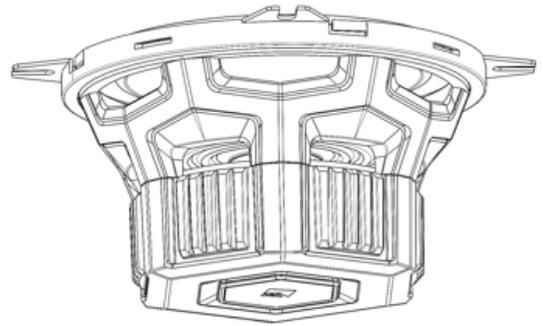


#### STEP 3

Rotate Twist-Lock Adapter Clockwise Until You Hear a "Click" Sound.

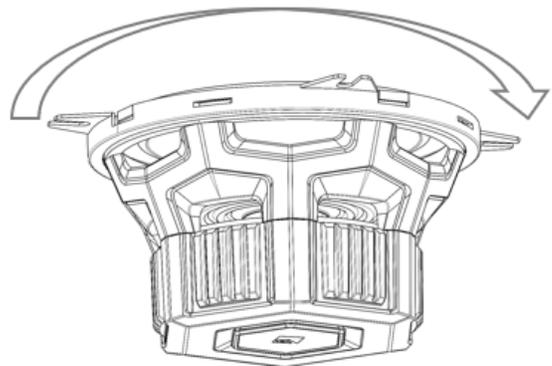

#### STEP 4

To Verify Twist-Lock Adapter Is Locked Into Position, Try To Rotate Twist-Lock Adapter Clockwise/Counter-Clockwise, No Movement Should Occur.


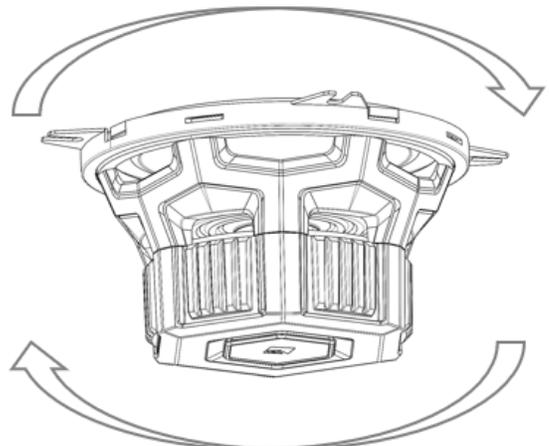


**TWIST-LOCK ADAPTER FRONT LOAD REMOVAL - STEPS 1-3**


**TWIST-LOCK ADAPTER REAR LOAD INSTALL - STEPS 1-4**

**STEP 1** Using A Small, Flat Head Screwdriver, Carefully Pry Out All The Lock Tabs As Shown

**STEP 1** Align Tabs On Twist-Lock Adapter To Grooves In Basket Flange

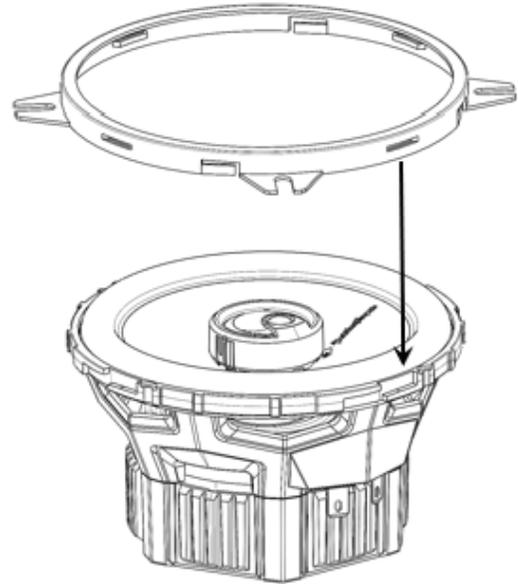
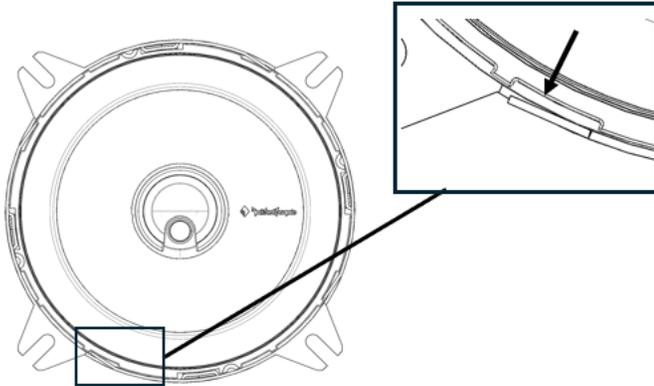


**NOTE:** P1V2-25 & P3V2-25 Do Not Have Lock Tabs. These Twist Lock Adapters Use A Detent Instead.  
To Remove Twist-Lock On These Speakers, Simply Rotate Twist-Loc Adapter Counter Clockwise To Overcome Detent

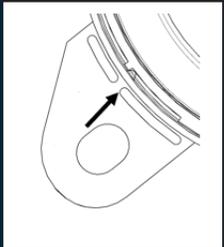



**STEP 2** Rotate Twist-Lock Flange Counter Clockwise Until It Stops

**STEP 2** Place Twist-Lock Adapter Down Over The Topside Of Basket Flange

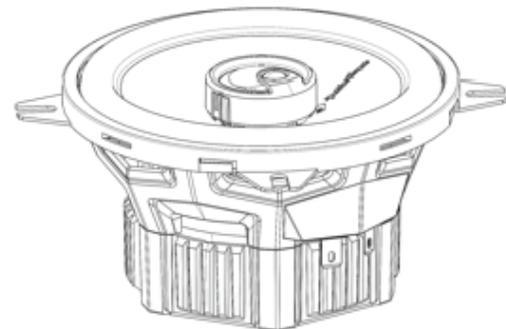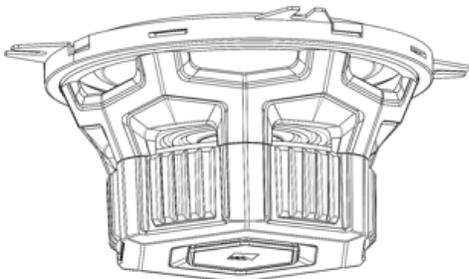

**STEP 3** Pull Twist-Lock Adapter Downwards To Remove From Speaker

**STEP 3** Rotate Twist-Lock Adapter Clockwise Until You Hear a "Click" Sound.

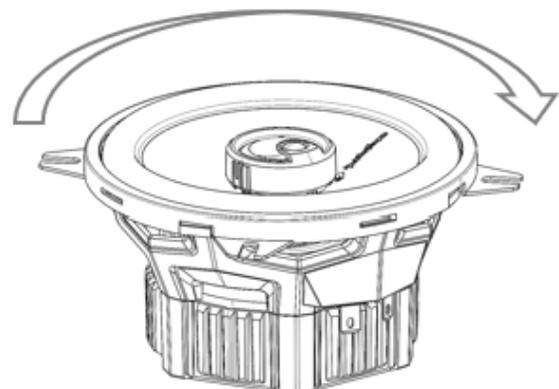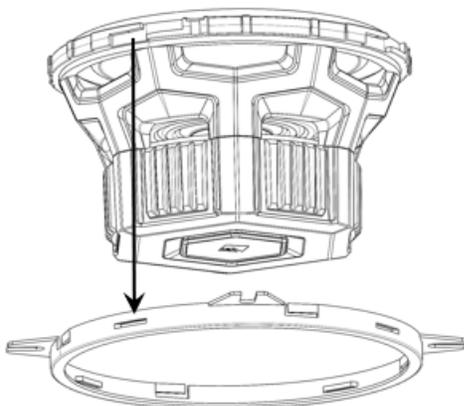


## Installation


### TWIST-LOCK ADAPTER REAR LOAD INSTALL - STEPS 1-4

CONTINUED


**STEP 4** To Verify Twist-Lock Adapter Is Locked Into Position, Try To Rotate Twist-Loc Adapter Clockwise/Counter-Clockwise, No Movement Should Occur.

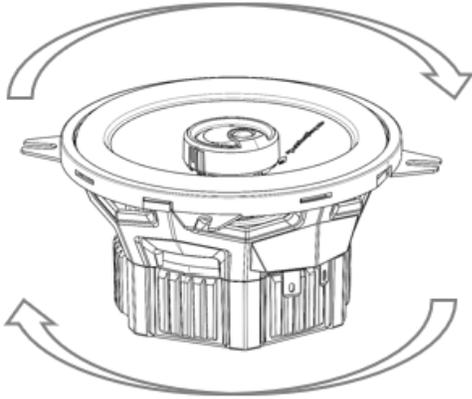

**STEP 2** Rotate Twist-Lock Flange Counter-Clockwise Until It Stops

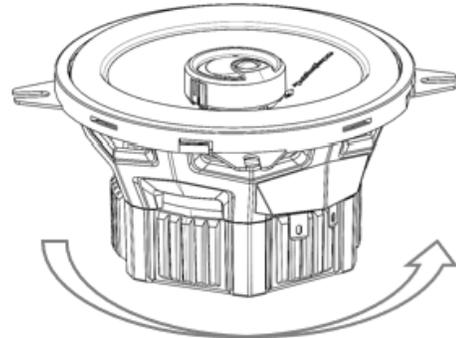


**STEP 3** Lift Twist-Lock Adapter Upwards To Remove From Speakers

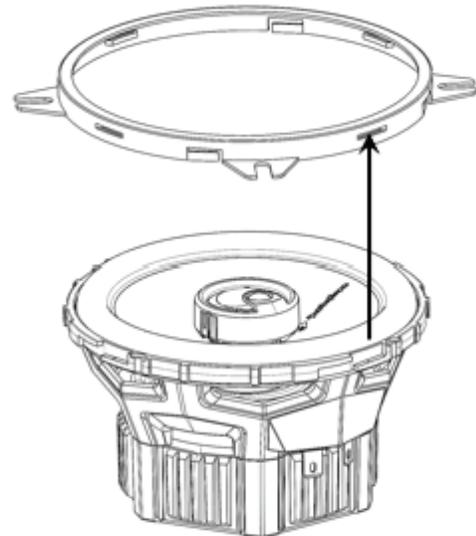


### TWIST-LOCK ADAPTER REAR LOAD REMOVAL - STEPS 1-3

**STEP 1** Using A Small, Flat Head Screwdriver, Carefully Pry Out All The Lock Tabs As Shown

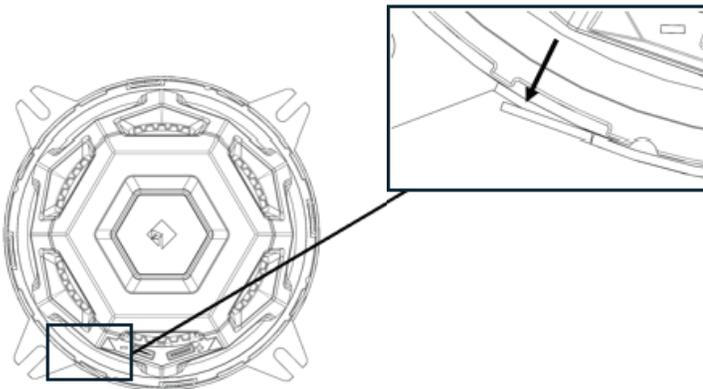

**NOTE:** P1V2-25 & P3V2-25 Do Not Have Lock Tabs. These Twist Lock Adapters Use A Detent Instead.

To Remove Twist-Loc On These Speakers, Simply Rotate Twist-Lock Adapter Counter-Clockwise To Overcome Detent

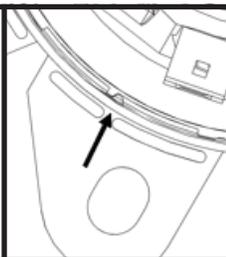

## Included Parts

P1V2-25, P1V2-3, P1V2-4

- Bass Blocker - 1200Hz, 6dB/Oct. High Pass Filter

P1V2-46

- Bass Blocker - 400Hz, 6dB/Oct. High Pass Filter


P1V2-25, P1V2-3, P1V2-4, P1V2-46

- Butt splice wire connectors

## Bass Blocker Installation

NOTE: Bass Blockers are NON-POLARIZED (NOT DIRECTIONAL)

1. Bass Blockers are used to attenuate low frequencies that smaller speakers can not reproduce accurately.
2. Bass Blockers should be installed inline with the positive speaker lead.
3. Use the supplied butt splice wire connectors.

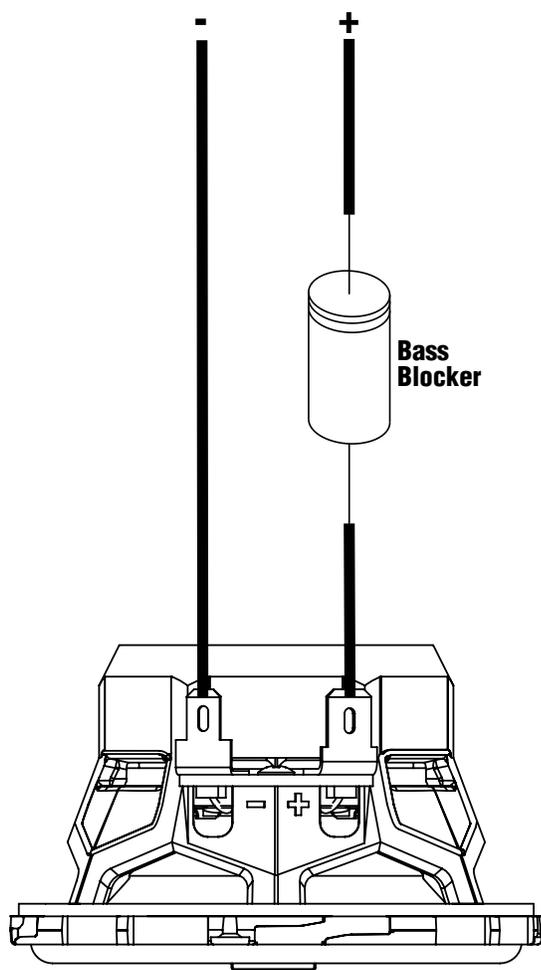

## Installation Considerations

Before beginning any installation, follow these simple rules:

1. Be sure to carefully read and understand the instructions before attempting to install these speakers.
2. For safety, disconnect the negative lead from the battery prior to beginning the installation.
3. For easier assembly, we suggest you run all wires prior to mounting your speakers in place.
4. Use high quality connectors for a reliable installation and to minimize signal or power loss.
5. Think before you drill! Be careful not to cut or drill into gas tanks, fuel lines, brake, or hydraulic lines, vacuum lines or electrical wiring when working on any vehicle. If installing in a boat, take care not to cut or drill through the main hull.
6. Never run wires underneath the vehicle. Running the wires inside the vehicle or hull area provides the best protection.
7. Avoid running wires over or through sharp edges. Use rubber or plastic grommets to protect any wires routed through metal, especially the firewall.

## Mounting

1. Determine where the speakers will be mounted. Ensure there is an area large enough for the speaker to mount evenly. Be sure that the mounting location is deep enough for the speaker to fit; if mounting in a door, operate all functions (windows, locks, etc.) through their entire operating range to ensure there is no obstruction.
2. Refer to the specification chart to determine the proper diameter hole to cut for your speaker model.
3. Feed the speaker wires through the cutout and connect to the speaker terminals. Be sure to observe proper polarity when connecting the wires. The speaker's positive terminal is indicated with a "+".
4. Tighten the screws until the speaker is snug in place to prevent rattling. Do not over tighten the screws.

## Considérations Concernant L'installation

Avant de commencer l'installation, suivez les règles ci-dessous:

1. Veillez à bien lire et comprendre les instructions avant d'essayer d'installer les haut-parleurs.
2. Par mesure de sécurité, débranchez le fil négatif de la batterie avant de commencer l'installation.
3. Pour faciliter le montage des haut-parleurs, il est conseillé d'installer tous les câbles au préalable.
4. Utilisez des connecteurs de haute qualité pour assurer une installation fiable et réduire au minimum la perte de signal ou de puissance.
5. Réfléchissez bien avant de percer. Veillez à ne pas couper ou percer le réservoir d'essence, le câblage électrique ou les conduites de carburant, de freinage hydraulique ou de dépression en travaillant sur un véhicule. En cas d'installation sur un bateau, veillez à ne pas couper ou percer la coque principale.
6. Ne jamais faire passer de fils sous le véhicule. Leur installation à l'intérieur du véhicule ou de la coque assure la meilleure protection.
7. Évitez de faire passer des fils sur des bords tranchants ou dans des orifices à arêtes vives. Utilisez des bagues en caoutchouc ou en plastique pour protéger les fils traversant une plaque de métal, notamment le tablier. Emplacements De Montage

## Montage

1. Déterminez l'emplacement des haut-parleurs. Veillez à ce que la surface plane soit assez grande pour assurer un contact uniforme du haut-parleur. Vérifiez que l'emplacement est assez profond pour le haut-parleur ; en cas de montage dans une portière, actionnez toutes les commandes (fenêtres, serrures, etc.) jusqu'aux extrémités de leurs courses pour vous assurer qu'il n'y a pas d'obstruction.
2. Consultez le tableau des caractéristiques pour déterminer le diamètre de l'orifice à découper pour votre modèle de haut-parleur. Le gabarit fourni donne aussi le bon diamètre de découpe.
3. Faites passer les fils de haut-parleur à travers l'orifice découpé et branchez-les aux bornes du haut-parleur. Veillez à bien respecter la polarité lors du branchement. La borne positive du haut-parleur est indiquée par un « + ».
4. Serrez les vis jusqu'à ce que le haut-parleur soit bien ajusté, de façon à prévenir tout cliquetis, mais évitez tout serrage excessif.

## Consideraciones para la instalación

Antes de comenzar cualquier instalación, siga estas simples normas:

1. Asegúrese de leer cuidadosamente y de entender las instrucciones antes de tratar de instalar estos altavoces.
2. Por seguridad, desconecte el conductor negativo de la batería antes de comenzar la instalación.
3. Para facilitar el montaje, sugerimos que tienda todos los cables antes de montar sus altavoces en su sitio.
4. Utilice conectores de alta calidad para tener una instalación confiable y para reducir al mínimo las pérdidas de señal o de potencia.
5. ¡Piense siempre antes de perforar! Tenga cuidado de no cortar ni perforar en tanques de combustible, tuberías de combustible, frenos o hidráulicas, tuberías de vacío o cableado eléctrico al trabajar en un vehículo. Si la instalación se hace en un bote, tenga cuidado de no cortar ni perforar a través del casco principal.
6. Nunca tienda cables abajo del vehículo. Tender los cables adentro del vehículo o casco proporciona la mejor protección.
7. Evite tender cables arriba o a través de bordes filosos. Use arandelas aislantes de caucho para proteger los cables tendidos a través de metal, especialmente la mampara cortafuegos. Montaje

## Montaje

1. Determine adónde se montará los altavoces. Asegúrese de que haya un área suficientemente grande para montar de manera plana el altavoz. Asegúrese de que el lugar de montaje sea suficientemente profundo para que quepa el altavoz, si se monta en una puerta, accione todas las funciones (ventanas, cerradura, etc.) en toda su gama de funcionamiento para asegurarse de que no haya obstrucciones.
2. Consulte la tabla de especificaciones para determinar cuales son los diámetros correctos para el agujero a cortar para su modelo de altavoz. La plantilla proporcionada también le da la medida correcta del recorte.
3. Tienda los cables del altavoz a través del recorte y conecte a los terminales del altavoz. Asegúrese de usar la polaridad correcta al conectar los cables. El terminal positivo del altavoz está identificado con un símbolo "+".
4. Apriete los tornillos hasta que el altavoz esté ajustado en su sitio para evitar vibraciones. No apriete demasiado los tornillos.

## Einbauüberlegungen

Befolgen Sie vor dem Einbau diese einfachen Regeln:

1. 1. Lesen Sie die Anleitung sorgfältig, bevor Sie versuchen diese Lautsprecher einzubauen.
2. Entfernen Sie vor dem Einbau aus Sicherheitsgründen das negative Kabel von der Batterie.
3. Um die Montage zu erleichtern, empfehlen wir alle Kabel vor der Befestigung Ihrer Lautsprecher zu verlegen.
4. Verwenden Sie nur Qualitätsstecker, um einen zuverlässigen Einbau zu gewährleisten und Signal- und Stromverlust zu minimieren.
5. Denken Sie nach, bevor Sie bohren! Achten Sie darauf, nicht in den Benzintank, die Benzin-, Brems- oder hydraulischen Leitungen, Vakuuleitungen oder Elektrokabel zu schneiden oder zu bohren, wenn Sie am Fahrzeug arbeiten. Achten Sie beim Einbau in einem Boot darauf, nicht durch den Bootsrumpf zu schneiden oder zu bohren.
6. Verlegen Sie Kabel nie unter dem Fahrzeug. Die Kabel im Fahrzeug oder Bootsrumpf zu verlegen, bietet den besten Schutz.
7. Vermeiden Sie es, Kabel über scharfe Kanten zu verlegen. Verwenden Sie Gummi- oder Plastikringe, um Kabel zu schützen, die durch Metall verlegt werden (besonders die Feuerwand).

## Befestigung

1. Entscheiden, wo die Lautsprecher befestigt werden sollen. Gewährleisten, dass der Platz ausreicht, um den Lautsprecher gleichmäßig zu befestigen. Gewährleisten, dass die Befestigungsstelle ausreichende Tiefe für den Lautsprecher hat; beim Einbau in einer Türe alle Funktionen (Fenster, Schloss usw.) in ihrem ganzen Bereich ausprobieren um zu gewährleisten, dass keine Blockierung eintritt.
2. Die Tabelle in den Technischen Daten gibt den richtigen Lochdurchmesser für Ihr Lautsprechermodell zum Ausschneiden an. Die beiliegende Schablone zeigt ebenfalls die richtige Ausschneidegröße an.
3. Die Lautsprecherkabel durch das Loch führen und an den Lautsprecherausgängen anschließen. Beim Anschließen der Kabel die ordnungsgemäße Polarität beachten. Der positive Anschluss des Lautsprechers ist mit einem „+“ markiert.
4. Die Schrauben anziehen, bis der Lautsprecher eng an seinem Platz anliegt, um Klappern zu verhindern. Die Schrauben nicht zu fest anziehen.

## Considerazioni sull'installazione

Prima di iniziare qualsiasi operazione d'installazione, vi consigliamo di seguire queste semplici regole:

1. Assicuratevi di aver letto tutte le istruzioni con cura e di averle capite prima di effettuare qualsiasi tentativo d'installazione neiconfronti dell'unità.
2. Per motivi di sicurezza, scollegate il cavo negativo dalla batteria prima di dare l'avvio all'installazione.
3. Per facilitare il montaggio, vi suggeriamo di far scorrere tutti i fili prima di montare la vostra unità nella sua ubicazione.
4. Usate connettori di alta qualità per garantire un'installazione che dà affidamento e per ridurre al minimo la perdita di segnali o di potenza.
5. State attenti prima di trapanare! Cercate di non trapanare e di non incidere i serbatoi della benzina; le condutture del carburante, dei freni, del sistema idraulico e a depressione; nonché i fili elettrici quando state lavorando su qualsiasi veicolo.
6. Non fate mai scorrere i fili sotto il veicolo. Avrete la protezione migliore facendo scorrere i fili all'interno del veicolo.
7. Evitate di far scorrere i fili sopra o attraverso delle estremità affilate. Usate guarnizioni di tenuta in gomma o in plastica per proteggere qualsiasi filo che passi attraverso del metallo, soprattutto il parafiamma.

## Montaggio

1. Decidete dove montare gli altoparlanti. Assicuratevi che sia un'area abbastanza grande per poter montare l'altoparlante a livello e abbastanza profonda per poterlo collocare comodamente. Se lo montate all'interno di uno sportello, controllate tutte le funzioni (finestre, serrature, ecc.), una alla volta, per assicurarvi che non ci siano ostruzioni.
2. Fate riferimento alla tabella delle specifiche per stabilire il diametro corretto del foro che dovrete praticare per il modello del vostro altoparlante.
3. Passare i cavi del diffusore tramite l'apertura e collegarli ai terminali. Verificare che la polarità sia corretta quando si collegano i cavi. Il terminale positivo del diffusore è identificato dal „+“.
4. Per evitare rumore dovuto a vibrazioni serrare le viti finché il diffusore non sia saldamente in posizione. Non serrare le viti in modo eccessivo.

---

**Rockford Corporation offers a limited warranty on Rockford Fosgate products on the following terms:**

## **Length of Warranty**

POWER Amplifiers – 2 Years  
PUNCH Speakers – 1 Year  
PUNCH“V2” Speakers – 2 Years  
All other products – 1 Year  
Any Factory Refurbished Product – 90 days (receipt required)

## **What is Covered**

This warranty applies only to Rockford Fosgate products sold to consumers by Authorized Rockford Fosgate Dealers in the United States of America or its possessions. Product purchased by consumers from an Authorized Rockford Fosgate Dealer in another country are covered only by that country's Distributor and not by Rockford Corporation.

## **Who is Covered**

This warranty covers only the original purchaser of Rockford product purchased from an Authorized Rockford Fosgate Dealer in the United States. In order to receive service, the purchaser must provide Rockford with a copy of the receipt stating the customer name, dealer name, product purchased, and date of purchase.

Products found to be defective during the warranty period will be repaired or replaced (with a product deemed to be equivalent) at Rockford's discretion.

## **What is Not Covered**

1. Damage caused by accident, abuse, improper operation, water, theft, or shipping.
2. Any cost or expense related to the removal or reinstallation of product.
3. Service performed by anyone other than Rockford or an Authorized Rockford Fosgate Service Center.
4. Any product which has had the serial number defaced, altered, or removed.
5. Subsequent damage to other components.
6. Any product purchased outside the U.S.
7. Any product not purchased from an Authorized Rockford Fosgate Dealer.

## **Limit on Implied Warranties**

Any implied warranties including warranties of fitness for use and merchantability are limited in duration to the period of the express warranty set forth above. Some states do not allow limitations on the length of an implied warranty, so this limitation may not apply. No person is authorized to assume for Rockford Fosgate any other liability in connection with the sale of the product.

## **How to Obtain Service**

Contact the Authorized Rockford Fosgate Dealer you purchased this product from. If you need further assistance, call 1-800-669-9899 for Rockford Customer Service. You must obtain an RA# (Return Authorization number) to return any product to Rockford Fosgate. You are responsible for shipment of product to Rockford.

## **EU Warranty**

This product meets the current EU warranty requirements, see your Authorized dealer for details.